




ATT Trek Tablet HD model 9020A Front Digitizer Replacement

Teardown to replace Digitizer


Written By: Keith Lee

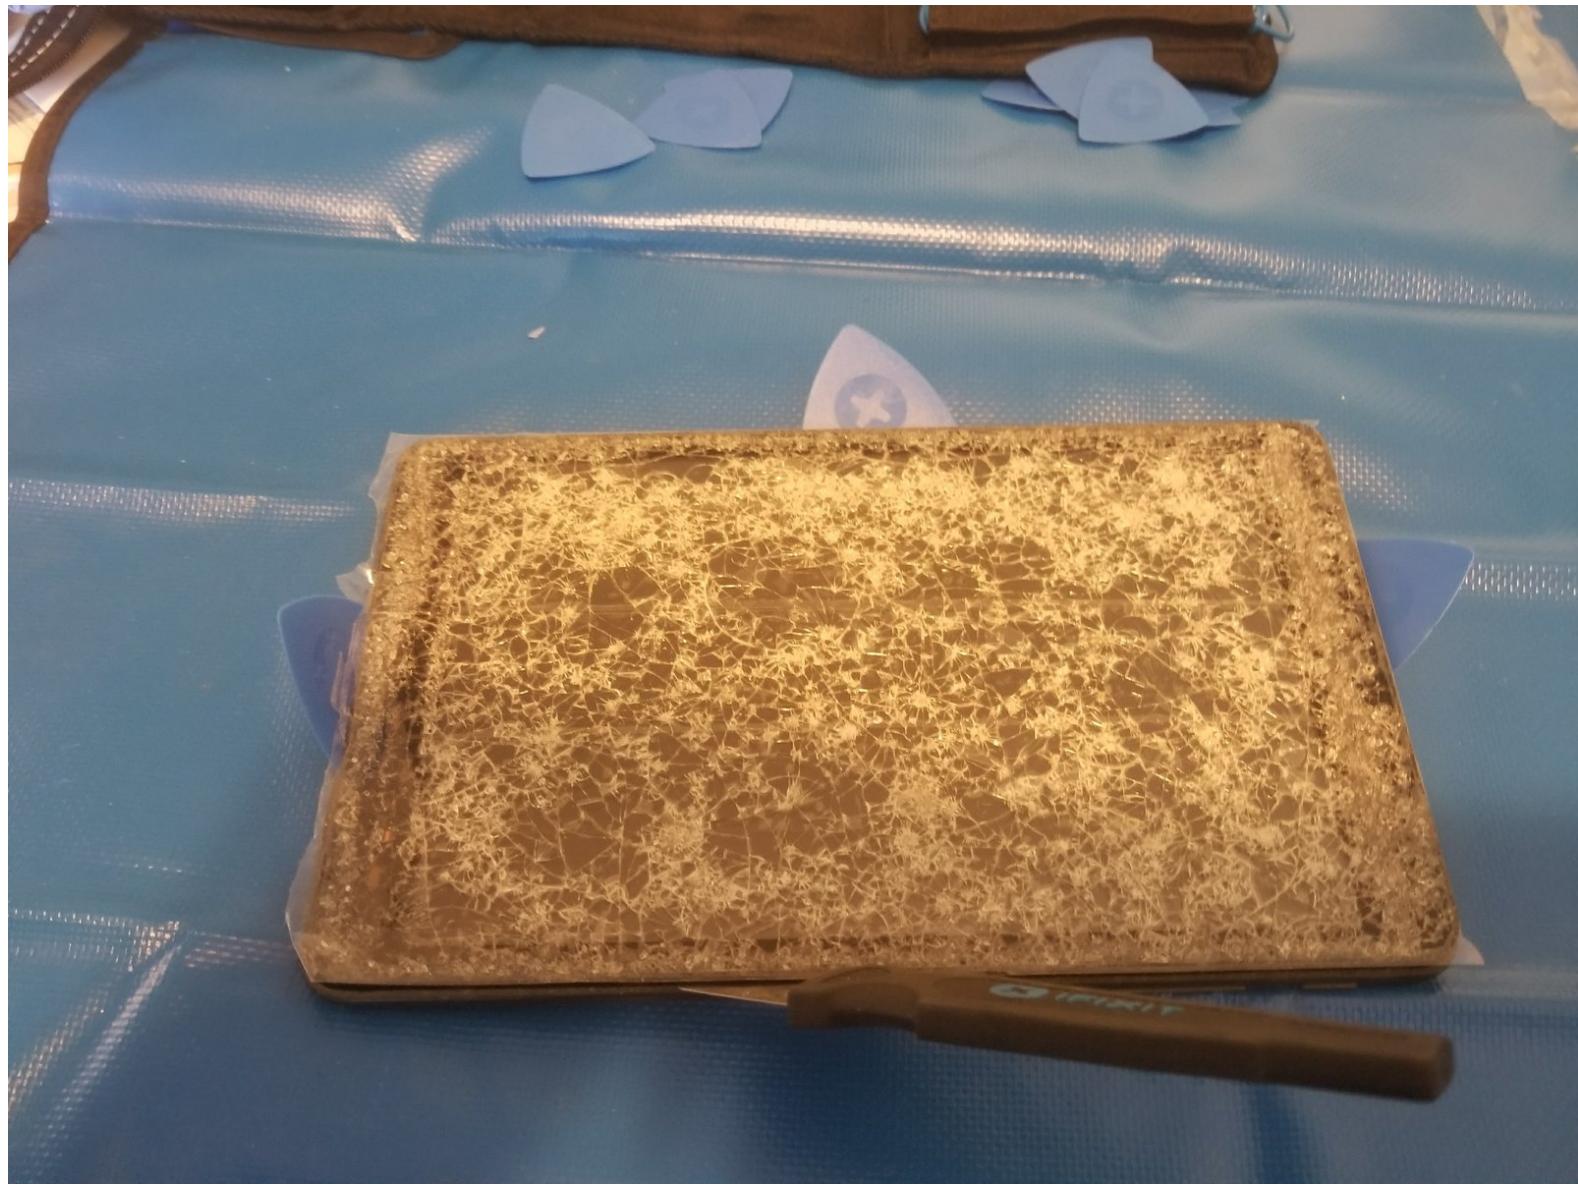

 **TOOLS:**


- [iFixit Opening Picks set of 6 \(1\)](#)
- [Jimmy \(1\)](#)
- [Heavy-Duty Spudger \(1\)](#)

Step 1 — Remove Back Cover

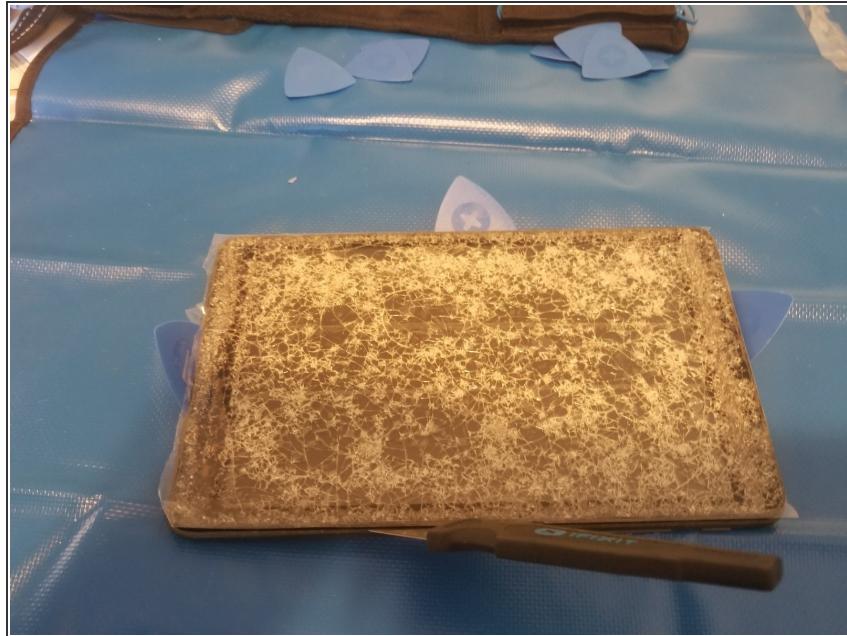

- Use Jimmy to Separate screen from back cover. There is a thin gap. use picks to keep gap open while working around all edges.

Step 2 — Remove Battery

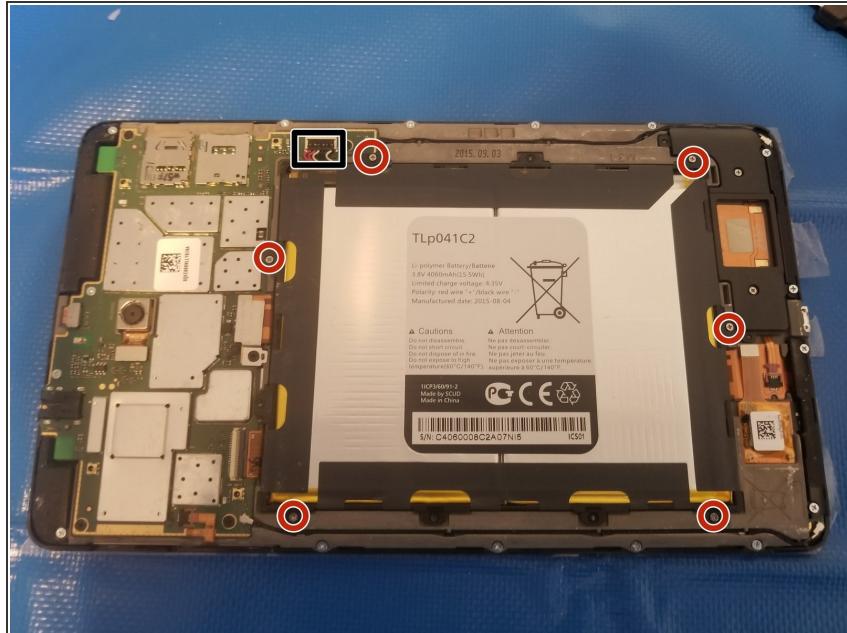

- Disconnect the Battery using the Spudger
- Remove 6 #p000 screws to remove Battery

Step 3 — Removal of Logic Board



- remove screw and carefully remove shield holding down ribbon
- Use Spudger to carefully disconnect ribbon cables
- Disconnect ribbon for Cameras

To reassemble your device, follow these instructions in reverse order.