



AXIOO Pico M1110 PJM RAM Replacement

Replace the RAM.


Written By: Cakra Diaz



 **TOOLS:**

- Phillips #0 Screwdriver (1)

Step 1 — Underside

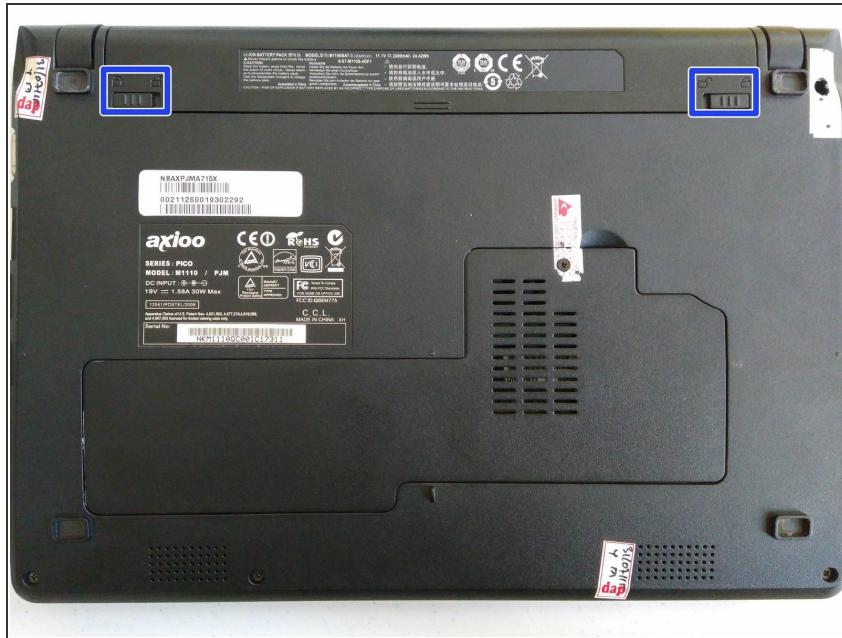

- Identify the battery locker.
 - Set the righthand locker to unlock.
- Pull the battery while setting the lefthand locker to unlock.

Step 2



- Remove the battery.

Step 3 — Compartment



- Remove the following screw:
 - 1 long Philips #0 screw
- Remove the cover.

Step 4



- Identify the clipper.
- ⓘ Slide the clipper's head away from each other until the RAM pops up.
- Remove the RAM.

To reassemble your device, follow these instructions in reverse order.