



AYL SoundFit Motherboard Replacement

This tutorial will detail how to replace the motherboard of the AYL SoundFit.

Written By: john



 **TOOLS:**

- Heavy-Duty Spudger (1)
- Phillips #0 Screwdriver (1)
- Solder (1)
- Soldering Workstation (1)
- 2.5 mm Hex Bit (1)

Step 1 — Motherboard




- Unscrew the four hex screws on the top of the device using a 2.5mm hex screwdriver.

Step 2




- Place a spudger between the black plastic cover and the green case.
- Pry the black cover away from the main casing and remove the cover.

Step 3

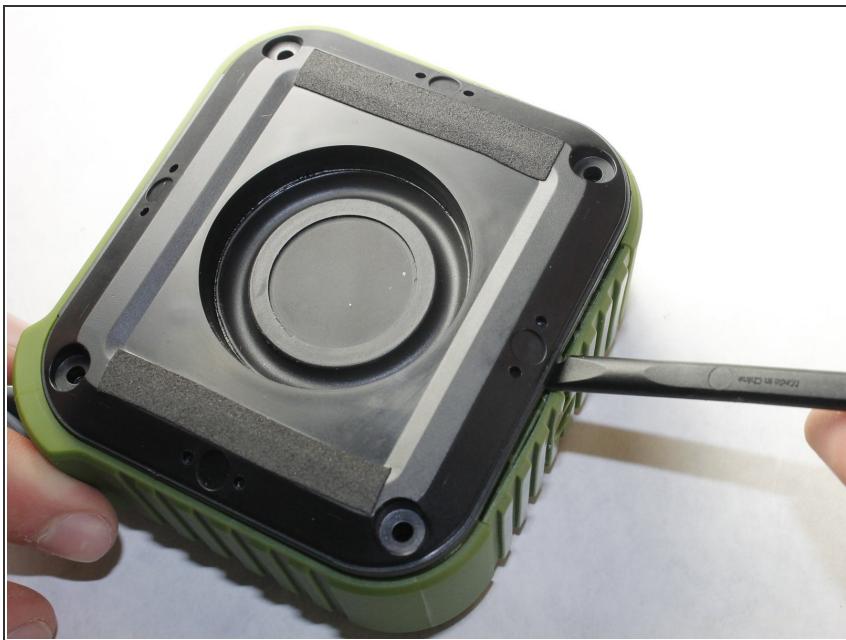

- Place the spudger tool between the black housing, which contains the woofer, and the outer rubber casing.
- Pry the housing away from the body to reveal the motherboard, speaker, and battery.

Step 4

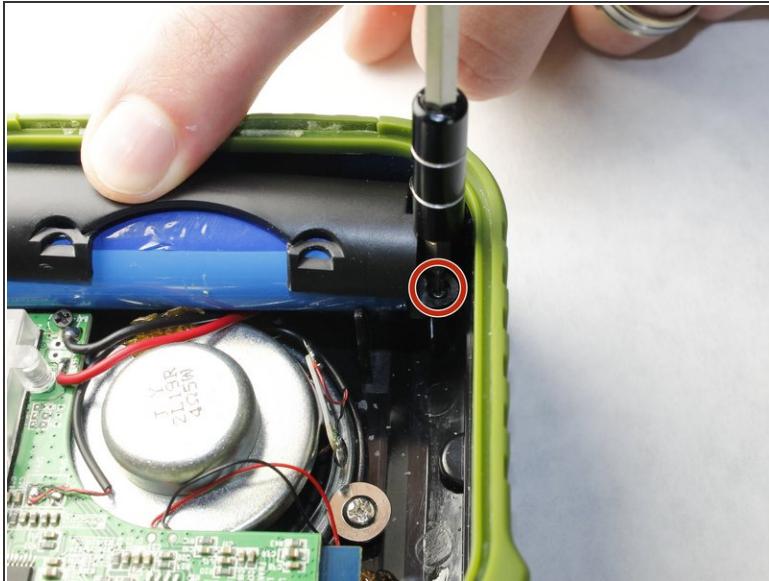

- Remove the two Phillips screws which are holding the battery casing on the housing using a PH00 Phillips screwdriver.
- Remove the battery case to reveal the battery.

Step 5



- Using a soldering iron, heat up and remove the positive and negative battery contacts from the motherboard.

Step 6



- Remove the three Phillips screws which are holding the motherboard to the base using a PH00 Phillips screwdriver.
- The motherboard can now be wiggled free from the base.

To reassemble your device, follow these instructions in reverse order.