



# Abu Garcia Bait-Caster Reel Disassembly

This guide will show you step by step, how to clean the gears of a bait caster. This will allow you to cast at the distance you are needing.

Written By: Grant Mathis



## INTRODUCTION

This guide will show you step by step, how to clean the gears of a bait caster. This will allow you to cast at the distance you are needing.

### TOOLS:

- 10mm Wrench (1)
- Small Phillips Head Screwdriver (1)
- Flathead 3/32" or 2.5 mm Screwdriver (1)

### PARTS:

- Abu Garcia Reel Oil (1)
- Abu Garcia Reel Grease (1)

## Step 1 — Step 1



- Use a small Phillips or flathead screwdriver to remove the screw highlighted in red.
- After screw is removed, remove the black cover highlighted in yellow.

## Step 2 — Step 2



- Remove 10MM nut, highlighted in orange, on handle with a 10MM nut driver.
- Once nut is removed, then simple pull handle off.

## Step 3 — Step 3



- Remove the side plate that is highlighted in blue.
- **Be careful not loose inner yoke springs, as they may fall out.**

## Step 4 — Step 4



- Using a small Phillips or flathead screwdriver, remove the small screws that are highlighted in red.
- Once screws are removed, simply pull off side place in order to access the inner gears.

## Step 5 — Step 5



- After small screws are removed, twist each knob until they come off being careful not to lose these pieces.

## Step 6 — Step 6



- Once cover is released from reel, apply the Abu Garcia lube to the gears highlighted in orange.

To reassemble your device, follow these instructions in reverse order.