



Accessing Nokia 3100b Vibrating Unit

Written By: Sterling Fuentes



INTRODUCTION

The Nokia 3100b may not vibrate anymore when the phone is set in Vibrate mode. This guide will show you how to access the vibrating unit.

TOOLS:

- [T6 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)

Step 1 — Battery



- Make sure your phone is turned off.

Step 2



- Press the button on the back of the phone and slide the back panel off.
- Remove the battery by pulling it from the phone.

Step 3 — SIM Card



- Gently pull back the small metal frame holding the SIM card into place, and lift open the frame.

Step 4



- Retrieve your SIM card.

Step 5 — Vibrating Unit



- Separate the front cover from the base of the phone.
- Set the front cover, as indicated, aside.

Step 6



- Remove the screws indicated using a T6 Torx screwdriver.
- Remove them in the order of the colors of the rainbow. (Red, Orange, Yellow, Green, Blue, Purple).

Step 7




- Separate the screen assembly from the base of the phone.
- Set the screen assembly, as indicated, aside.

Step 8




- The vibrating unit can now be accessed. Note its location in the phone.

Step 9

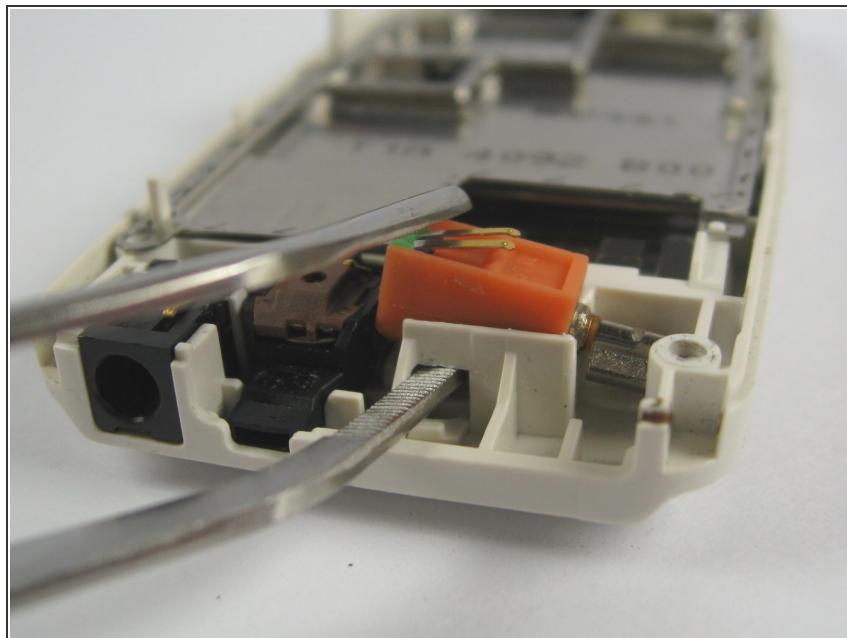

- The vibrating unit is held in place by friction. Access the bottom of the unit and push upward to release it from the base.

Step 10

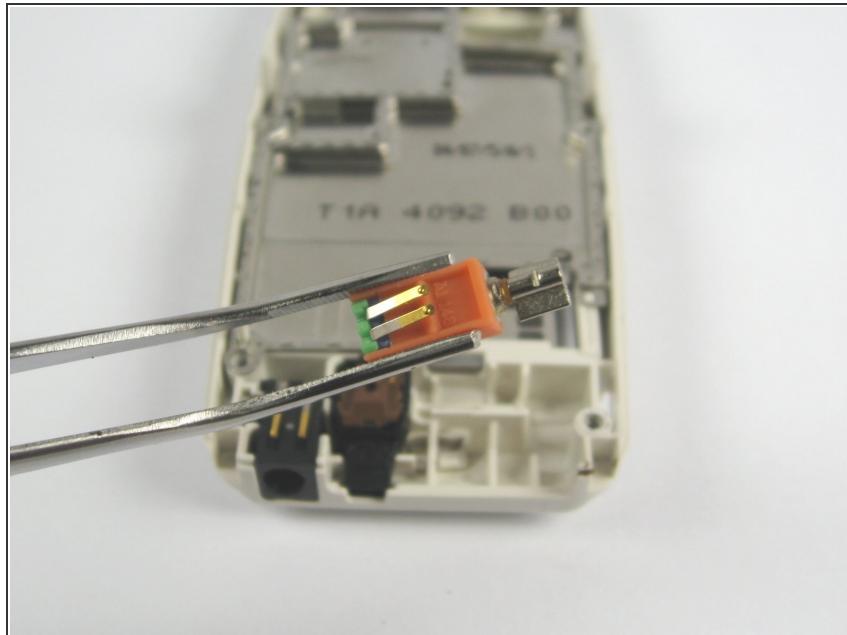

- The vibrating unit is now removed.

To reassemble your device, follow these instructions in reverse order.