




Acer AL1916 Outer Case Replacement

This guide will show you how to remove the outer casing.

Written By: Keith

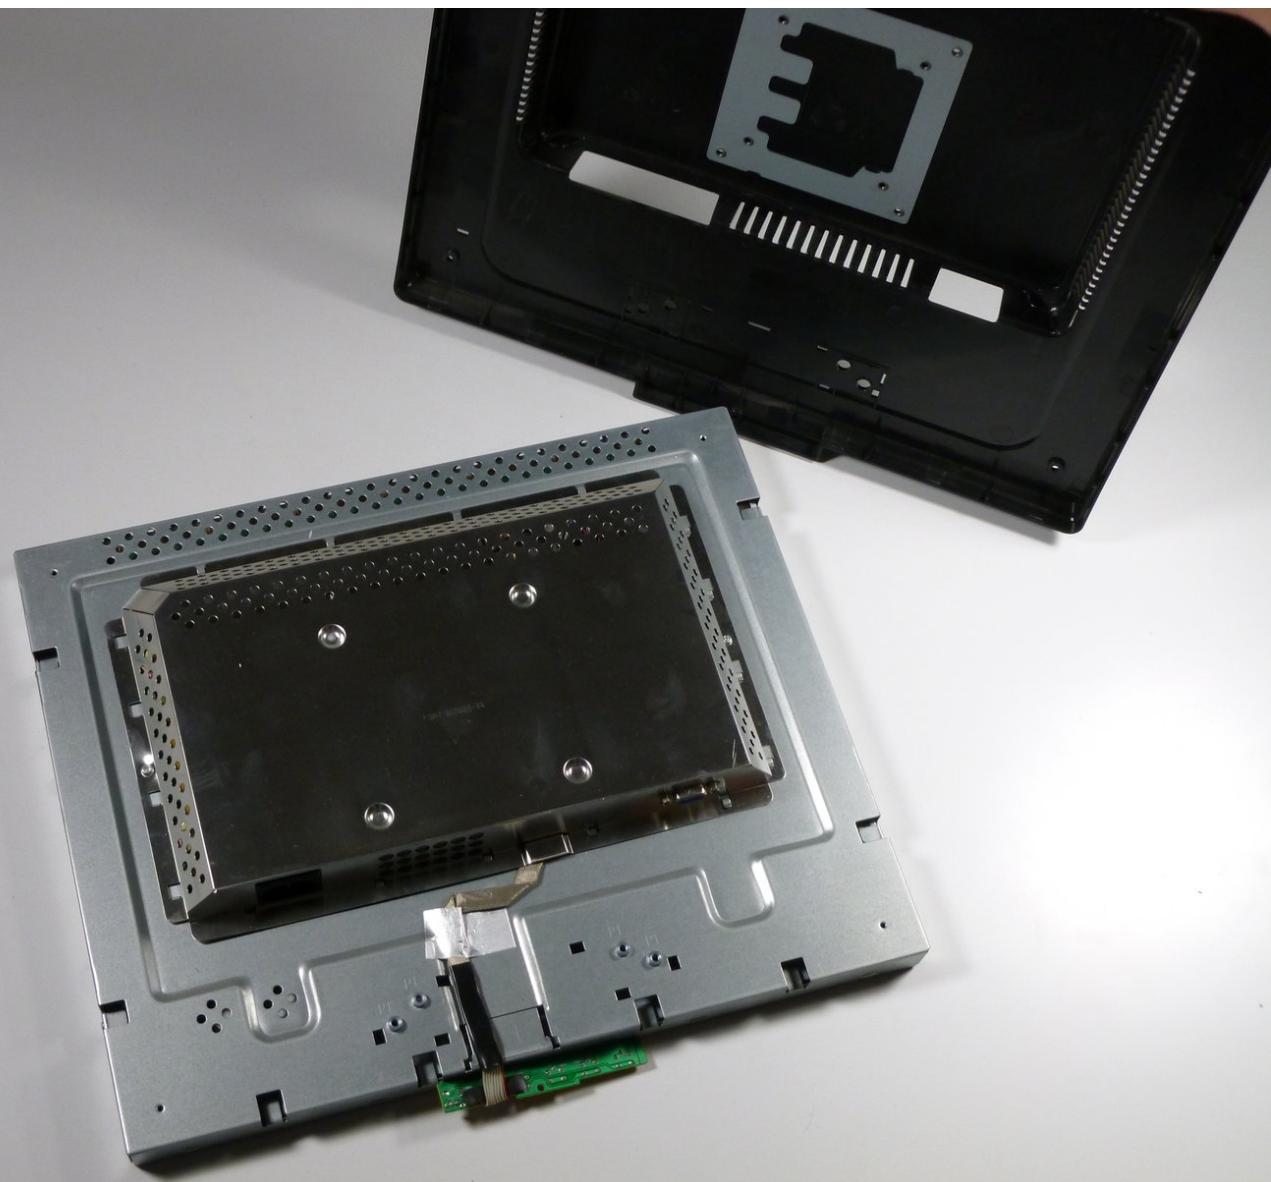

INTRODUCTION

The outer casing protects the internals of the monitor.

TOOLS:

- Phillips #2 Screwdriver (1)
- iFixit Opening Tools (1)

PARTS:

- outer casing (1)

Step 1 — Stand



(i) Lay the monitor on a flat surface so that the back is facing up.

Step 2




- Grab the hinge cover with both hands on either side of the stand.
- Squeeze inwards with your thumbs and fingers and lift up to remove the hinge cover.

Step 3



- Remove the four 12.1 mm Phillips #2 screws that hold the stand to the monitor.
- ⚠ Support the monitor while removing the screws to prevent the monitor from falling.
- Lift up to detach the stand.

Step 4 — Outer Case

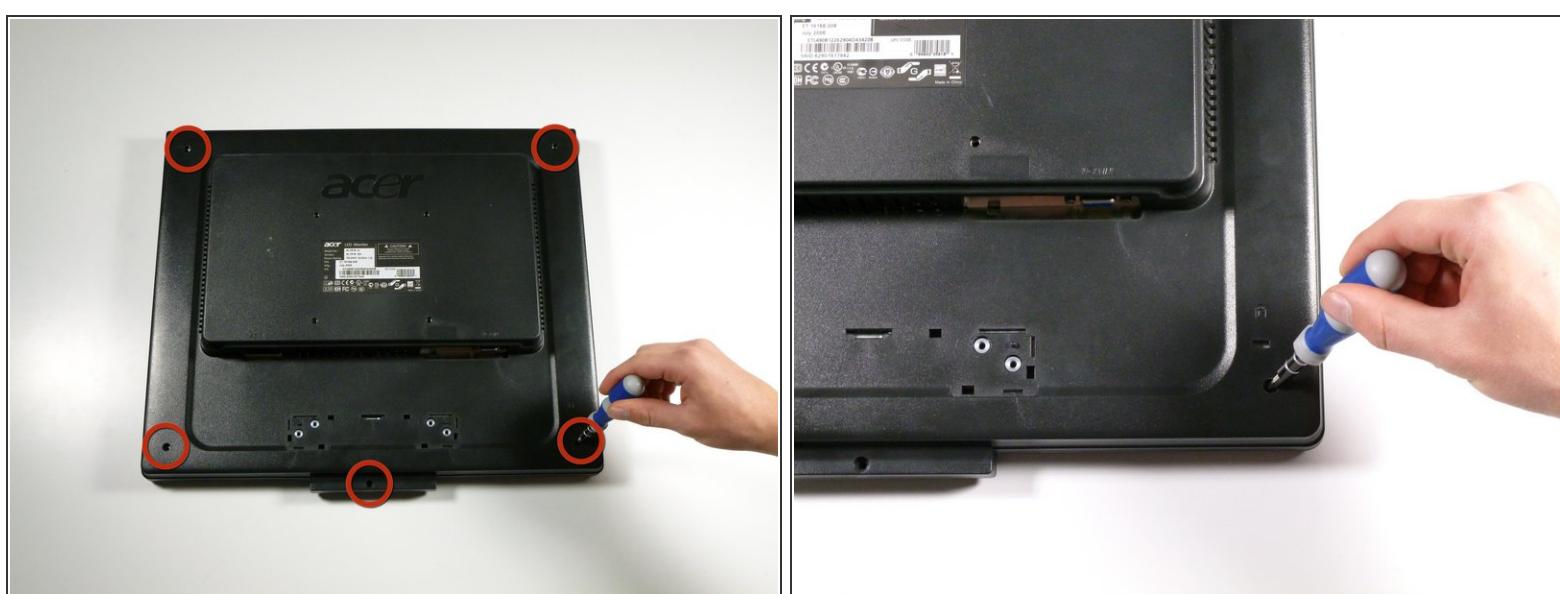

- Remove the five 9.5 mm Phillips #2 screws located around the perimeter of the monitor.

This document was generated on 2019-09-20 09:19:52 AM (MST).


Step 5



- Starting at the corner of the monitor, wedge the small plastic opening tool between the back cover and the display bezel.
- Tilt the plastic opening tool up to separate the back cover from the display bezel.
- Continue around the perimeter of the monitor until the display bezel comes off.

(i) A reasonable amount of force is necessary to detach the back cover from the display bezel.

Step 6

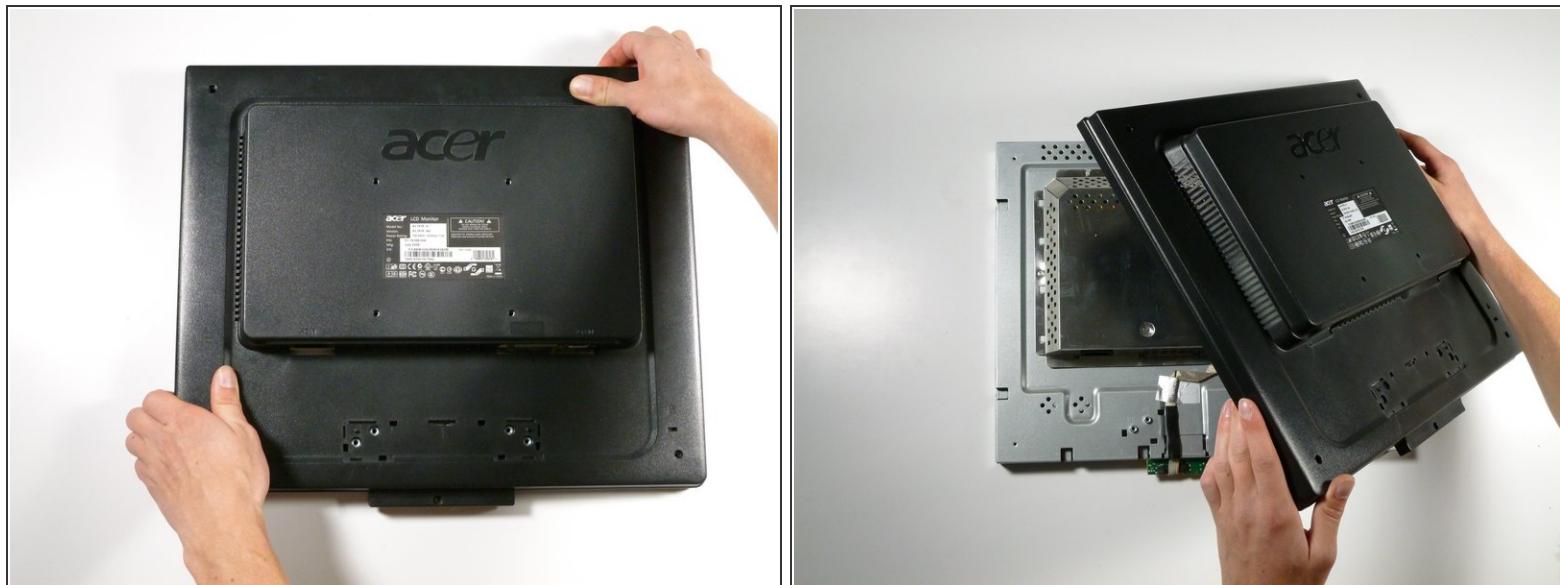

(i) Reposition the monitor so that the back is facing up.

- Grab the corners of the monitor and jiggle them upwards to detach the back cover from the inside of the monitor.
- Lift the back cover up.

To reassemble your device, follow these instructions in reverse order.