



# Acer Aspire 3000 Battery Replacement

This guide describes how to remove and replace the dying battery on your device to restore power.

Written By: roro6730



## INTRODUCTION

This step-by-step process demonstrates how to replace a dead or dying battery on your Acer Aspire 3000. It is important to follow the steps carefully in order to prevent damage to the battery ports upon removal. Damage to the ports may cause a bad connection with a replacement battery. Use caution to always remove the battery whenever you are repairing parts of your device.

## Step 1 — Battery



- Begin with the device face down.
- Orient the laptop so that the battery is on the side opposite of you and the headphone ports are facing towards you.

## Step 2



- Slide the button found below the battery to the left into the unlocked position.

*(i)* You will know the battery is unlocked if the tab is pushed to the side where the symbol is unlocked.

## Step 3



- Locate the battery and the tab to the right of it.
- Pull the tab to the right while simultaneously pushing the battery away from you.

**⚠** Make sure you push the battery only when tab is held in the right position in order to avoid damage to the device.

To reassemble your device, follow these instructions in reverse order.