



Acer Aspire 4520-5464 Battery Replacement

This guide will show you how to replace your old battery with a new one.

Written By: Byeloth Hermanson



INTRODUCTION

This guide will show you how to replace your old battery with a new one.

The battery is the main source of power for your computer. Without a battery, the computer cannot be powered on unless it is plugged into a wall socket.

Replacing the battery is an easy task with little risk of damaging critical components inside your computer.

Step 1 — Battery



- Shut down the computer and disconnect all external devices and cables.
- Flip the computer over.

Step 2



- Ensure that the battery compartment lock tab is in the unlocked position.
- Slide the sliding black tab away from the battery compartment.
- The inside edge of the battery should be released, causing it to slightly pop out of the compartment.

This document was generated on 2019-11-06 03:58:39 PM (MST).

Step 3



- Grasp the inside edge of the battery and lift to fully detach the battery from the computer.

To reassemble your device, follow these instructions in reverse order using a new battery.