



Acer Aspire 4520-5464 CD/DVD Drive Replacement

How to replace the CD/DVD Drive of an Acer Aspire 4520-5464 laptop.

Written By: Ethan Woltersdorf



INTRODUCTION

This guide will show you how to replace the CD/DVD Drive of an Acer Aspire 4520-5464 laptop.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Battery



- Shut down the computer and disconnect all external devices and cables.
- Flip the computer over.

Step 2



- Ensure that the battery compartment lock tab is in the unlocked position.
- Slide the sliding black tab away from the battery compartment.
- The inside edge of the battery should be released, causing it to slightly pop out of the compartment.

This document was generated on 2019-09-27 09:41:10 AM (MST).

Step 3




- Grasp the inside edge of the battery and lift to fully detach the battery from the computer.

Step 4 — CD/DVD Drive



- Remove 7 of the 2mm Phillips #1 screw from the largest panel on back of the laptop
- Lift up the panel from the indent located on the right side.

Step 5

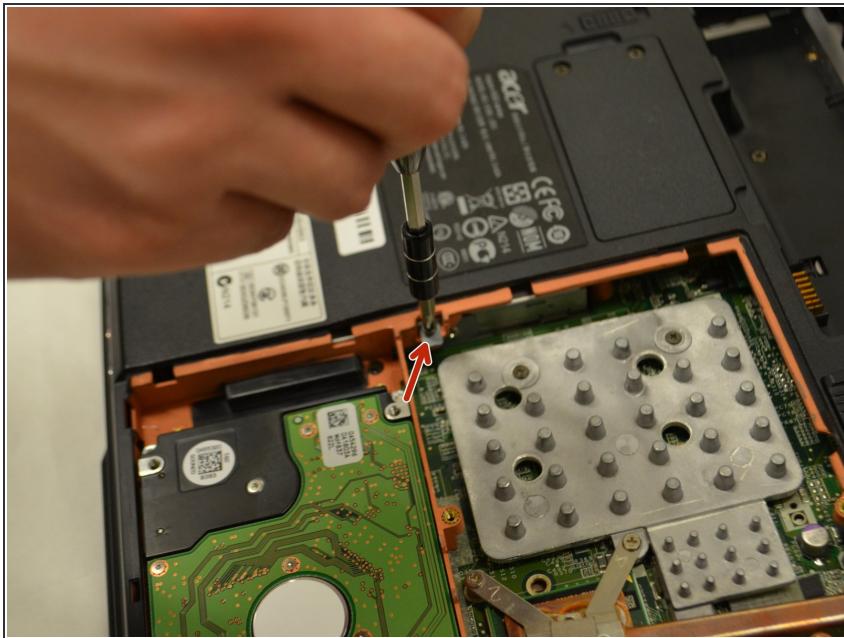

- Remove the .5mm Phillips #1 black screw located on the left side of the panel opening.

Step 6



- Using the screwdriver, push the CD drive out of the laptop through the panel exposure.

To reassemble your device, follow these instructions in reverse order.