



# Acer Aspire 4520-5464 Hard Drive Replacement

Use this guide to replace the Hard Drive in your Acer Aspire 4520-5464

Written By: Hunter Gilcrease



## INTRODUCTION

This guide demonstrates how to replace or upgrade the Hard Drive of an Acer Aspire 4520-5464 laptop.

### TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

## Step 1 — Battery



- Shut down the computer and disconnect all external devices and cables.
- Flip the computer over.

## Step 2



- Ensure that the battery compartment lock tab is in the unlocked position.
- Slide the sliding black tab away from the battery compartment.
- The inside edge of the battery should be released, causing it to slightly pop out of the compartment.

This document was generated on 2019-10-17 07:20:48 AM (MST).

## Step 3




- Grasp the inside edge of the battery and lift to fully detach the battery from the computer.

## Step 4 — Hard Drive




- Remove the seven 2mm Phillips #1 screws from the largest panel on the back of the laptop
- Lift up the panel from the indent located on the right side.

## Step 5

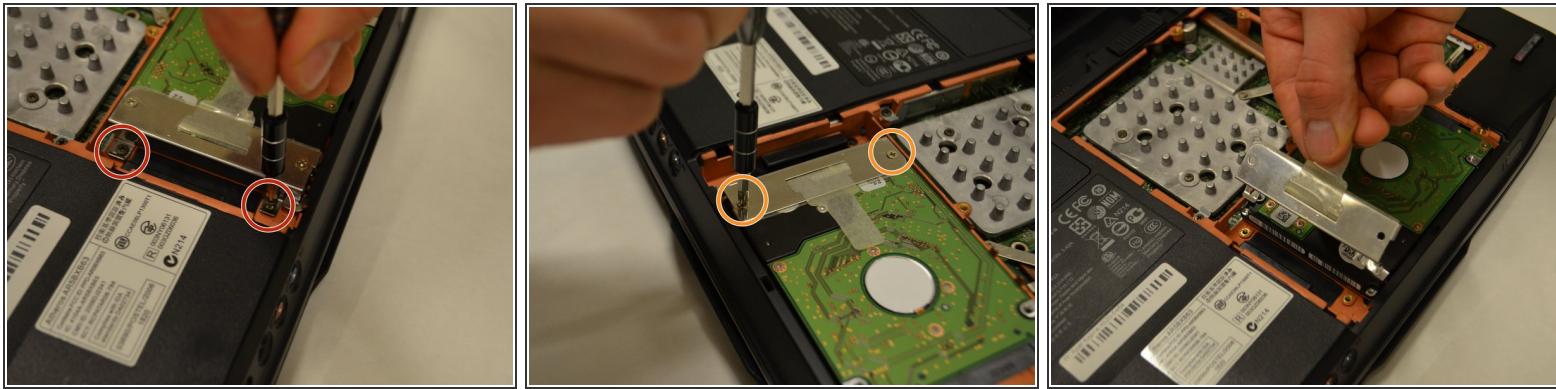

- Remove the two 0.5mm Phillips #1 black screws left of the Hard Drive.
- Remove the two 0.5mm Phillips #1 silver on top of the Hard Drive.
- Lift up and remove the hard drive bracket by the plastic tab on top of the hard drive.

## Step 6

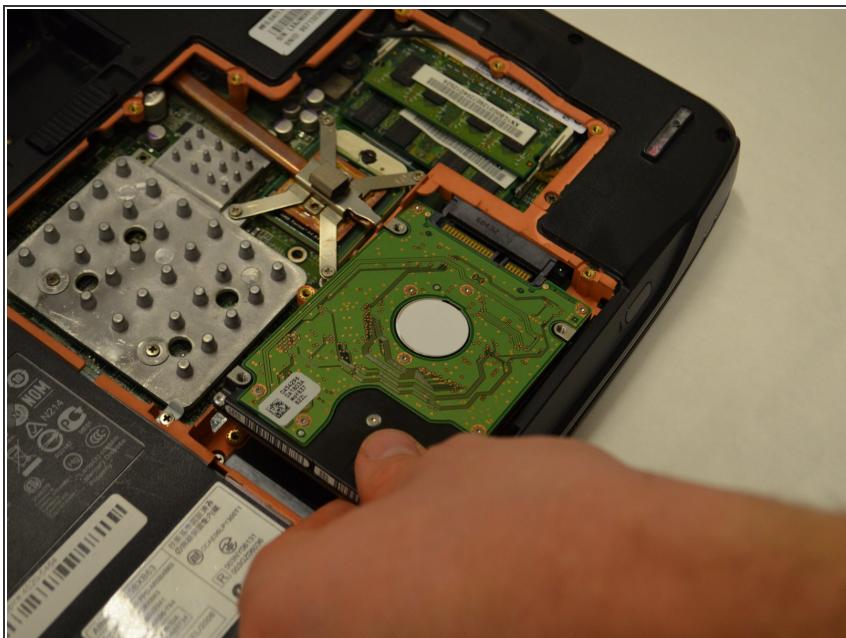

- Remove the hard drive from the device.

To reassemble your device, follow these instructions in reverse order.