




Acer Aspire 4520-5464 RAM Replacement

How to replace or upgrade the RAM of an Acer Aspire 4520-5464 laptop.

Written By: Ethan Woltersdorf

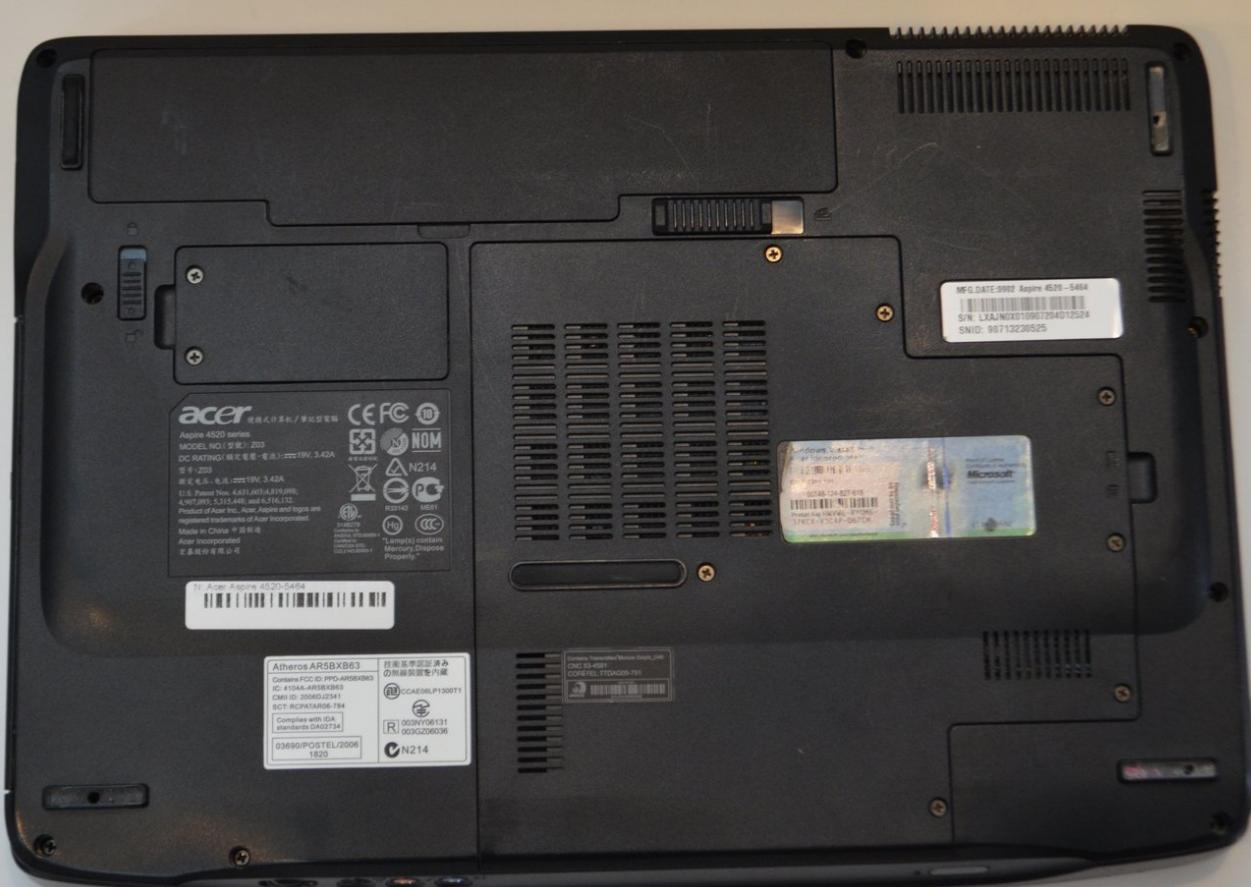

INTRODUCTION

This guide will show you how to replace your old RAM..

The RAM is the main source of speed for your computer.

Replacing the RAM is an easy task with little risk of damaging critical components inside your computer.

TOOLS:


- Phillips #1 Screwdriver (1)

Step 1 — Battery



- Shut down the computer and disconnect all external devices and cables.
- Flip the computer over.

Step 2

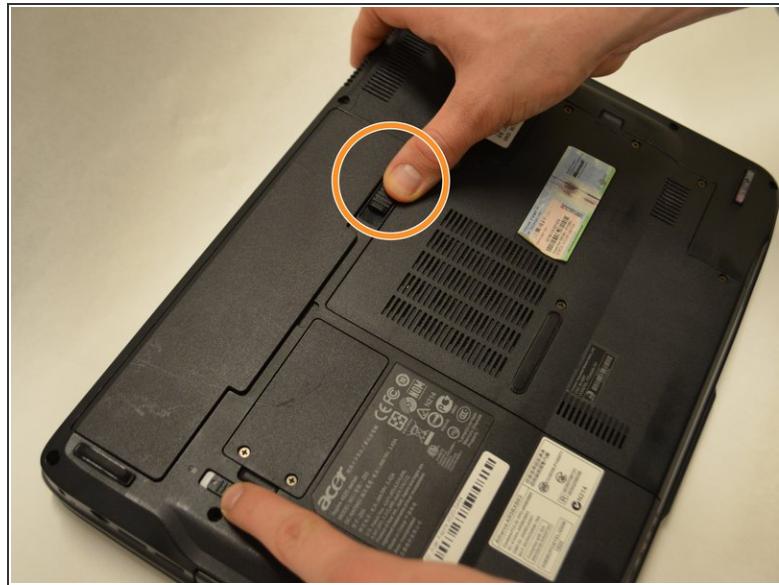

- Ensure that the battery compartment lock tab is in the unlocked position.
- Slide the sliding black tab away from the battery compartment.
- The inside edge of the battery should be released, causing it to slightly pop out of the compartment.


This document was generated on 2019-10-26 08:35:49 AM (MST).

Step 3




- Grasp the inside edge of the battery and lift to fully detach the battery from the computer.

Step 4 — RAM

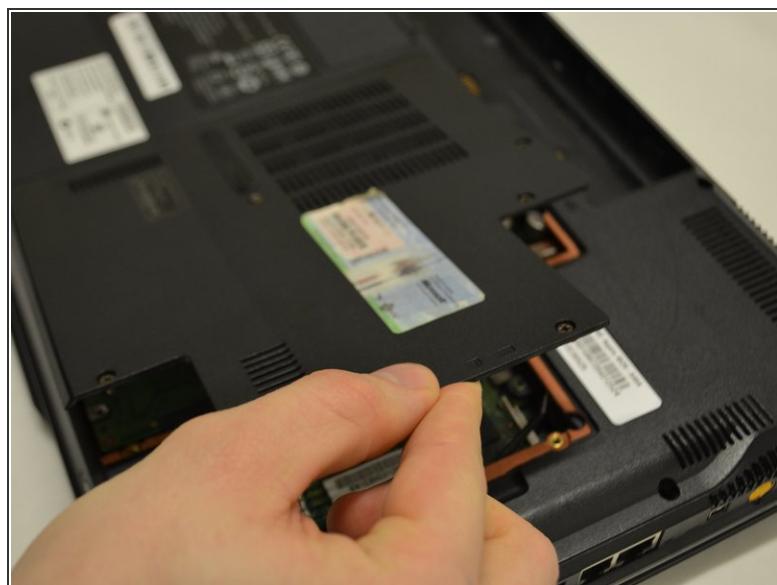

- Remove the seven 2mm Phillips #1 screws from the largest panel on back of the laptop.
- Lift up the panel from the indent located on the right side.

Step 5

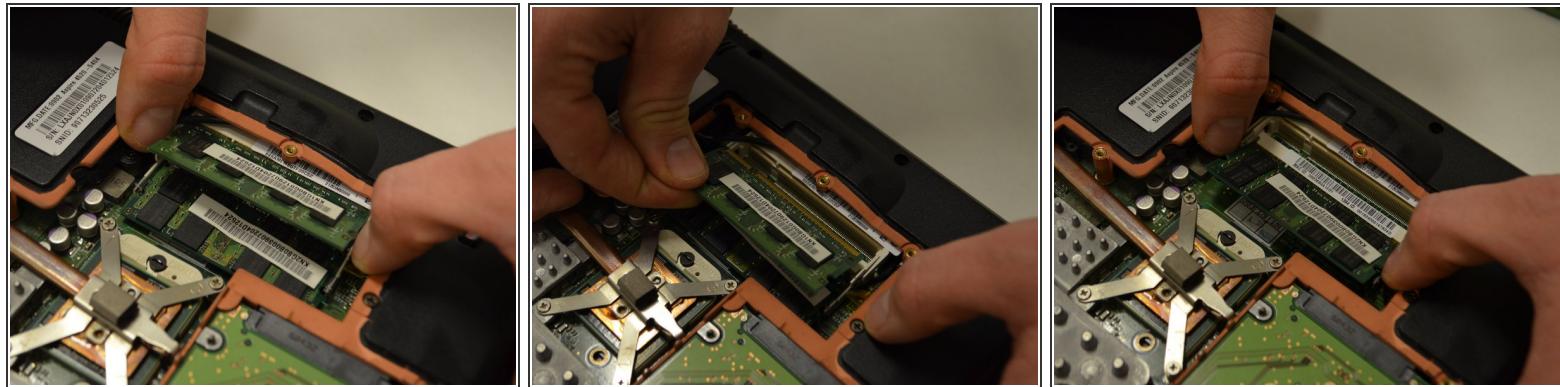

- Push the white tabs located on either side of the top stick of RAM outward.
- Remove the RAM from the slot on the motherboard.

① Repeat for the bottom stick of RAM.

To reassemble your device, follow these instructions in reverse order.