




# Acer Aspire 4741G-332G32Mn DVD Drive Replacement

You will be able to take out the old DVD drive, and replace it with a new one in your Acer Aspire 4741G-332G32Mn.

Written By: kristen

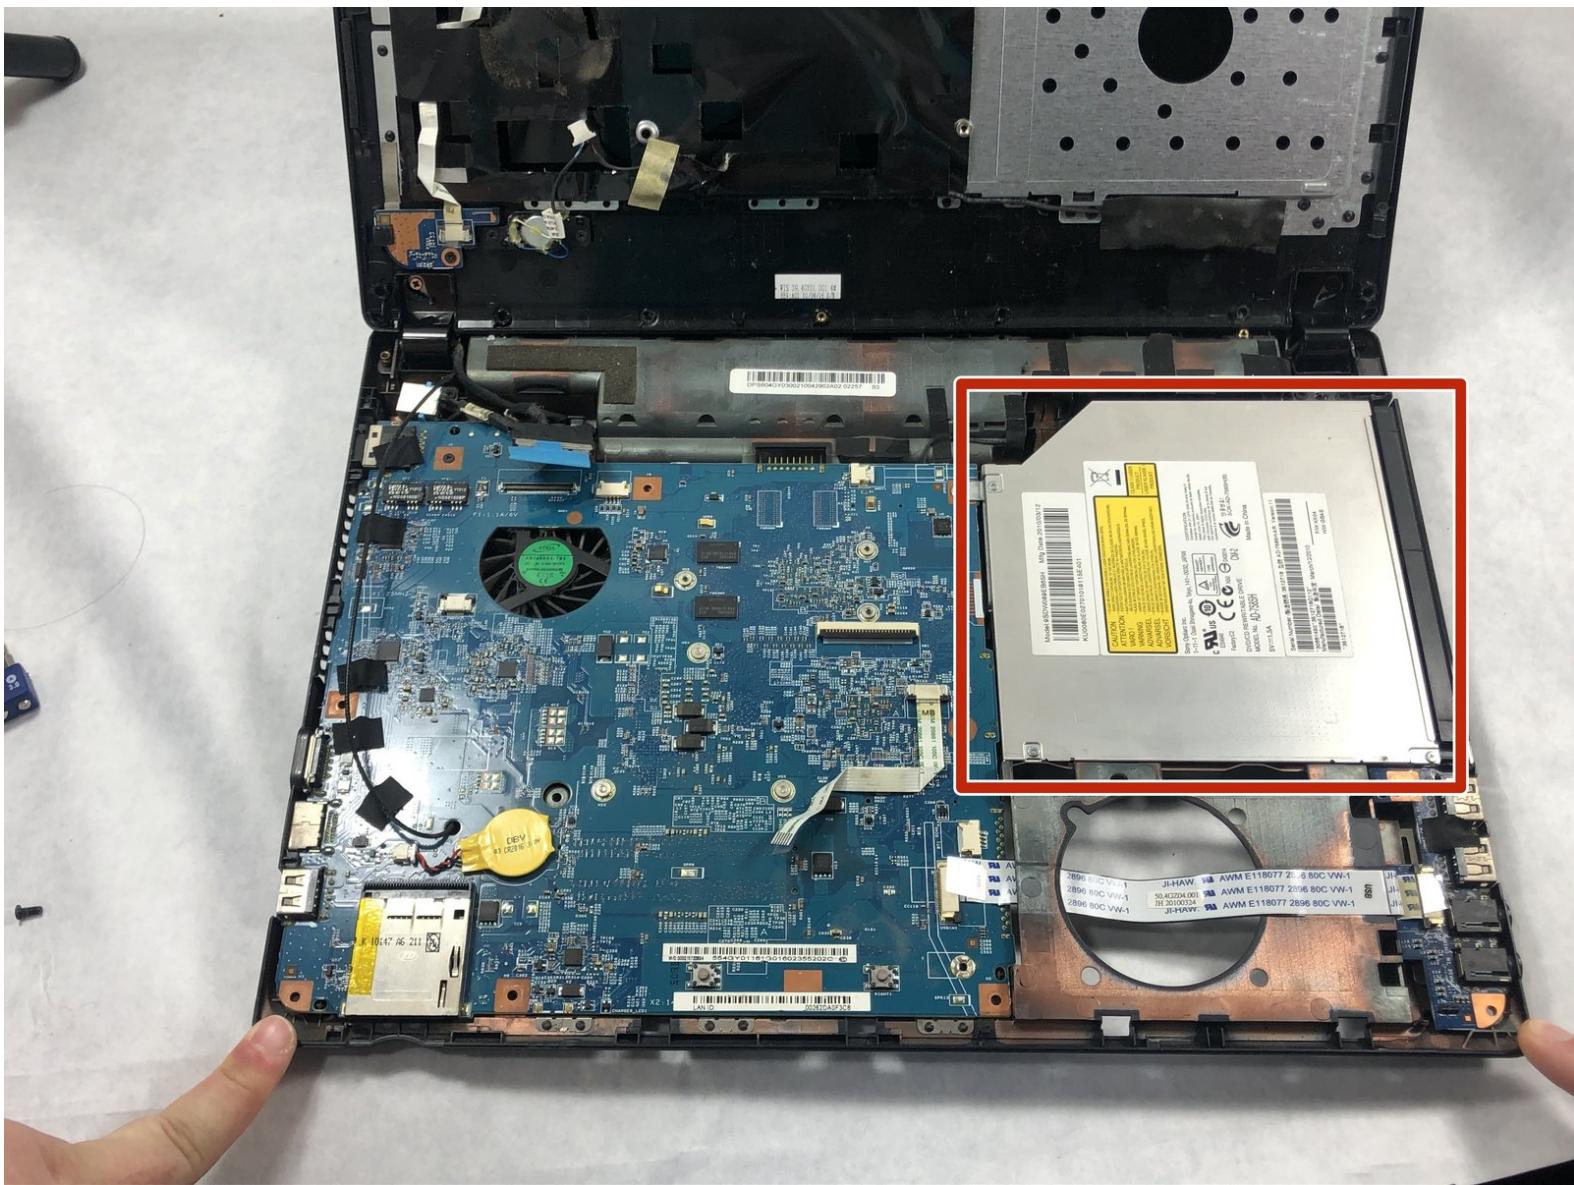

This document was generated on 2019-12-17 05:49:44 AM (MST).

 **TOOLS:**

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

## Step 1 — Battery



- Flip the lock latch to unlock battery.

## Step 2




- Slide the middle latch and remove the battery.

## Step 3 — Backplate



- Pry off the keyboard using the opening tool.
- Take out the 2 screws that is connected to the motherboard using the Phillips #0 screwdriver.

## Step 4

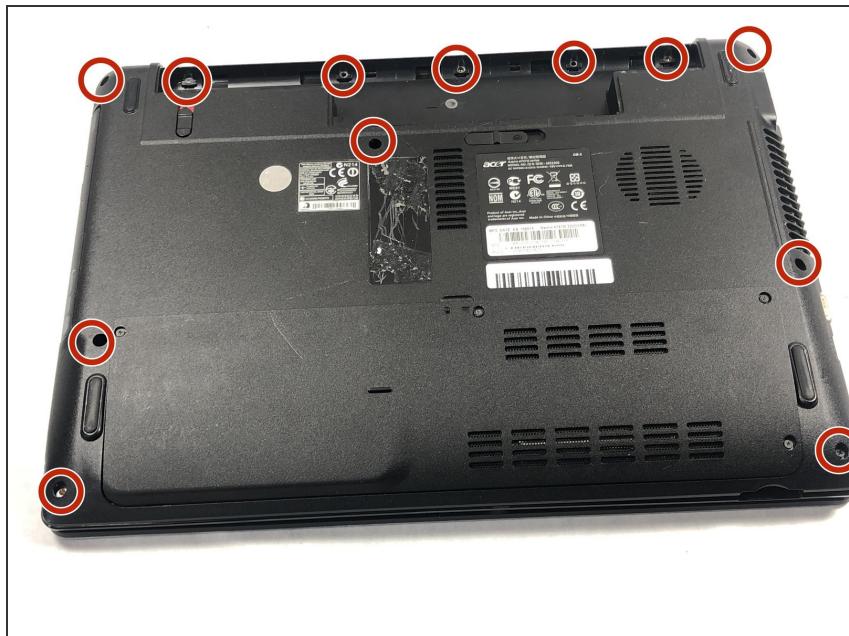

- Remove all 12 screws from backplate using the Phillips #0 screwdriver.

## Step 5



- Using the prying tool to remove the bottom of the laptop.

## Step 6 — DVD Drive



- Remove the screw that is connecting the DVD drive to the motherboard and slide DVD drive out.

To reassemble your device, follow these instructions in reverse order.