


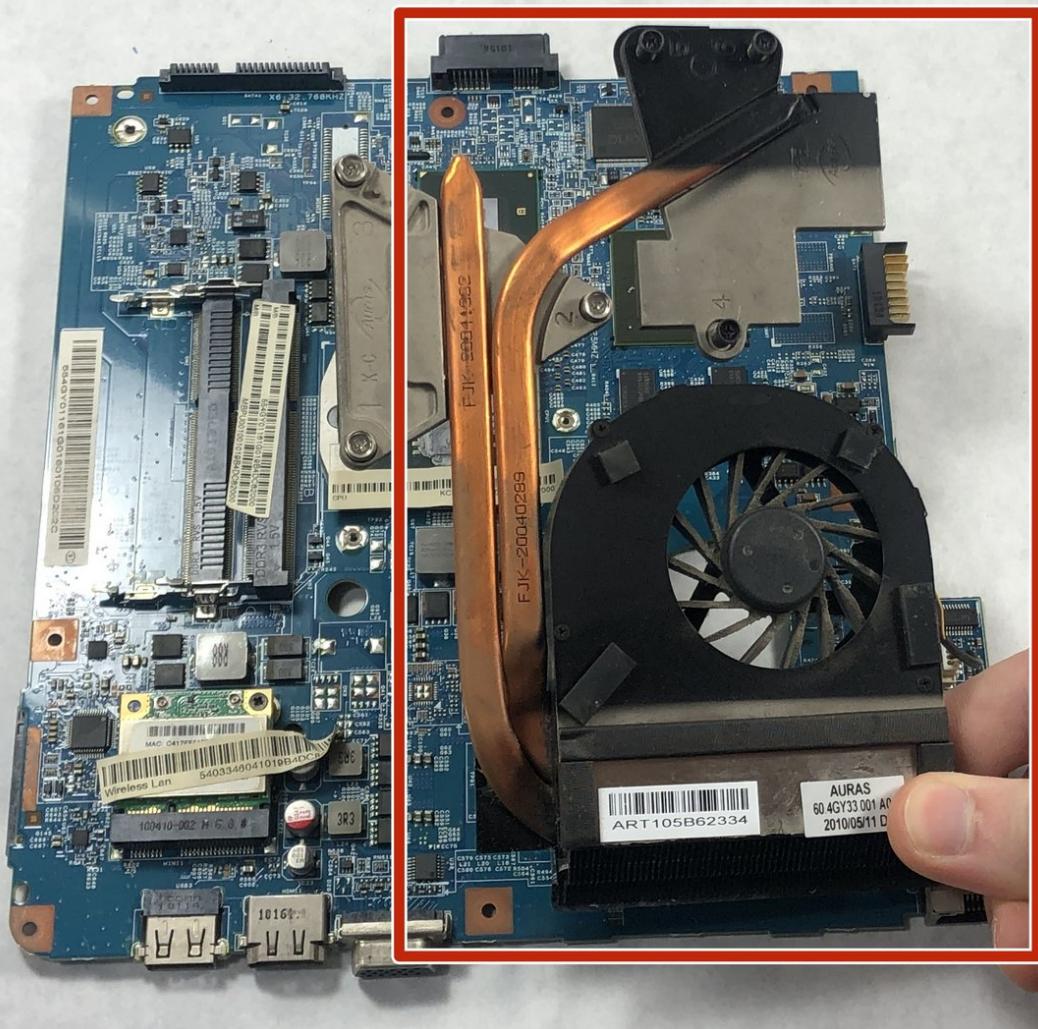

Acer Aspire 4741G-332G32Mn Fan Replacement

This guide will help remove the fan and stop the overheating in your Acer Aspire 4741G-332G32Mn.

Written By: Tu Nguyen



 **TOOLS:**

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery



- Flip the lock latch to unlock battery.

Step 2




- Slide the middle latch and remove the battery.

Step 3 — Backplate



- Pry off the keyboard using the opening tool.
- Take out the 2 screws that is connected to the motherboard using the Phillips #0 screwdriver.

Step 4

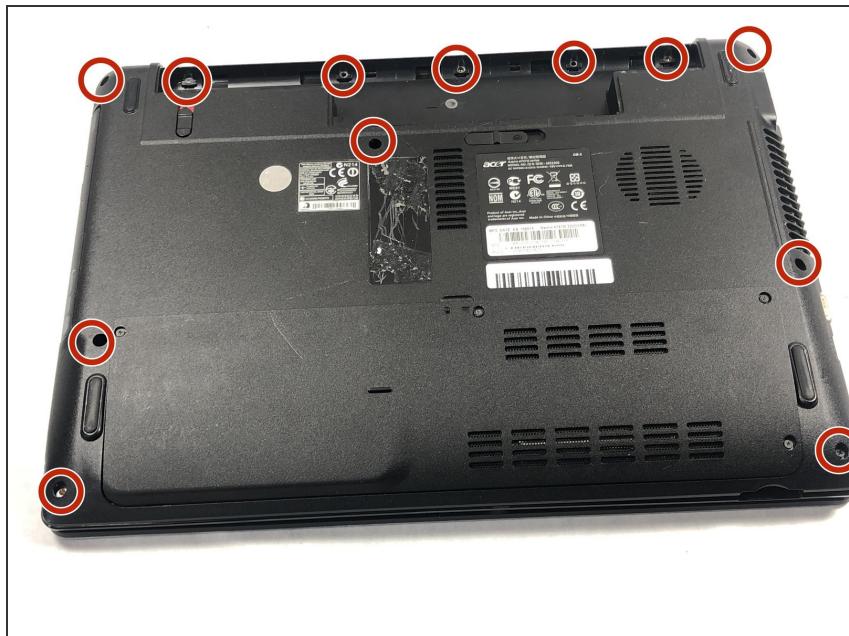



- Remove all 12 screws from backplate using the Phillips #0 screwdriver.

Step 5




- Using the prying tool to remove the bottom of the laptop.

Step 6 — Fan

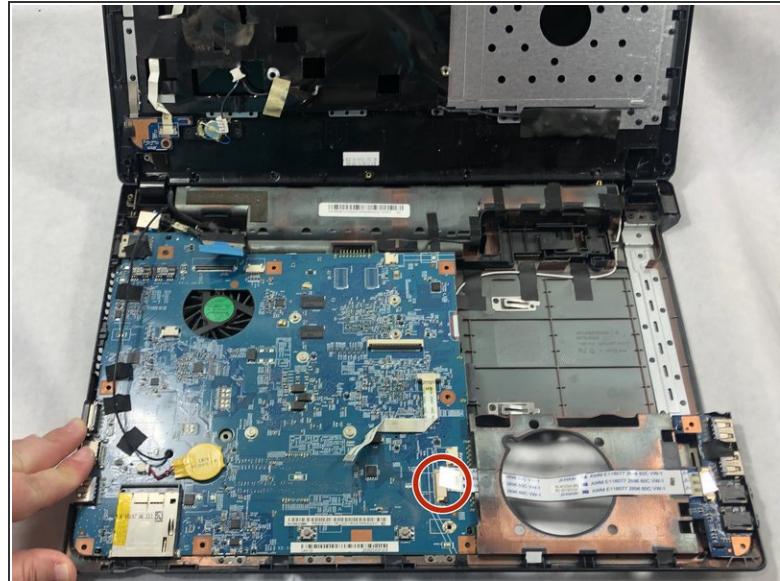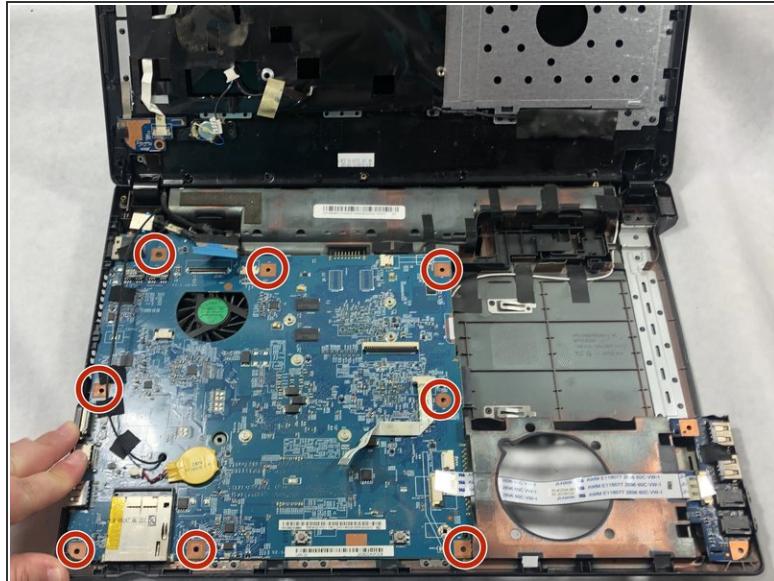

- Using a Phillips #0 screwdriver, remove the eight screws that hold the motherboard to the frame of the laptop.
- Disconnect the USB port from the motherboard.

Step 7

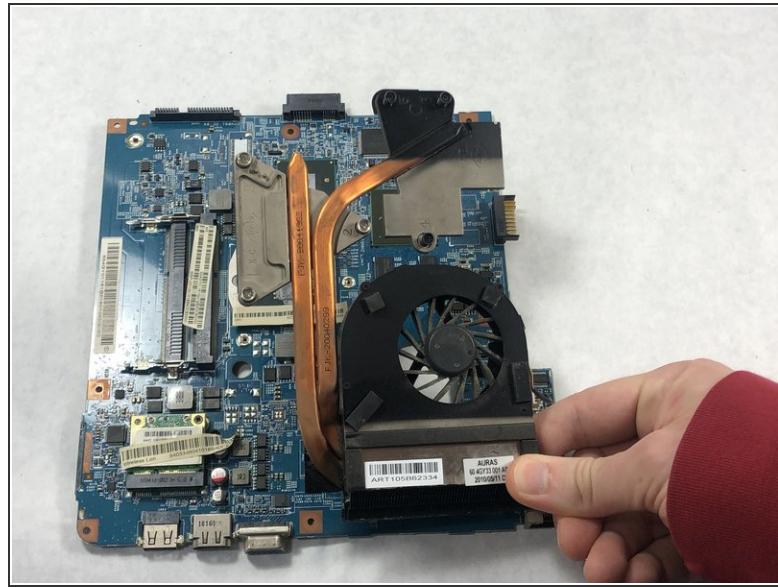

- Unscrew the 6 screws that hold the fan to the motherboard using the same screwdriver.

To reassemble your device, follow these instructions in reverse order.