




Acer Aspire 4743-6481 Ram Card Replacement

This guide provides detailed instructions on how to remove and replace the RAM card of your Acer Aspire 4743-6481.

Written By: AL-Moatasem

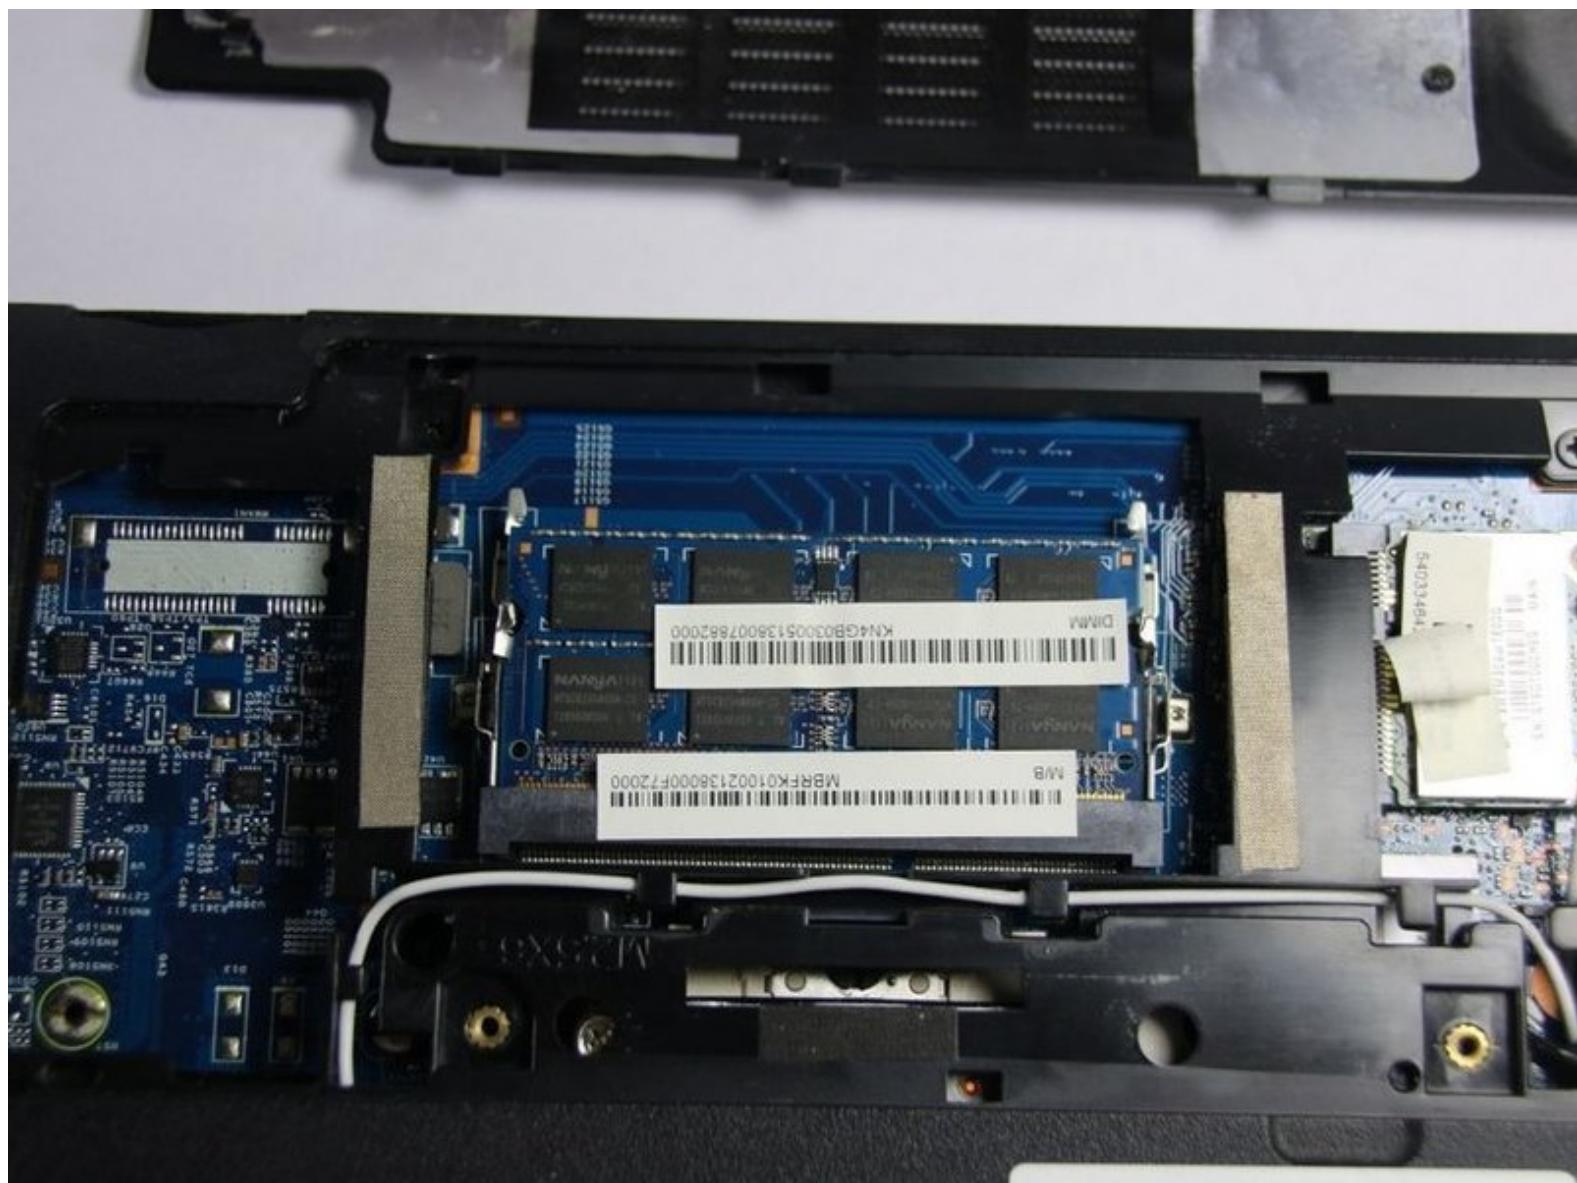

INTRODUCTION

This guide shows you how to replace the RAM card.

TOOLS:

- **Tweezers (1)**
- **Phillips #00 Screwdriver (1)**

Step 1 — Battery

- Turn over the laptop to view the underside.



Step 2

- Use tweezers (or a similar tool) to slide the orange push pin. To release the battery, push it to the left.



Step 3

- You can lift the battery up and out now.



Step 4 — RAM Card

- Remove three 7.0 mm screws with a Phillips head screwdriver from the back panel to gain access to the RAM cards.




Step 5



- Place the device with the battery side facing up, as shown on the picture.
- After removing the back panel, you will see the RAM cards located to the right.

Step 6

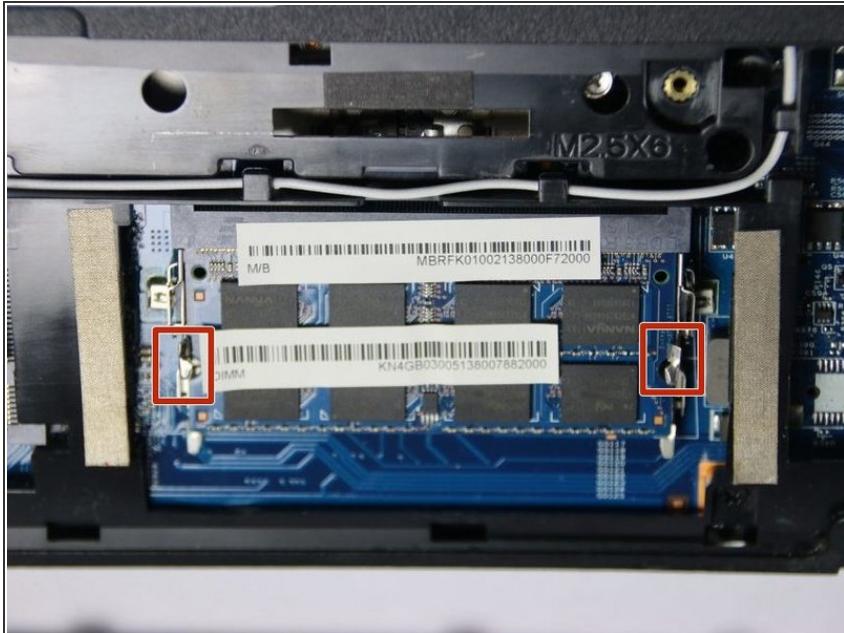

- You should notice a silver tab on each side of the RAM card. Push each tab away at the same time to detach the card.

Step 7



- If done successfully, the RAM should pop out and you can lift it out with no effort.

To reassemble your device, follow these instructions in reverse order.