




Acer Aspire 5100 Fan Replacement

Replace the fan in your Acer Aspire 5100.

Written By: Walter Galan

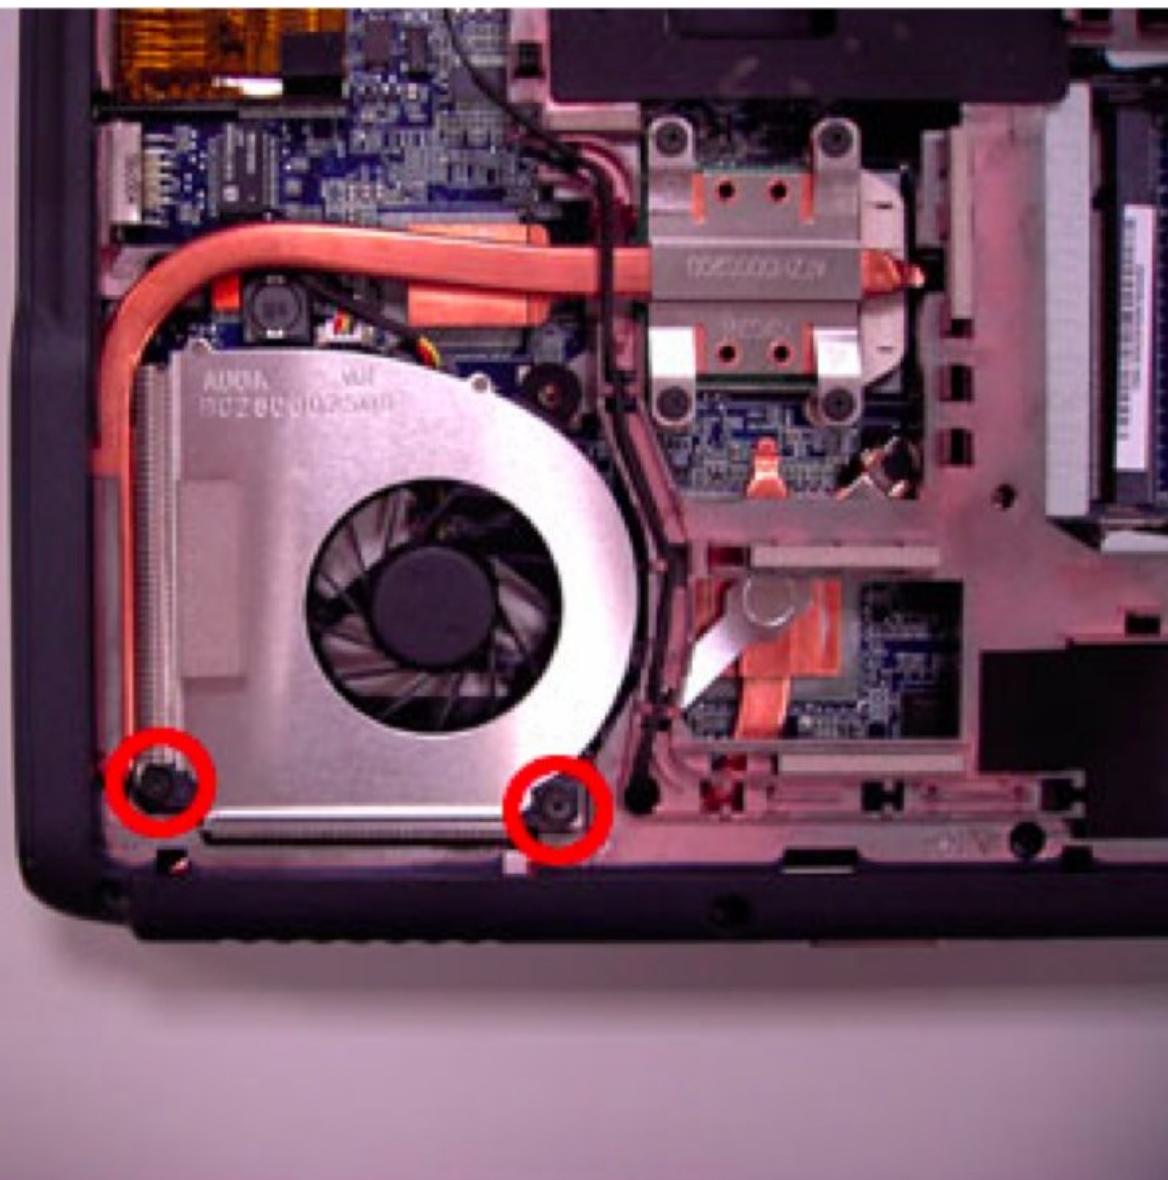

INTRODUCTION

This guide has been updated! Read the new guide [here](#).

Replace the fan in your Acer Aspire 5100.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Fan



- Now on to the Thermal Module(fan and Heat-Sink)
- 8. Release the two screws securing the system fan

Step 2



- 9. Disconnect the system fan cable carefully the remove the system fan.
- Now you have the fan.

To reassemble your device, follow these instructions in reverse order.