




Acer Aspire 5100 Heat Sink Replacement

Replace the heat sink in your Acer Aspire 5100.

Written By: Walter Galan

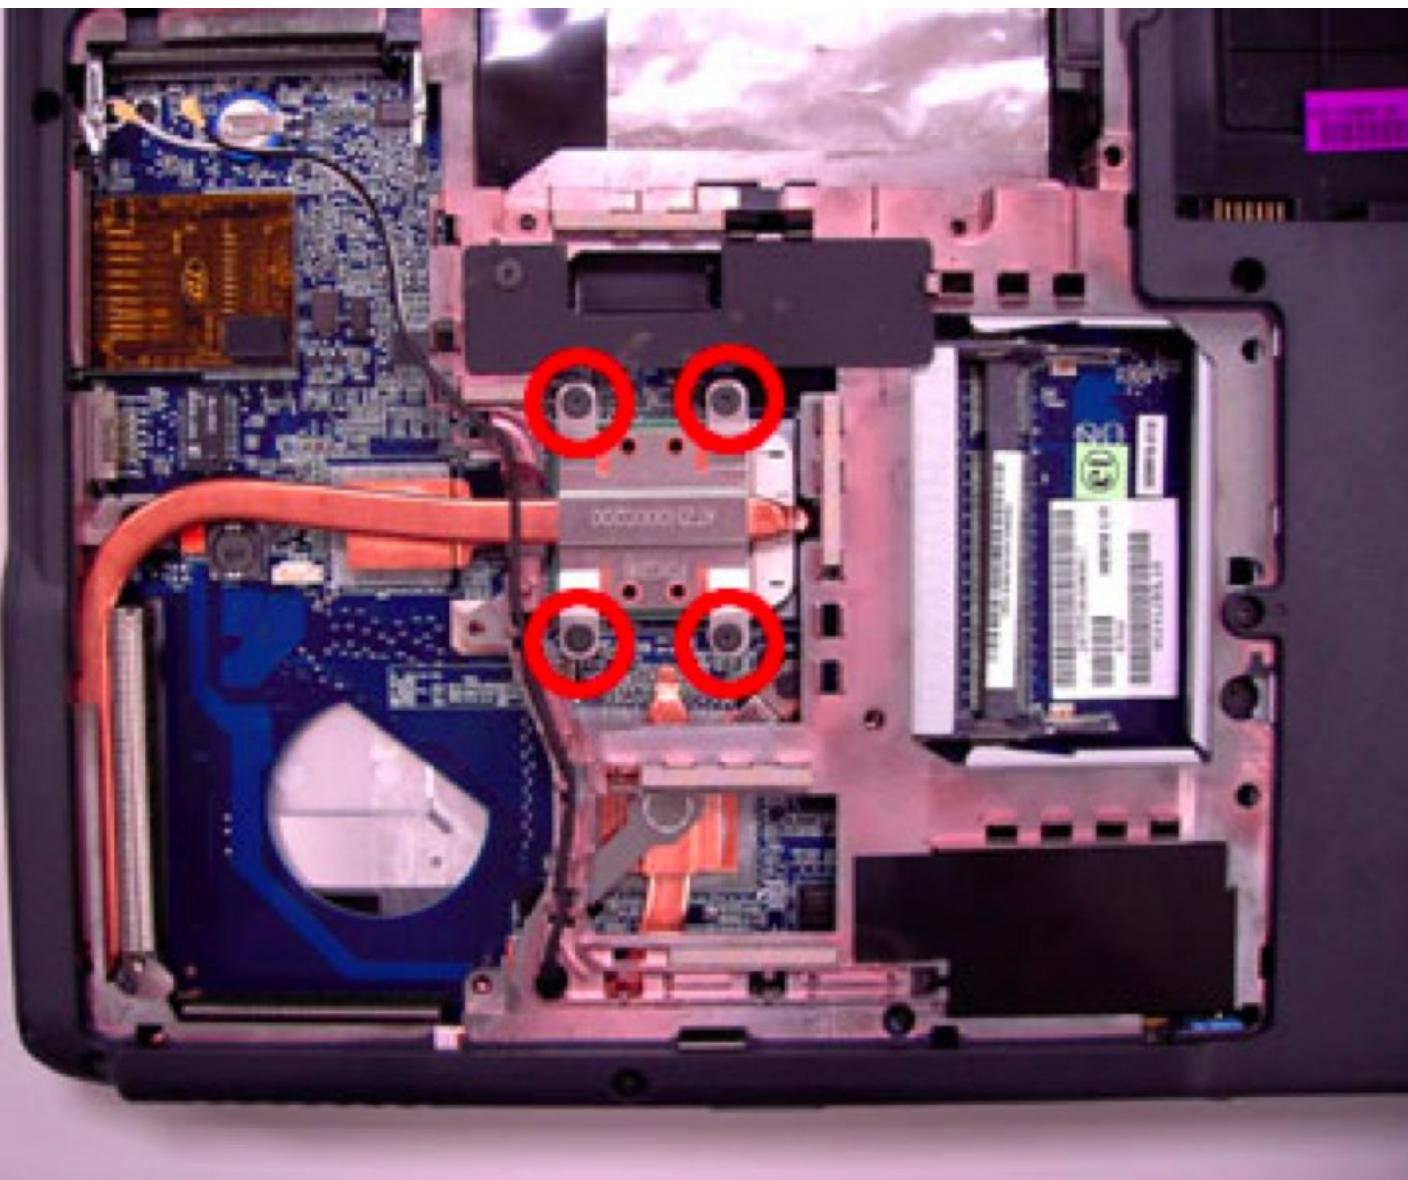

INTRODUCTION

This guide has been updated! Read the new guide [here](#).

Replace the heat sink in your Acer Aspire 5100.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)

Step 1 — Heat Sink



- 10. Release the four screws securing the CPU heatsink.

Step 2



- 11. Remove the CPU heat-sink as the arrow indicates.
- You now have the Heat-Sink.

To reassemble your device, follow these instructions in reverse order.