




# Acer Aspire 5100 RAM Replacement

Replace the RAM in your Acer Aspire 5100.

Written By: Jason Edgar

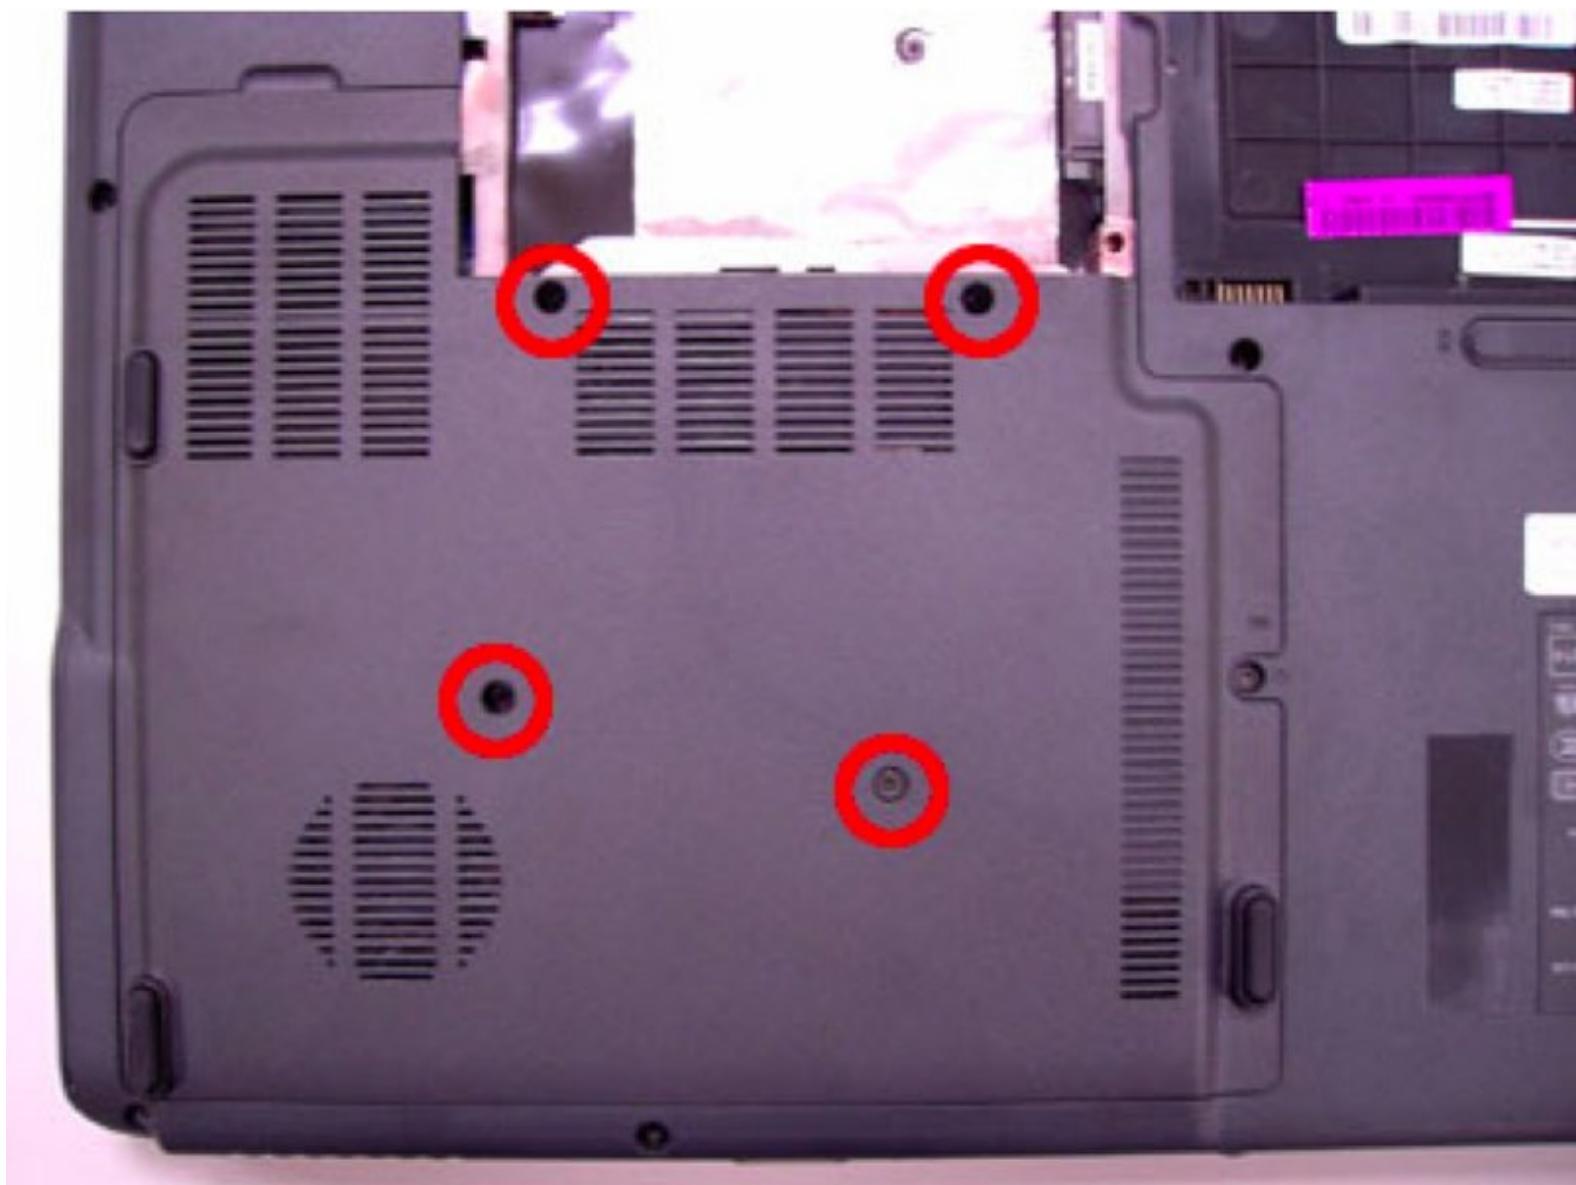

## INTRODUCTION


**This guide has been updated! Read the new guide [here](#).**

Replace the RAM in your Acer Aspire 5100.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)

## Step 1 — RAM

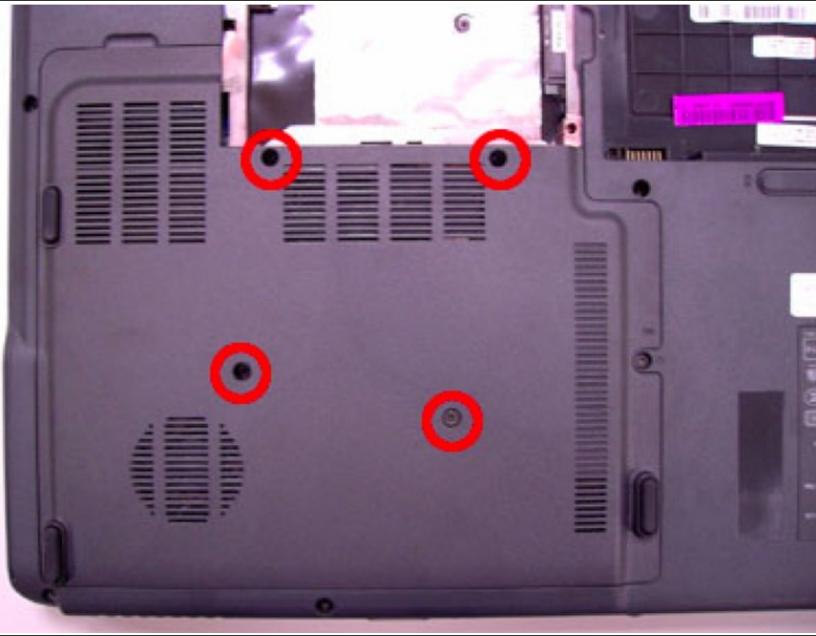


- Remove the four screws securing the RAM/thermal module cover.

## Step 2



- Lift and remove the thermal module cover away from the Aspire 5100.


## Step 3

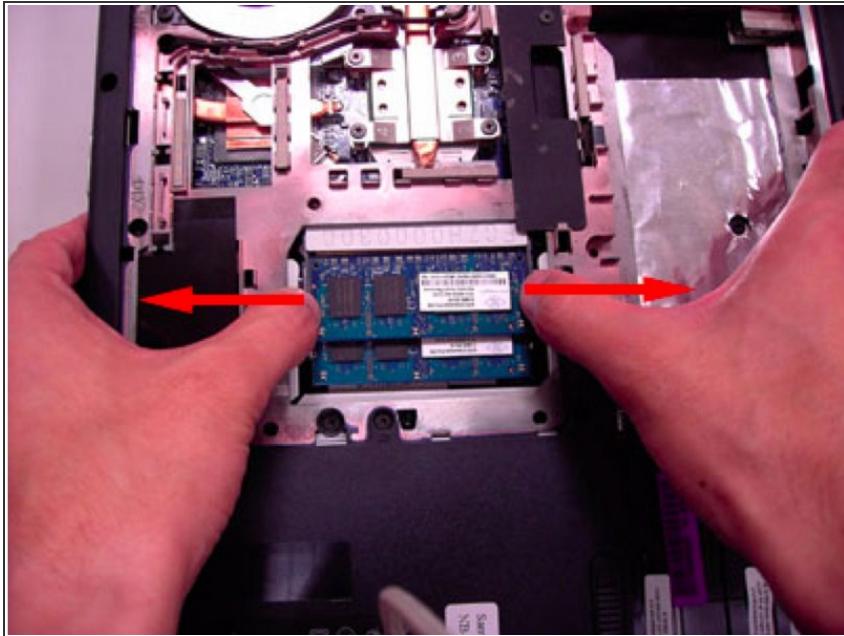

- Release the tabs on each side of the chip by simultaneously pushing each tab away from the RAM.

*(i)* These tabs lock the chip in place and releasing them will cause the chip to "pop" up.

## Step 4

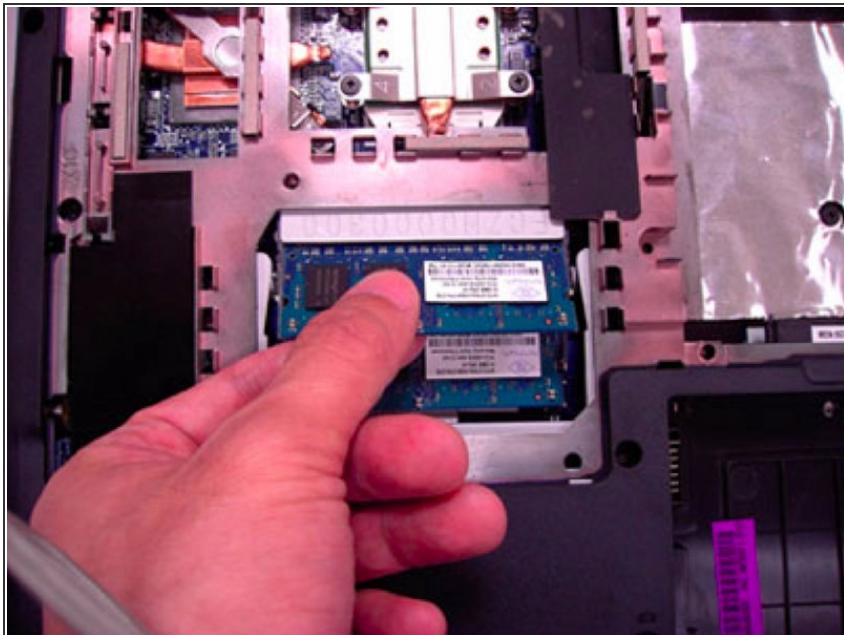

- After the RAM chip has popped up, pull it straight out of its socket.

*star* Repeat this process if a second RAM chip is installed.

To reassemble your device, follow these instructions in reverse order.