


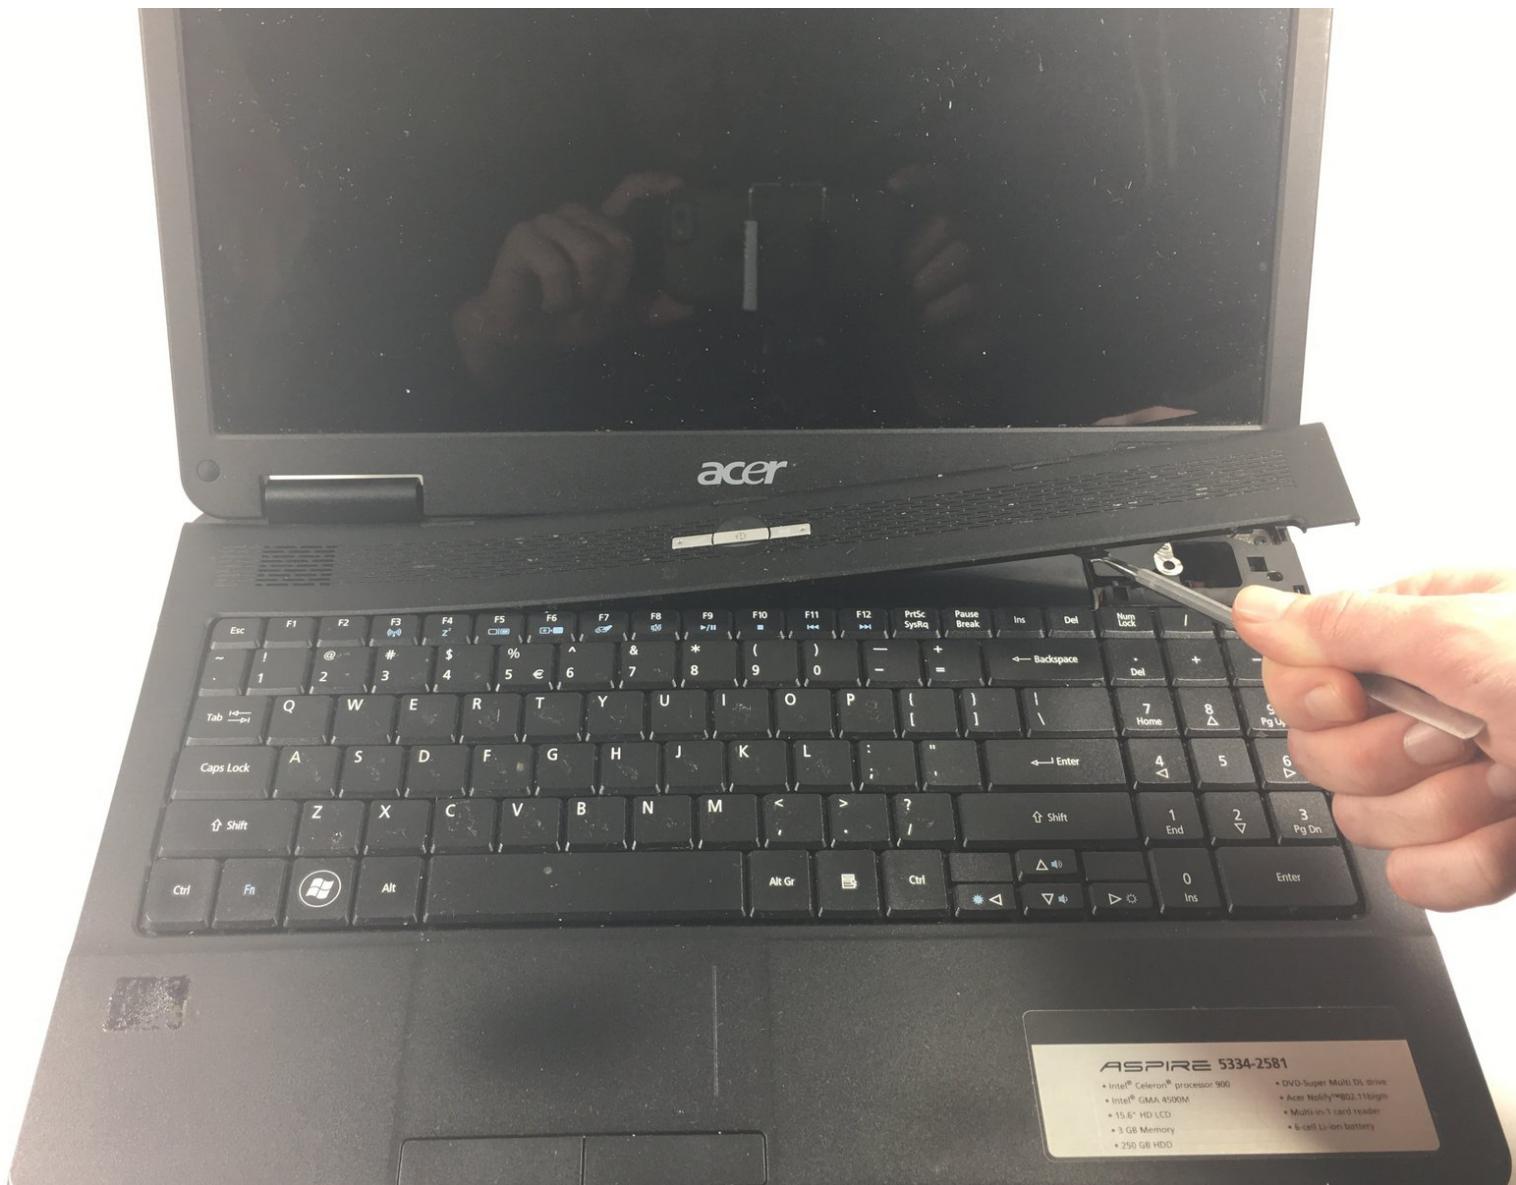

# Acer Aspire 5334-2581 Keyboard Replacement

This guide will show how to change the keyboard on your Acer Aspire 5334-2581.

Written By: gilson teixeira




## INTRODUCTION

The keyboard on your Acer Aspire will be easy to remove. The keyboard performs a special function on your laptop.

### TOOLS:

- Metal Spudger (1)

## Step 1 — Battery

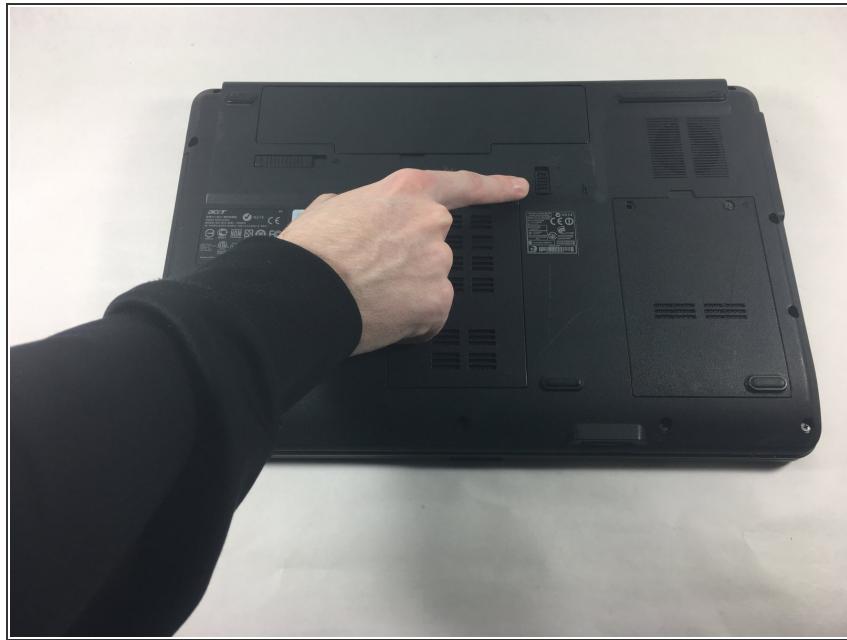

- Please make sure your device is unplugged . Turn it over slowly, and place it on a flat surface.


## Step 2



- This latch holds your battery in place, it should always be locked. Make sure to unlock this piece.

**⚠** Do not break this latch, otherwise your battery will not hold in place.


## Step 3

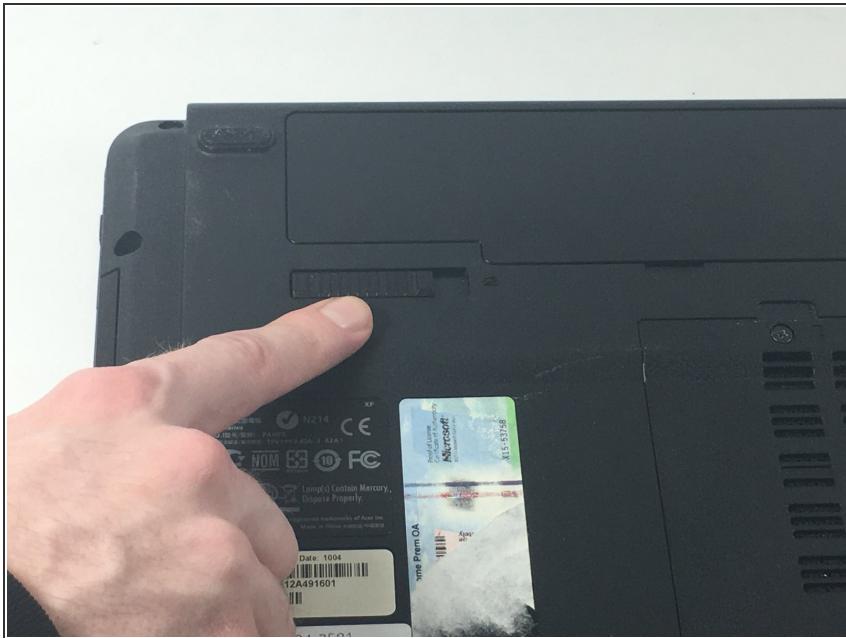

- Locate the eject latch and push it so the battery can come out.
- The battery will lift up once you have pushed the latch.


You DO NOT need to adjust the latch when replacing the new battery, because it just snaps in place.

## Step 4

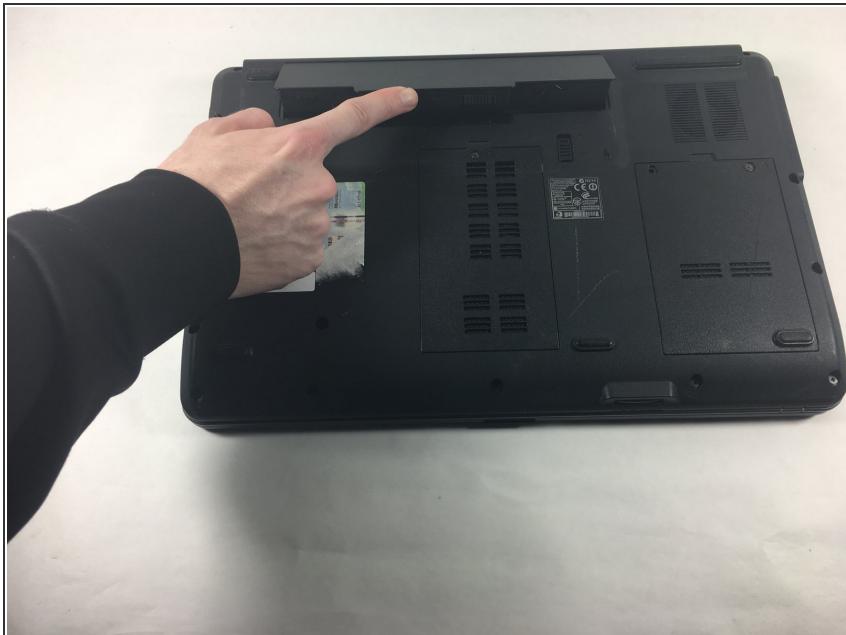

- Lift the battery up, and it should just come right off. You should see the label with the part number.

## Step 5 — Keyboard

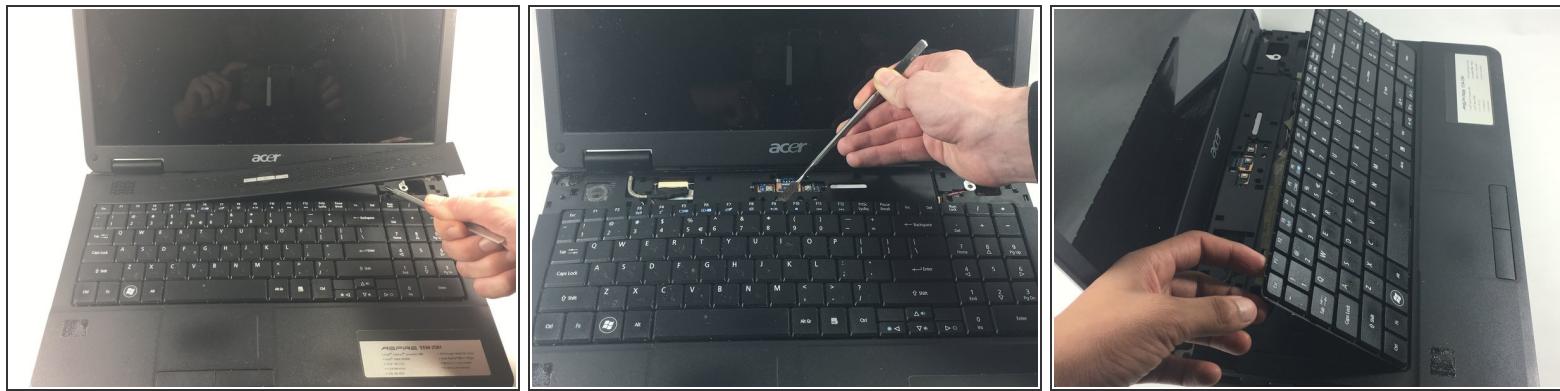

- The keyboard is held underneath a plastic cover. remove this cover with a spudger.
- Using a spudger, apply it underneath the keyboard and lift it up.

## Step 6



- Disconnect the keyboard flex cable, and now you are ready to install a new keyboard.

**⚠** Take extra care, and try not to break the the latch that holds the cable in place.

To reassemble your device, follow these instructions in reverse order.