



Acer Aspire 5349-2592 Battery Replacement

This guide will help you replace the battery in your Acer Aspire 5349-2592.


Written By: Michele Ryan



INTRODUCTION


This guide accomplishes replacing a faulty battery. A faulty battery causes the laptop not to power on even when plugged in.

Step 1 — Battery

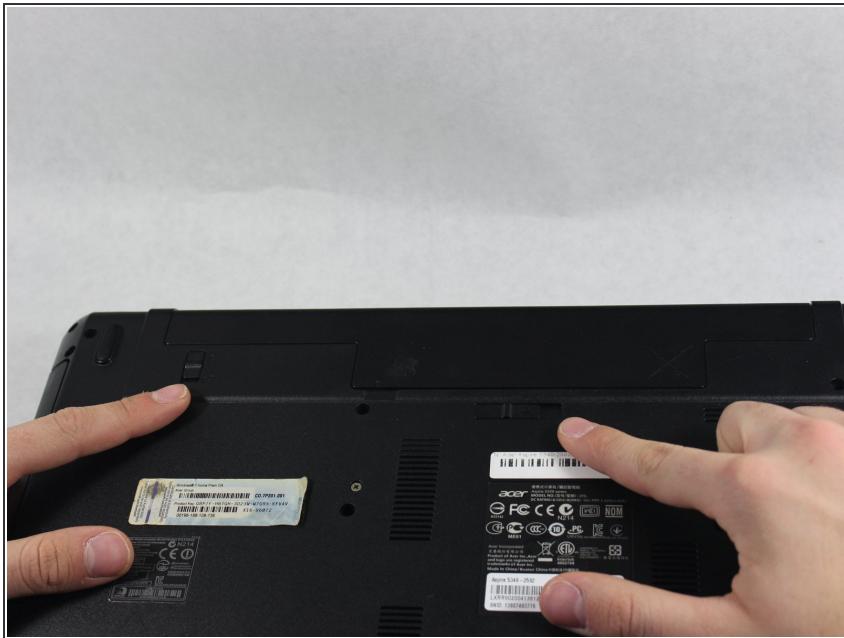


- Turn the laptop over so that the back is facing you.

Step 2

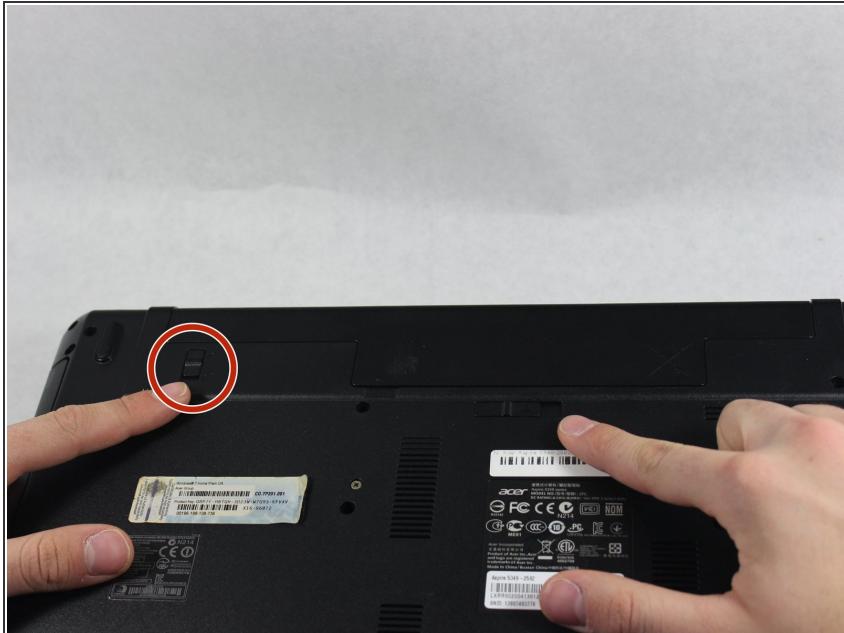


- Push the laptop battery release lock.

Step 3

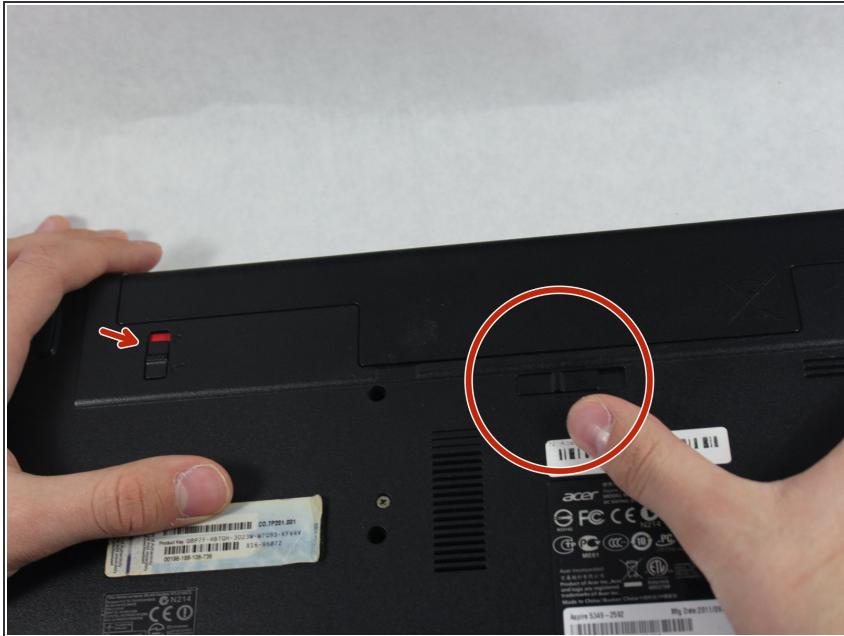

- Now that the Acer-Aspire 5349-2592 laptop battery is unlocked, press the battery release button down.

Step 4

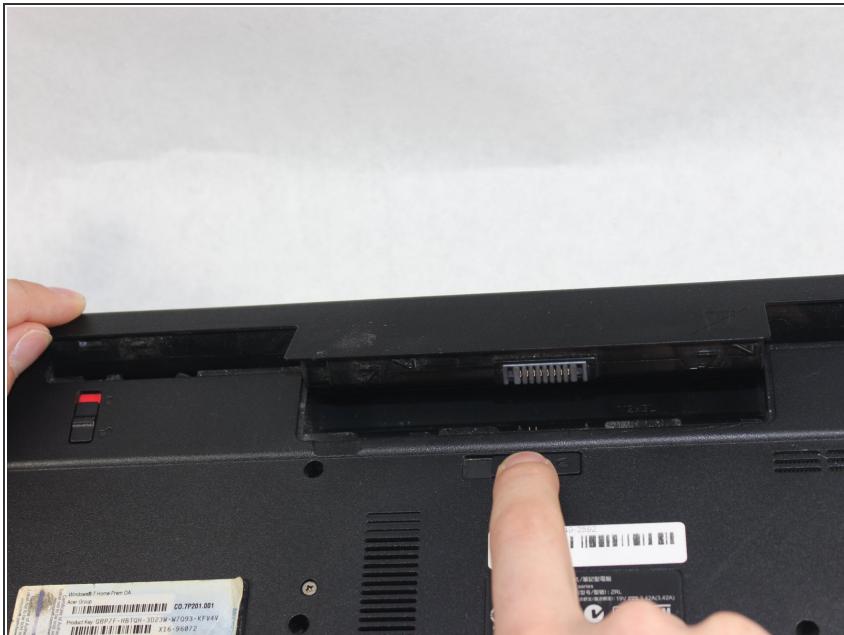

- Holding down the laptop battery release button, gently pull the battery away from the laptop.

To reassemble your device, follow these instructions in reverse order.