




Acer Aspire 5349-2592 Fan Replacement

This will accomplish in replacing the DVD drive in your Acer Aspire 5349-2592.

Written By: Abderahmane Naidjate

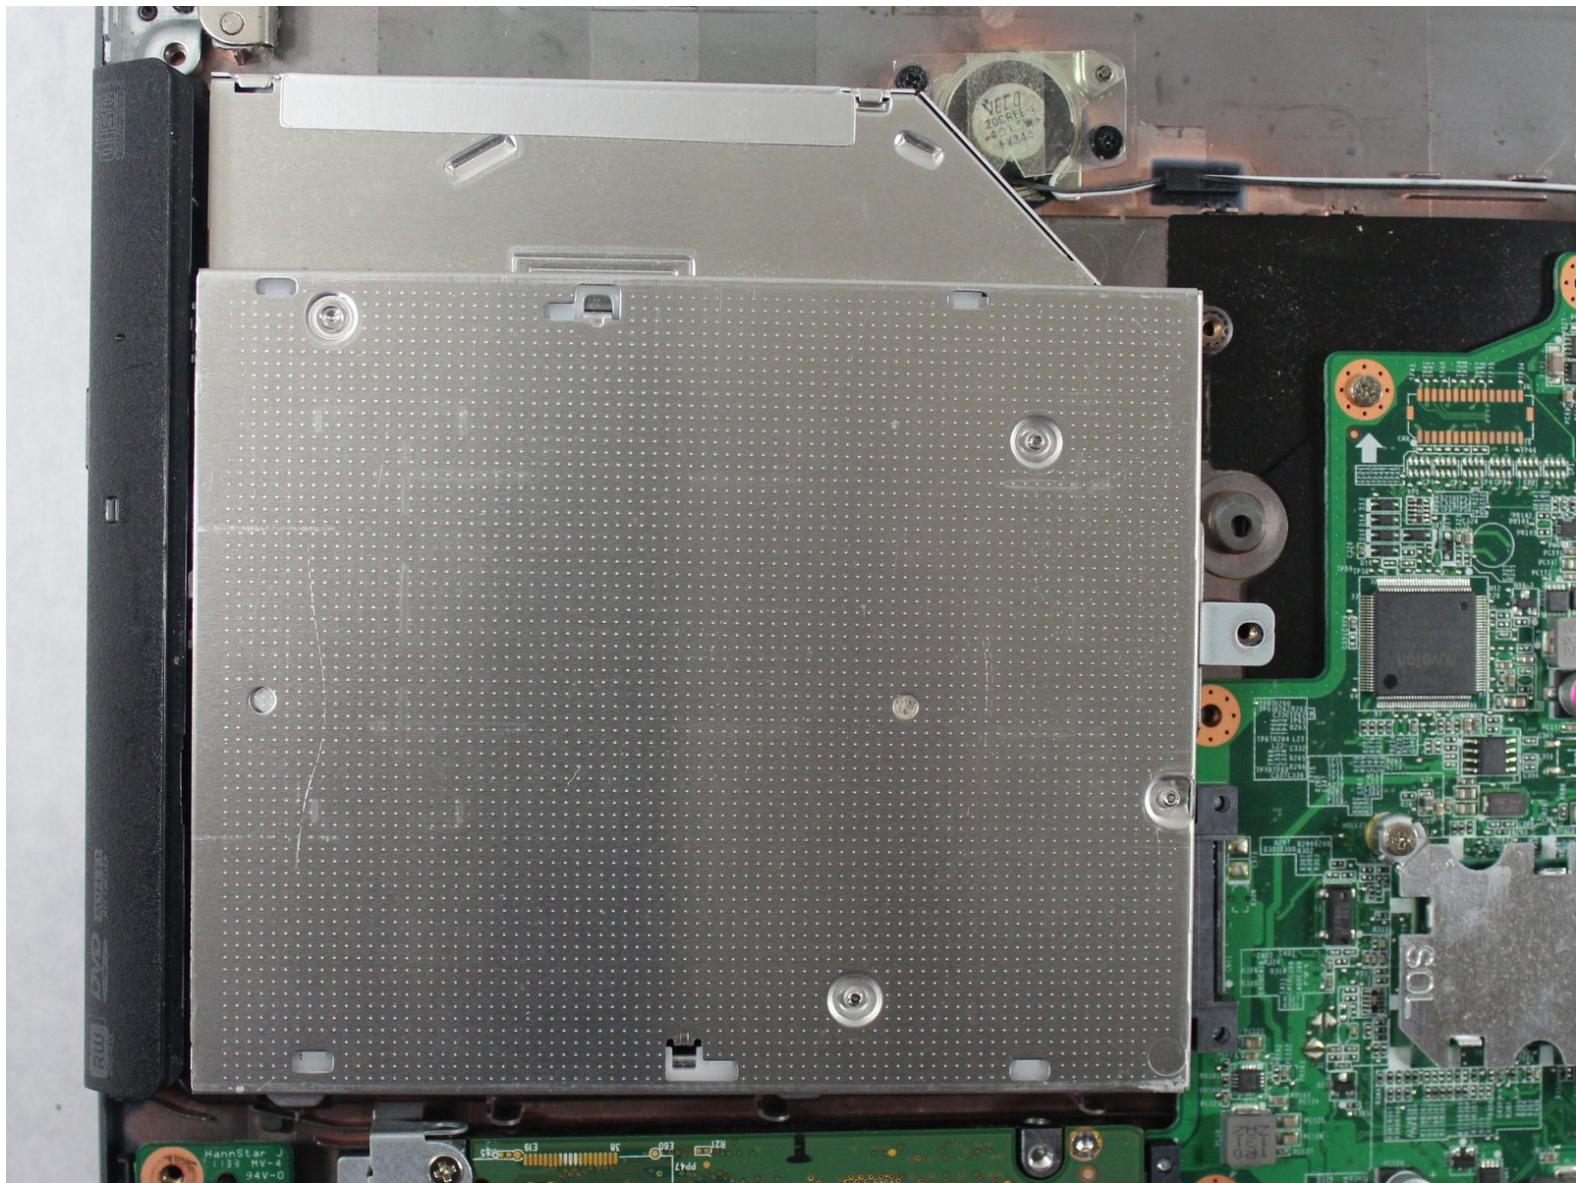

INTRODUCTION

A bad disc drive can cause an assortment of issues on the computer. It could cause an error when reading CD and DVD, the CD or DVDs may not play audio or video properly, and DVD programs may not install properly.

TOOLS:


- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery



- Turn the laptop over so that the back is facing you.

Step 2

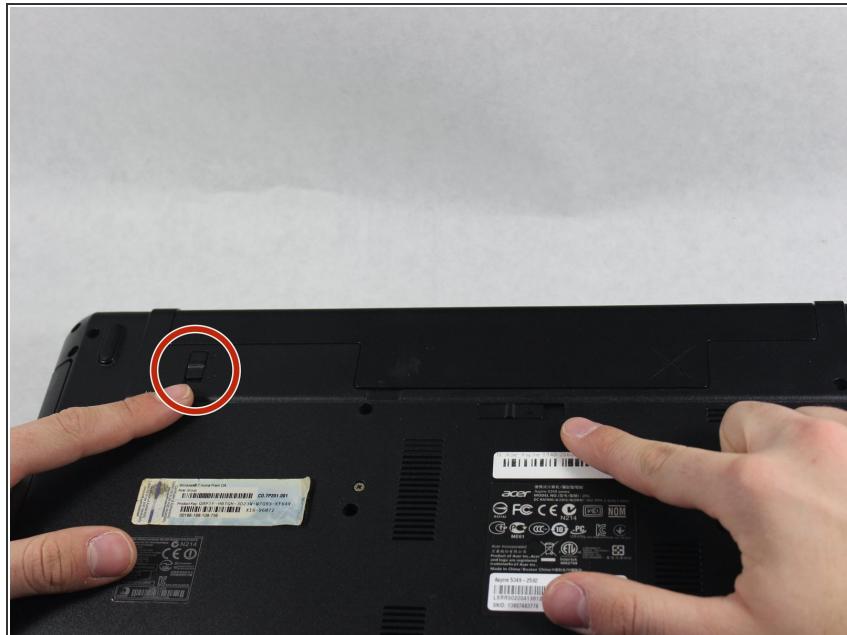


- Push the laptop battery release lock.

Step 3



- Now that the Acer-Aspire 5349-2592 laptop battery is unlocked, press the battery release button down.

Step 4

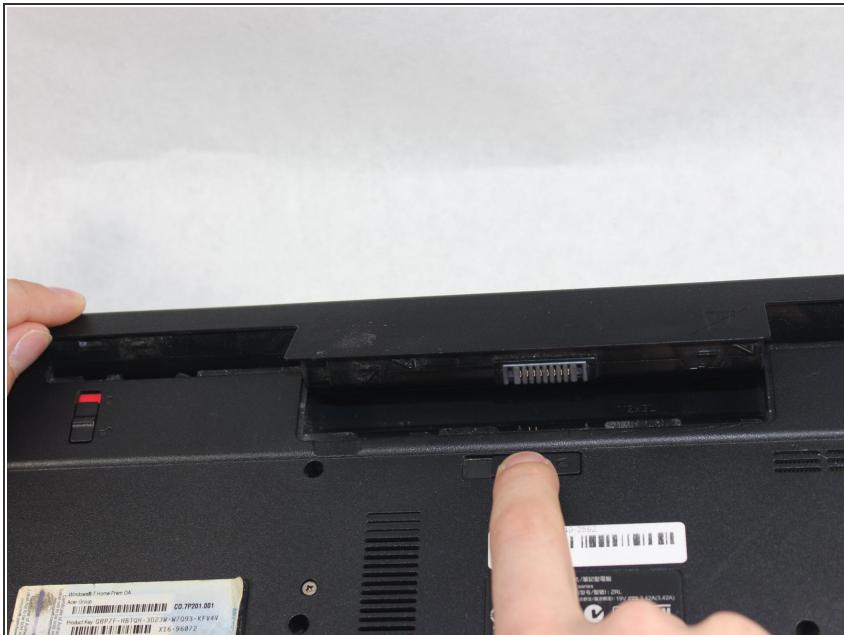

- Holding down the laptop battery release button, gently pull the battery away from the laptop.

Step 5 — Back plate




- Remove all of the screws located on the back of the laptop using your Phillips #0 screwdriver.

Step 6




- Pry open the backplate using the iFixit opening tool and remove the backplate from the device.

Step 7 — CD / DVD Drive

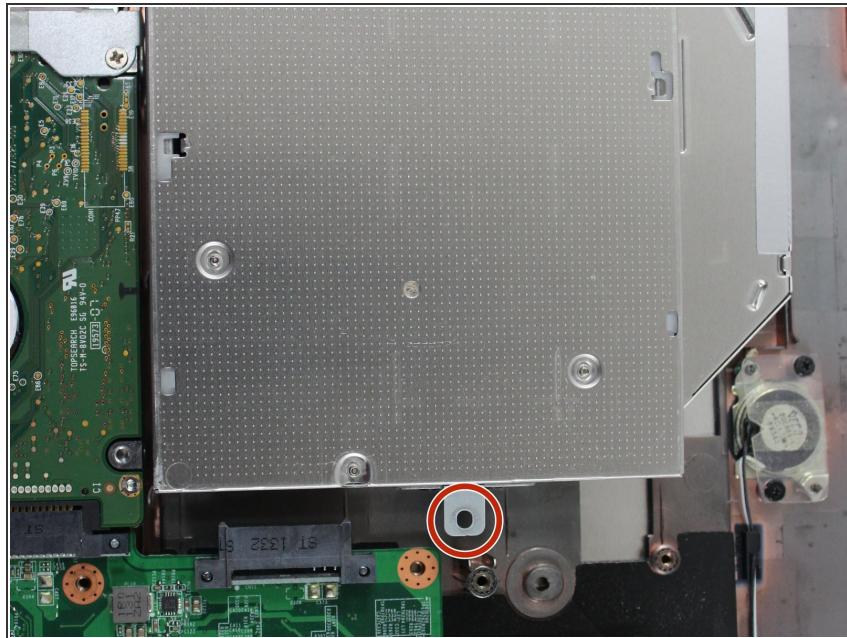

- Unscrew the single screw on the DVD drive with your Phillips #0 screwdriver.

Step 8

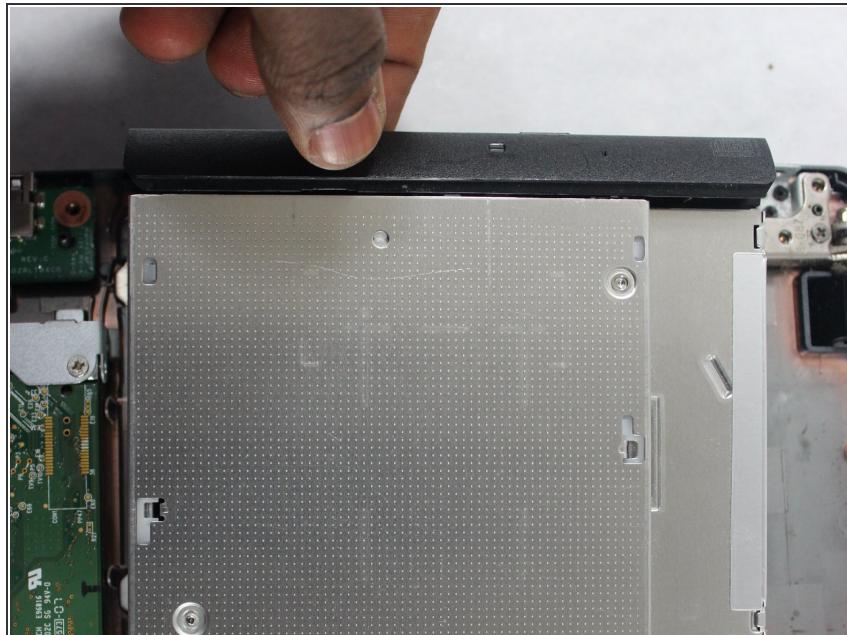

- Gently lift the drive up and remove it from the pin.

To reassemble your device, follow these instructions in reverse order.