




Acer Aspire 5349-2592 Hard Drive Replacement

This guide will help you replace the hard drive in your Acer Aspire 5349-2592.

Written By: Abderahmane Naidjate

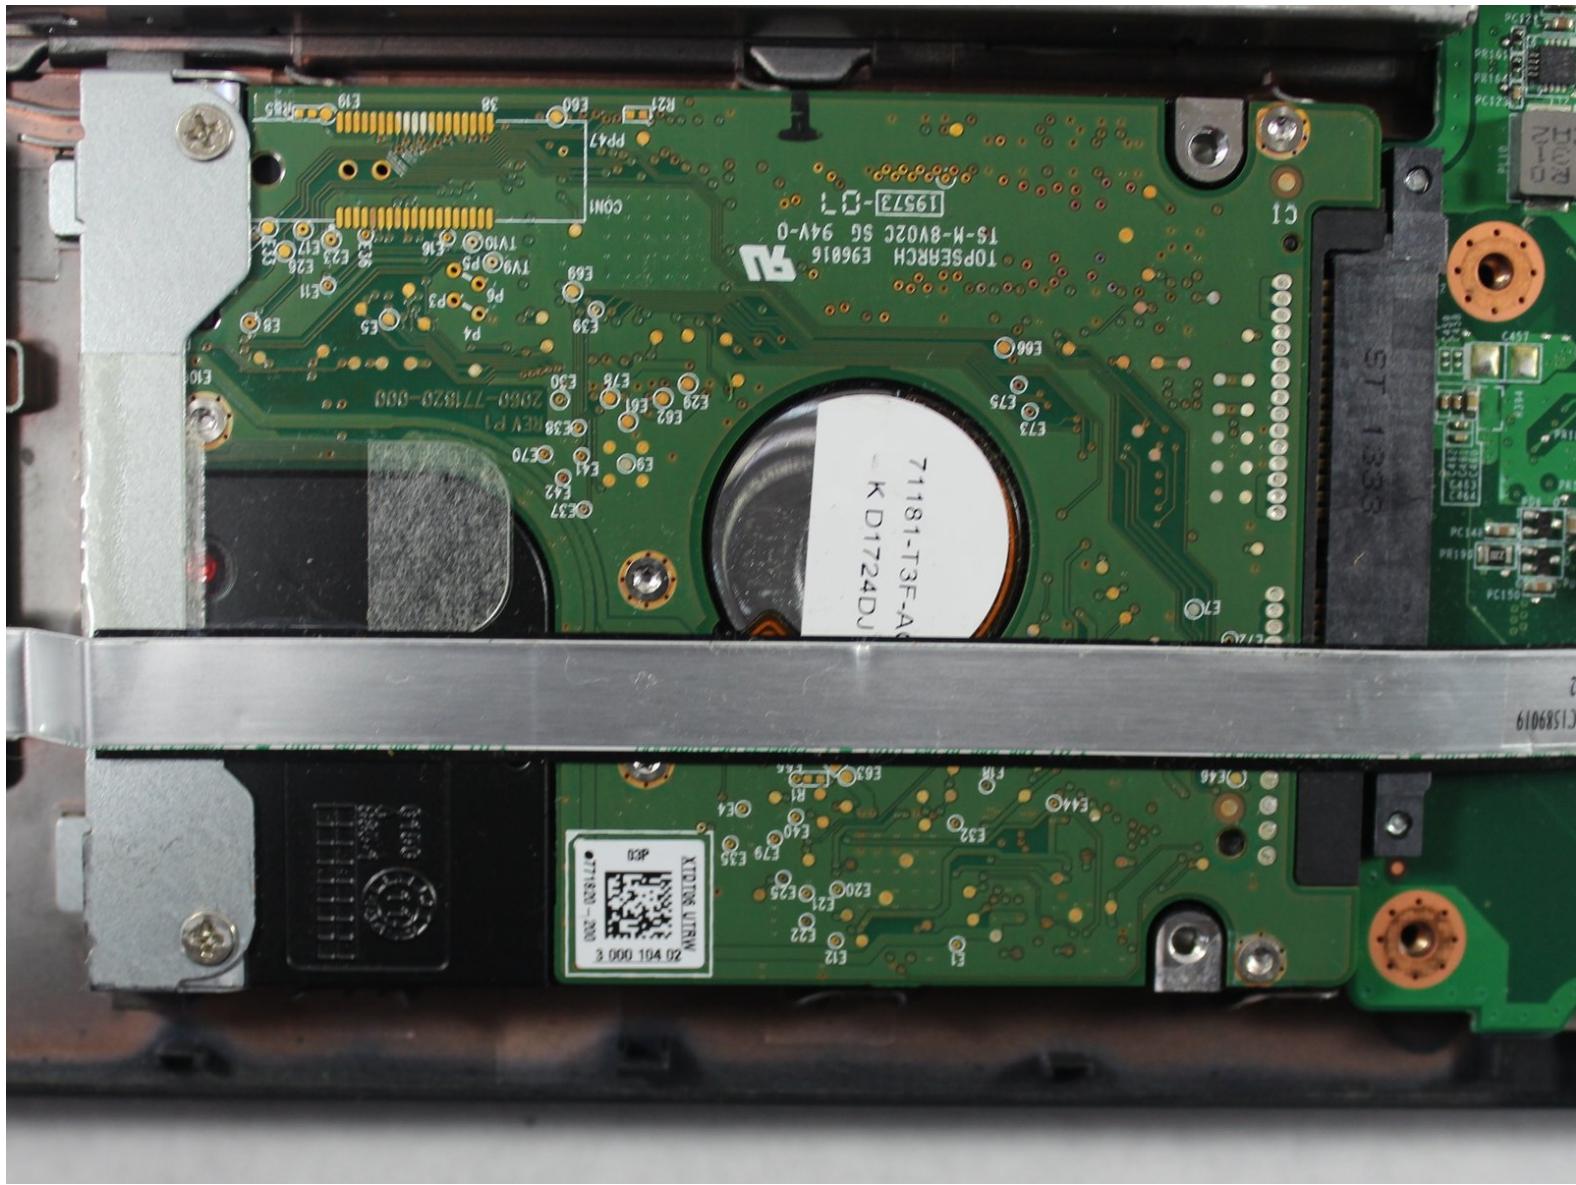

INTRODUCTION

The process of this guide is pretty simple, but requires patience. This guide will help the user replace the hard drive of the computer.

TOOLS:


- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery



- Turn the laptop over so that the back is facing you.

Step 2

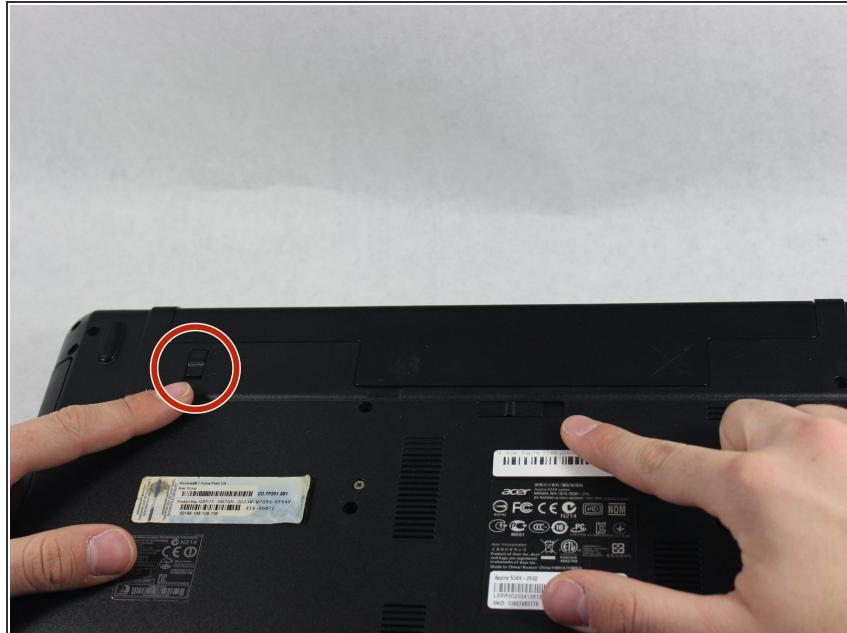


- Push the laptop battery release lock.

Step 3



- Now that the Acer-Aspire 5349-2592 laptop battery is unlocked, press the battery release button down.

Step 4

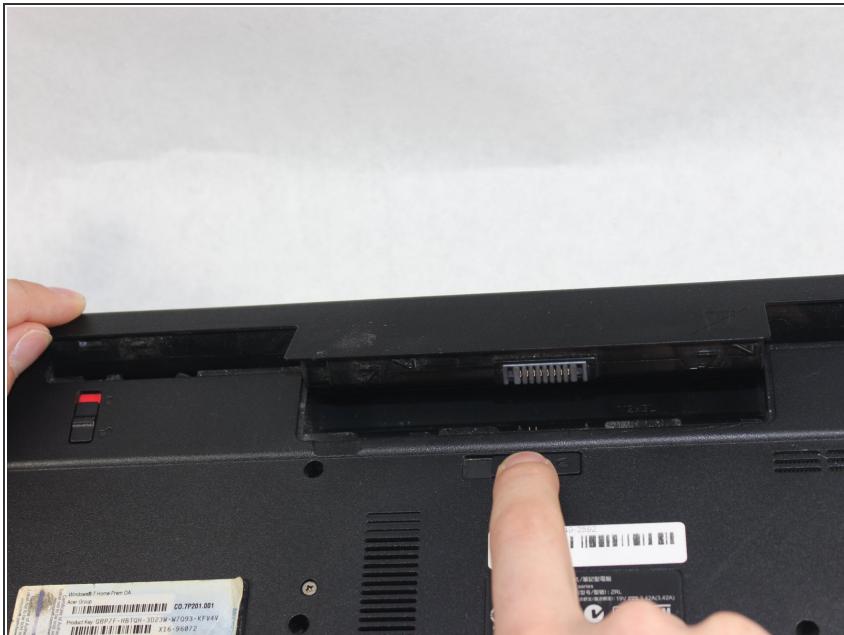

- Holding down the laptop battery release button, gently pull the battery away from the laptop.

Step 5 — Back plate




- Remove all of the screws located on the back of the laptop using your Phillips #0 screwdriver.

Step 6




- Pry open the backplate using the iFixit opening tool and remove the backplate from the device.

Step 7 — Hard Drive

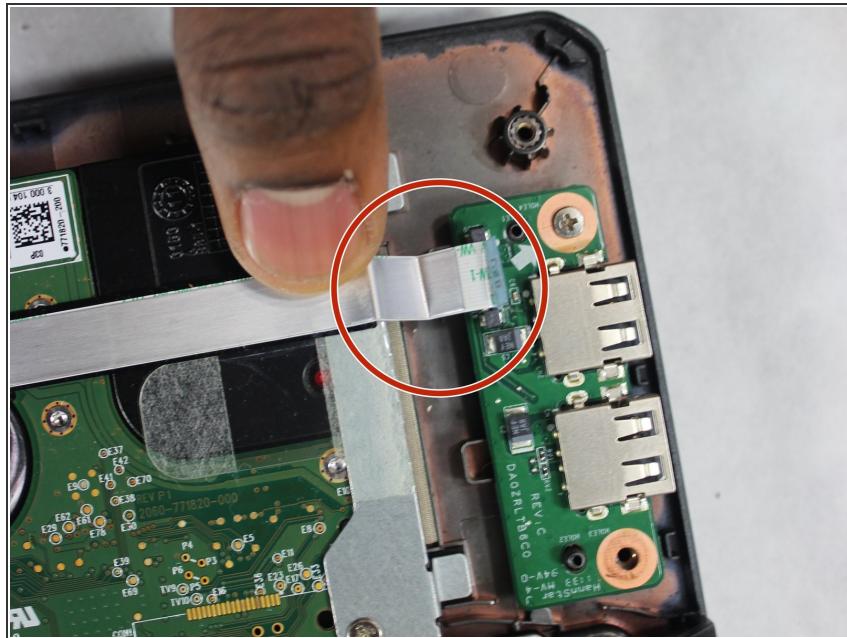


- Remove the the pin strip.

Step 8

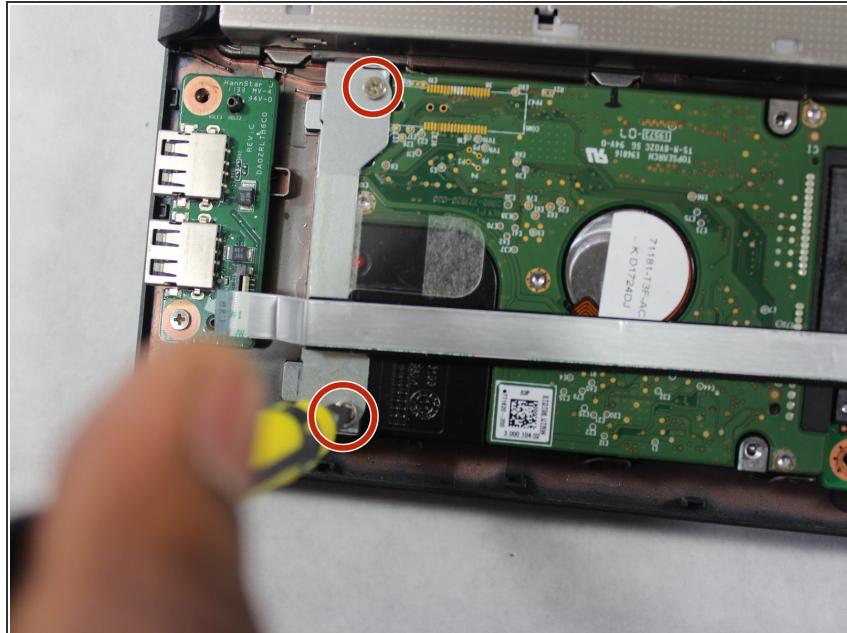


- Remove the two screws from the caddy using the Phillips #0 screwdriver.

Step 9

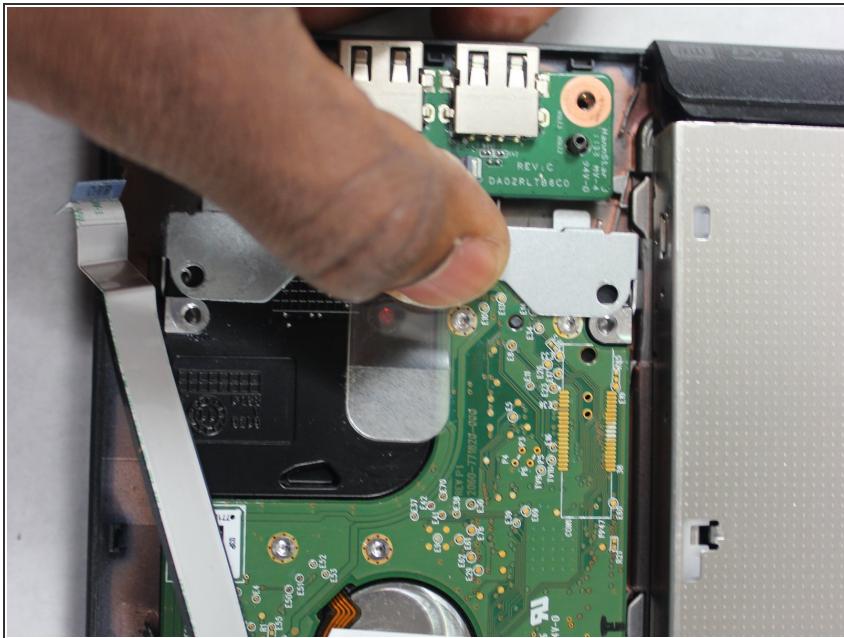

- Slide out the caddy.

Step 10

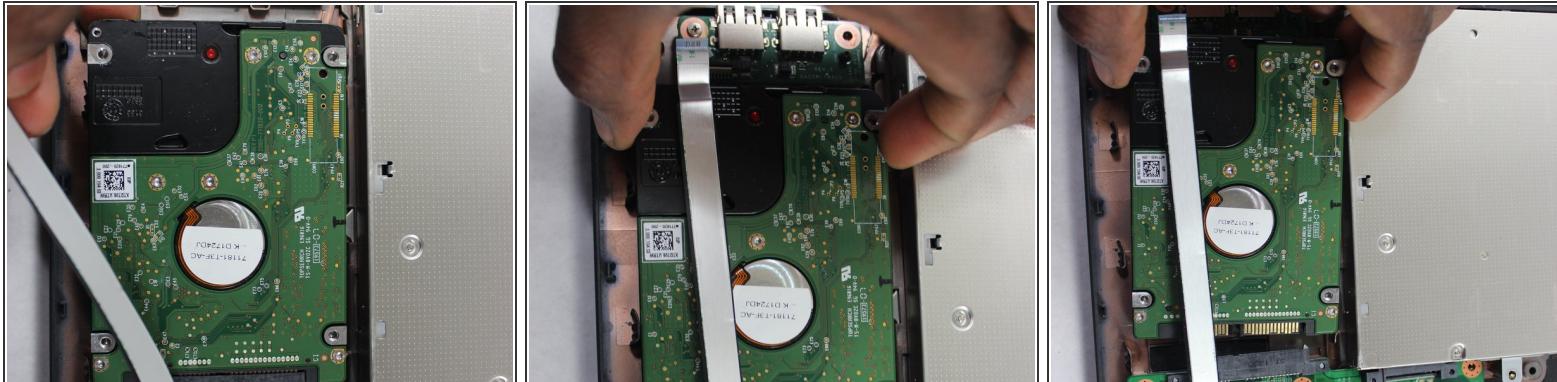

- Slightly lift up the hard drive and pull it out from the device.

To reassemble your device, follow these instructions in reverse order.