



Acer Aspire 5349-2592 Keyboard Replacement

Use this guide to remove the keyboard in your Acer Aspire 5349-2592.

Written By: Abderahmane Naidjate



INTRODUCTION

Are you missing keys on your Acer Aspire 5349-2592 laptop, or are some keys not working? If so, follow this guide with simple steps and minimal tools to replace the keyboard.

If the keyboard stops working and you are not sure why, review the “Keys are not working” troubleshooting guide located on the iFixit’s website at the following URL before proceeding: [++Acer Aspire 5349-2592 Troubleshooting](#)

Please make sure to follow the prerequisite procedures.

TOOLS:


- [Flathead Screwdriver \(1\)](#)

Step 1 — Battery



- Turn the laptop over so that the back is facing you.

Step 2

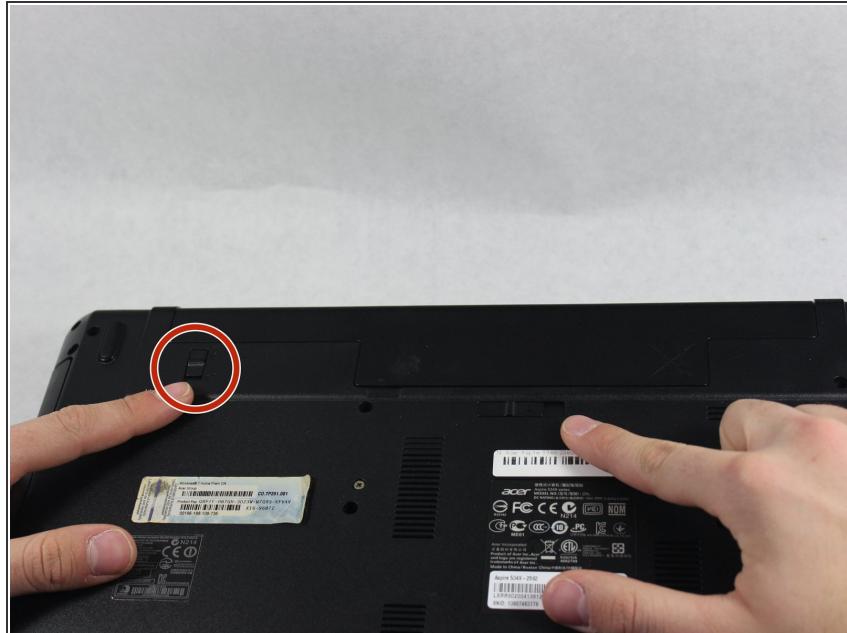


- Push the laptop battery release lock.

Step 3




- Now that the Acer-Aspire 5349-2592 laptop battery is unlocked, press the battery release button down.

Step 4

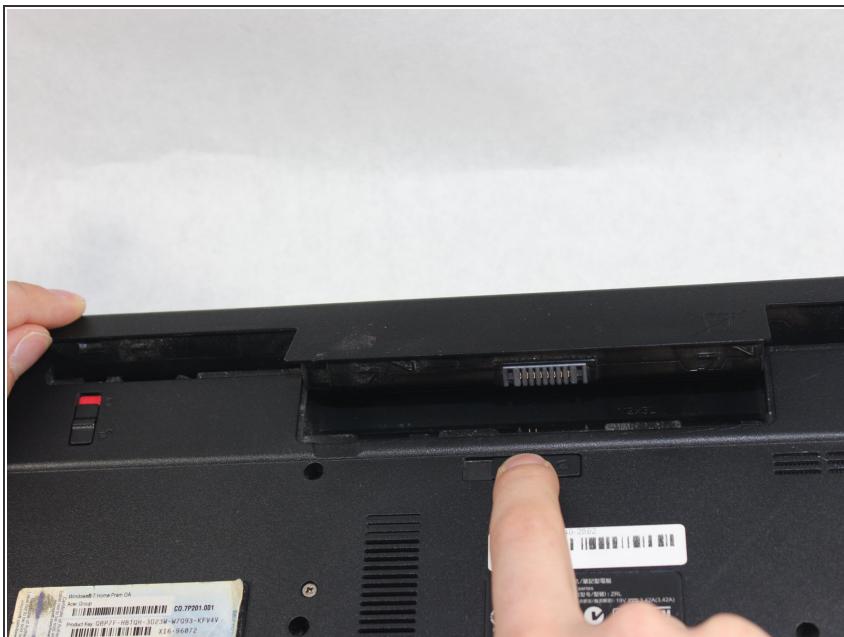


- Holding down the laptop battery release button, gently pull the battery away from the laptop.

Step 5 — Keyboard

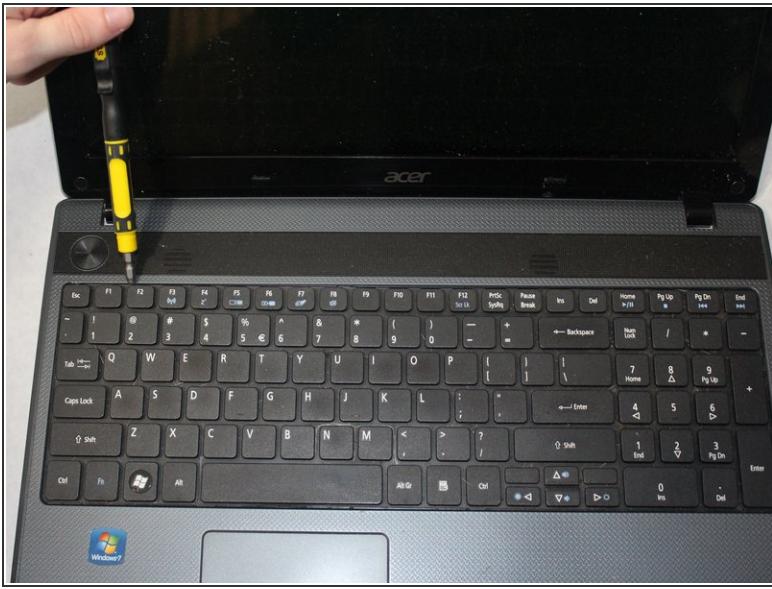


- Open the laptop and locate the top edge of the keyboard.
- Use a flathead screwdriver to gently pry the keyboard upward and lift it out of the laptop.

Step 6

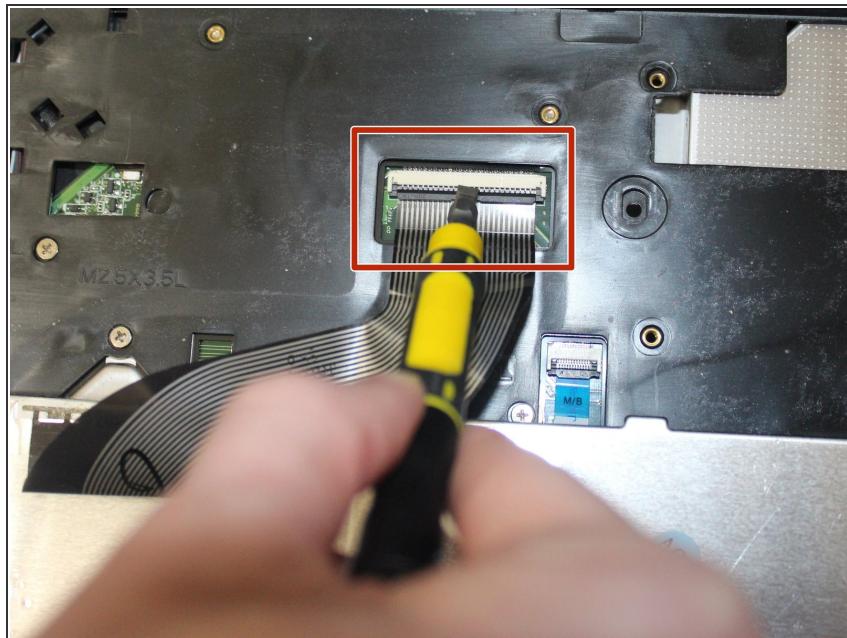

- Use a flathead screwdriver to gently lift the clamp upward and remove the cable.

Step 7

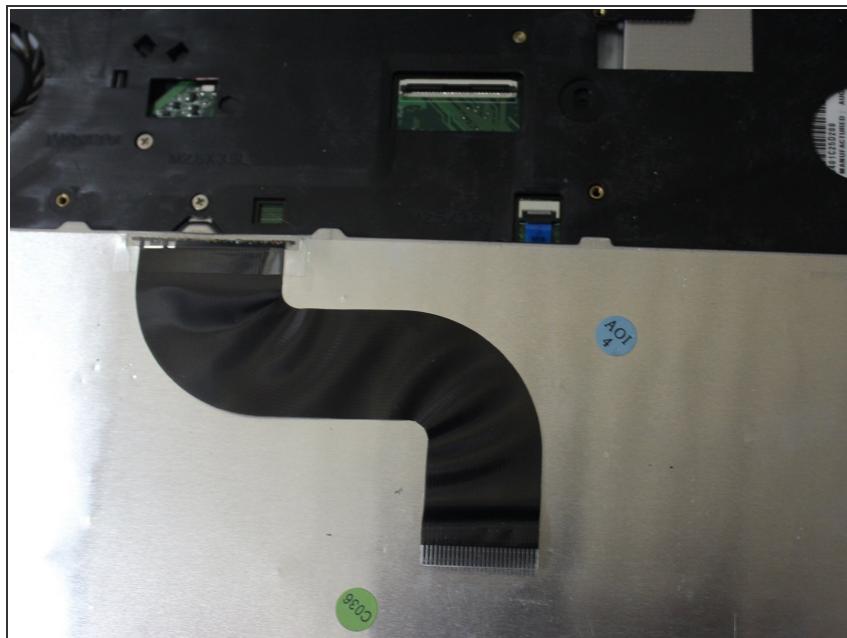

- The keyboard is now disconnected and can be safely removed.

To reassemble your device, follow these instructions in reverse order.