



Acer Aspire 5349-2592 RAM Replacement

Use this guide to remove the RAM in your Acer Aspire 5349-2592.

Written By: Abderahmane Naidjate



 **TOOLS:**


- Phillips #0 Screwdriver (1)
- iFixit Opening Tools (1)
- Small Phillips Head Screwdriver (1)

Step 1 — Battery



- Turn the laptop over so that the back is facing you.

Step 2

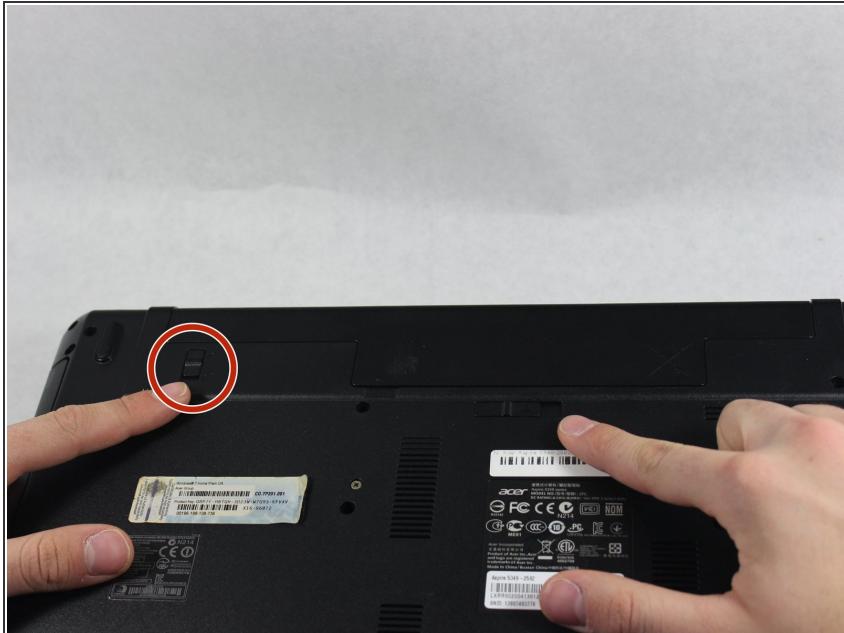


- Push the laptop battery release lock.

Step 3



- Now that the Acer-Aspire 5349-2592 laptop battery is unlocked, press the battery release button down.

Step 4

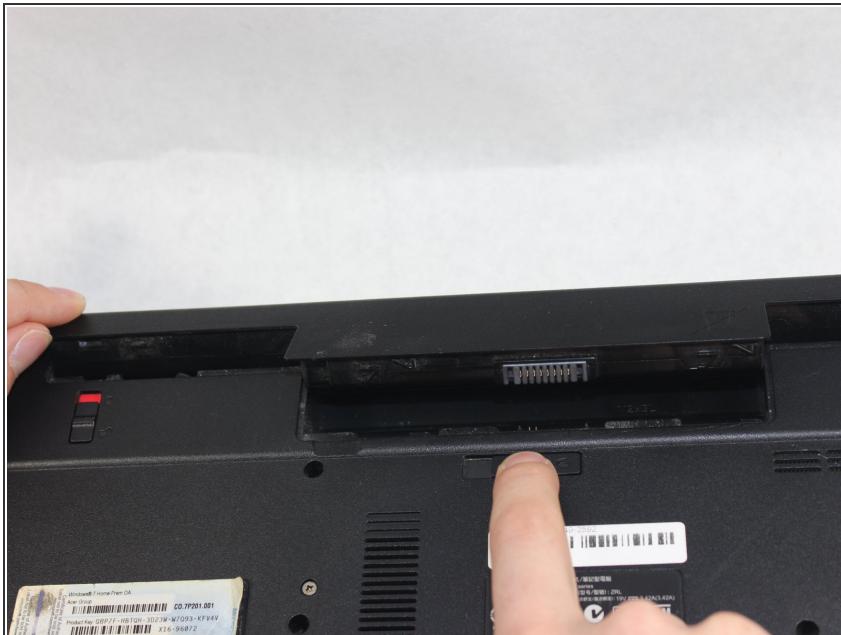


- Holding down the laptop battery release button, gently pull the battery away from the laptop.

Step 5 — Back plate




- Remove all of the screws located on the back of the laptop using your Phillips #0 screwdriver.

Step 6

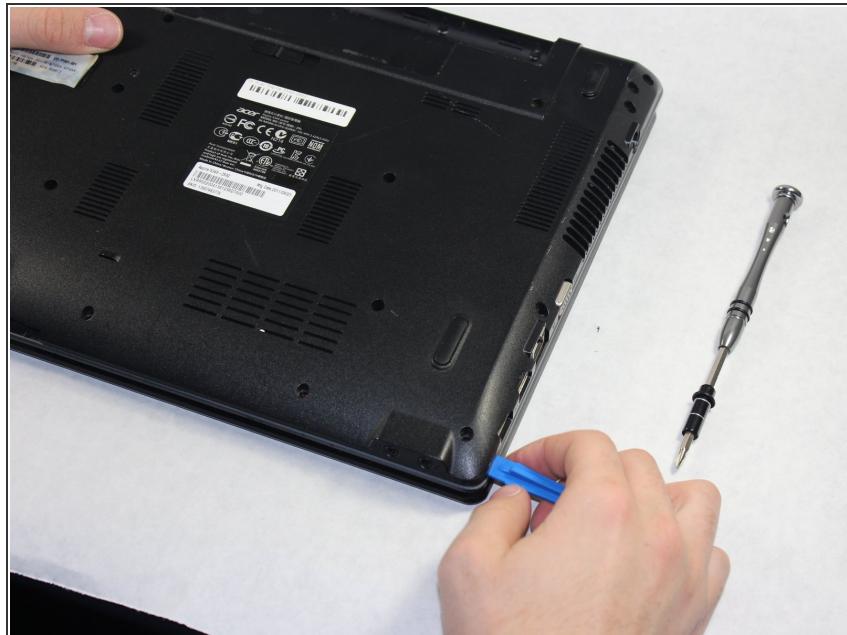

- Pry open the backplate using the iFixit opening tool and remove the backplate from the device.

Step 7 — RAM

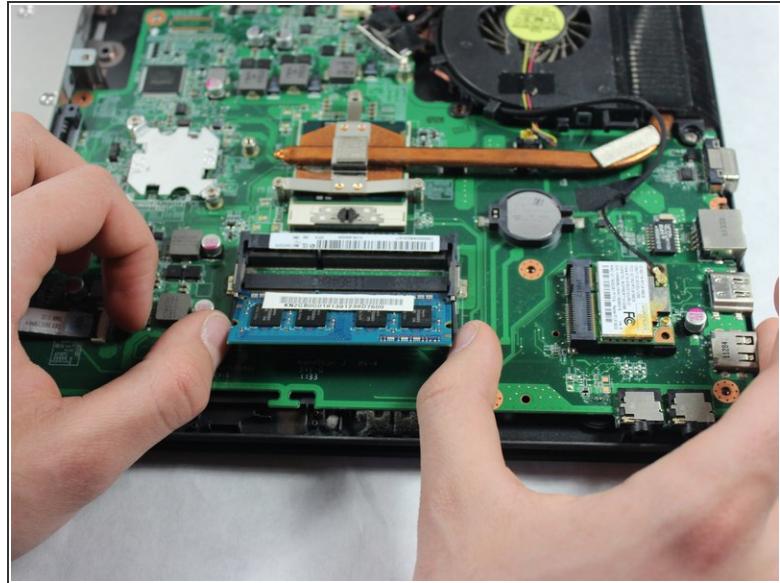

- Push the clips securing the RAM outwards.

(i) The RAM stick will pop up and is safe to remove from the device. Repeat the same process for additional RAM sticks.

To reassemble your device, follow these instructions in reverse order.