




Acer Aspire 5517-1127 Hard Drive Replacement

Replace hard drive on Acer Aspire 5517-1127 to improve overall performance or failing device.

Written By: Christopher Newkirk

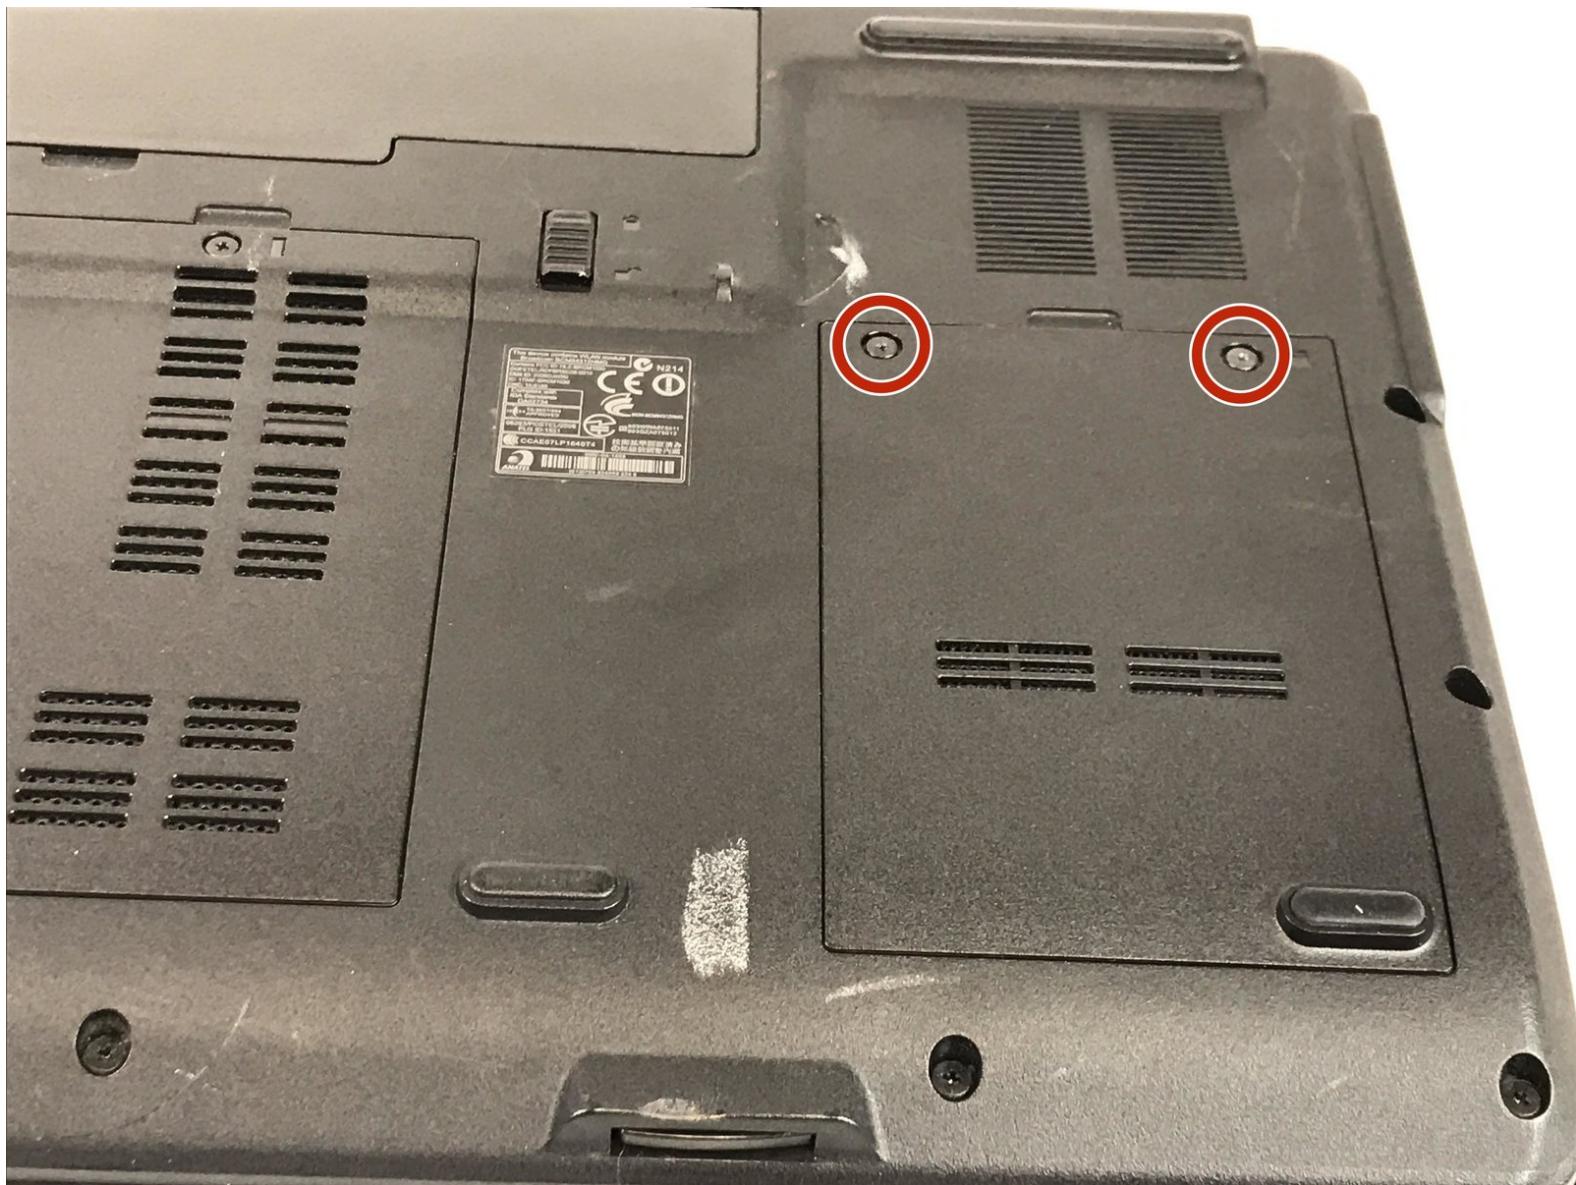


INTRODUCTION

This guide will show you how to replace the hard drive on your Acer Aspire 5517-1127 laptop. If your HDD is broken or needs upgrading, this will help you.

TOOLS:


- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Hard Drive

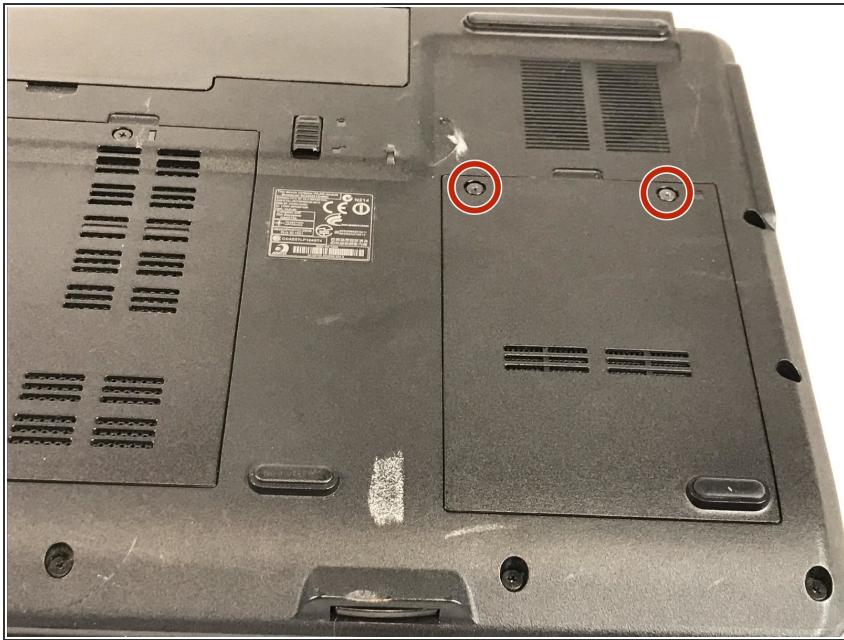


- Orient the laptop so that it is upside down facing away from you. The hard drive panel is on the right.
- The two screws are at the top of the panel.

Step 2

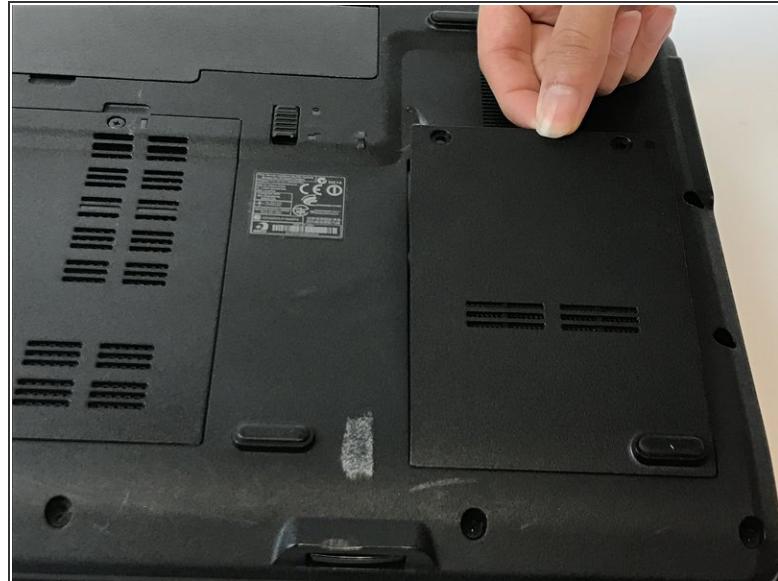

- Using a Phillips screwdriver (PH1), unscrew each screw from the panel.
- Pull the panel away from the device as shown.

Step 3

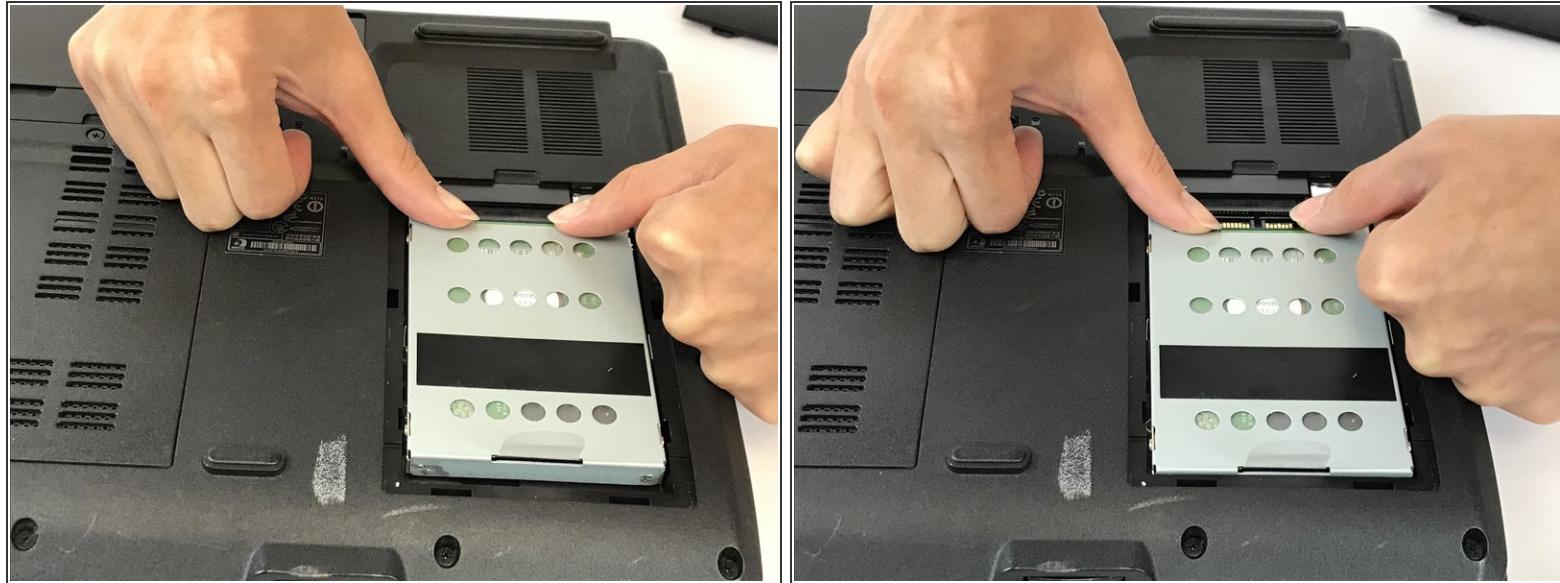

- Push the hard drive out of its housing as shown.

Step 4



- The hard drive is now removed.

To reassemble your device, follow these instructions in reverse order.