




# Acer Aspire 5534-1146 Disc Drive Replacement

Replacing the disc drive on an Acer Aspire 5534-1146 laptop.

Written By: Trysten buckley

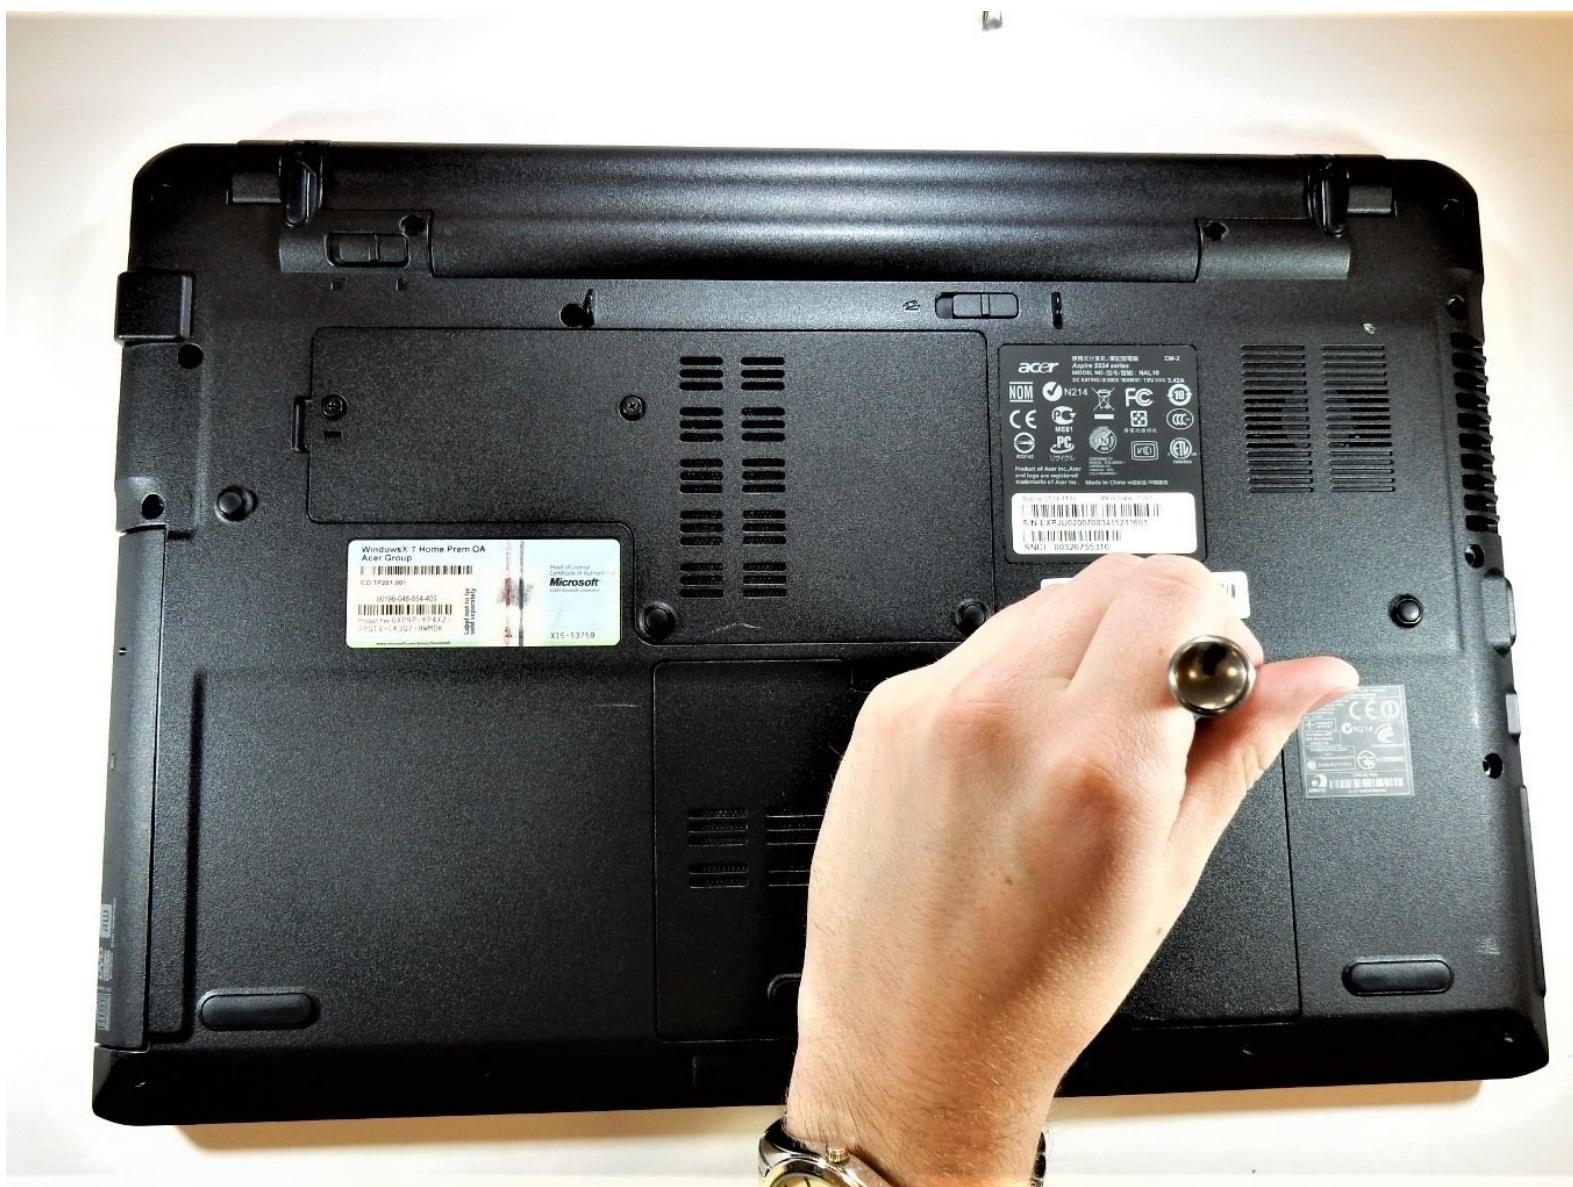


## INTRODUCTION

Replacing the disc drive is a fairly simple process that can be completed in around 5 minutes. Make sure the device is unplugged and powered off before you begin.

### TOOLS:



- [Phillips #0 Screwdriver \(1\)](#)

## Step 1 — Disc Drive

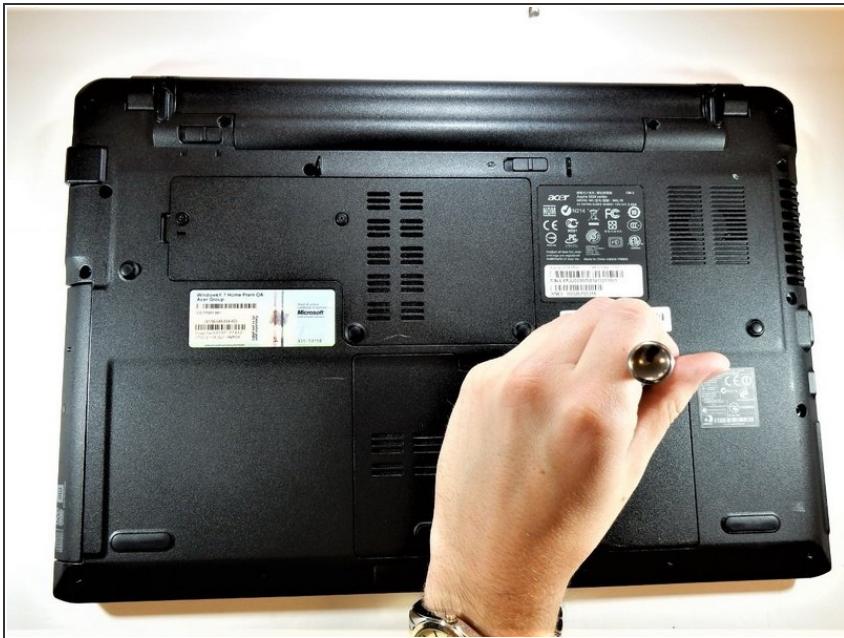


- Unscrew the two .8 centimeter screws on the bottom plate with the PH #0 screwdriver.

## Step 2

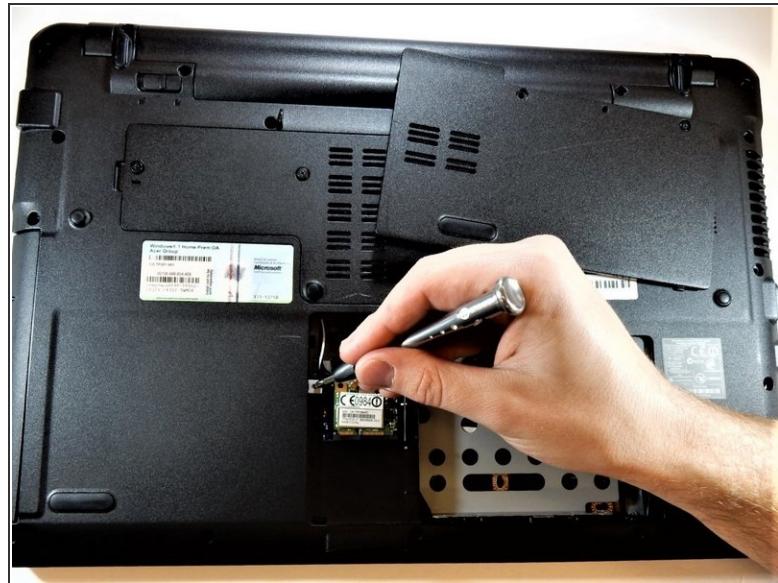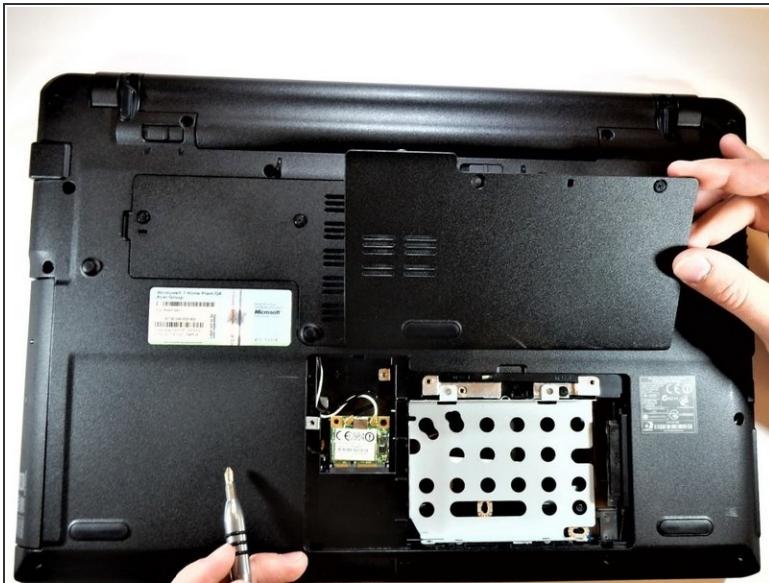

- Using your fingers, or the blue plastic spudger tool if needed, remove the plate.
- Then proceed to unscrew the .4 centimeter Phillips screw on the left side.

## Step 3

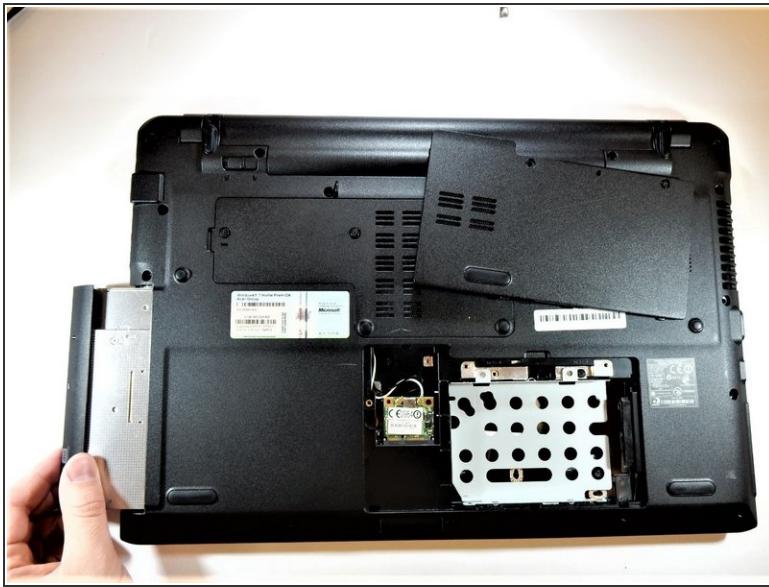

- You can now pull the disk drive out by hand.

## Step 4



- If needed, the small plate can be removed by unscrewing the two .4 centimeter Phillips screws.

To reassemble your device, follow these instructions in reverse order.