




Acer Aspire 5534-1146 RAM Replacement

Guide to removing the RAM from the Acer Aspire 5534-1146.

Written By: Trysten buckley

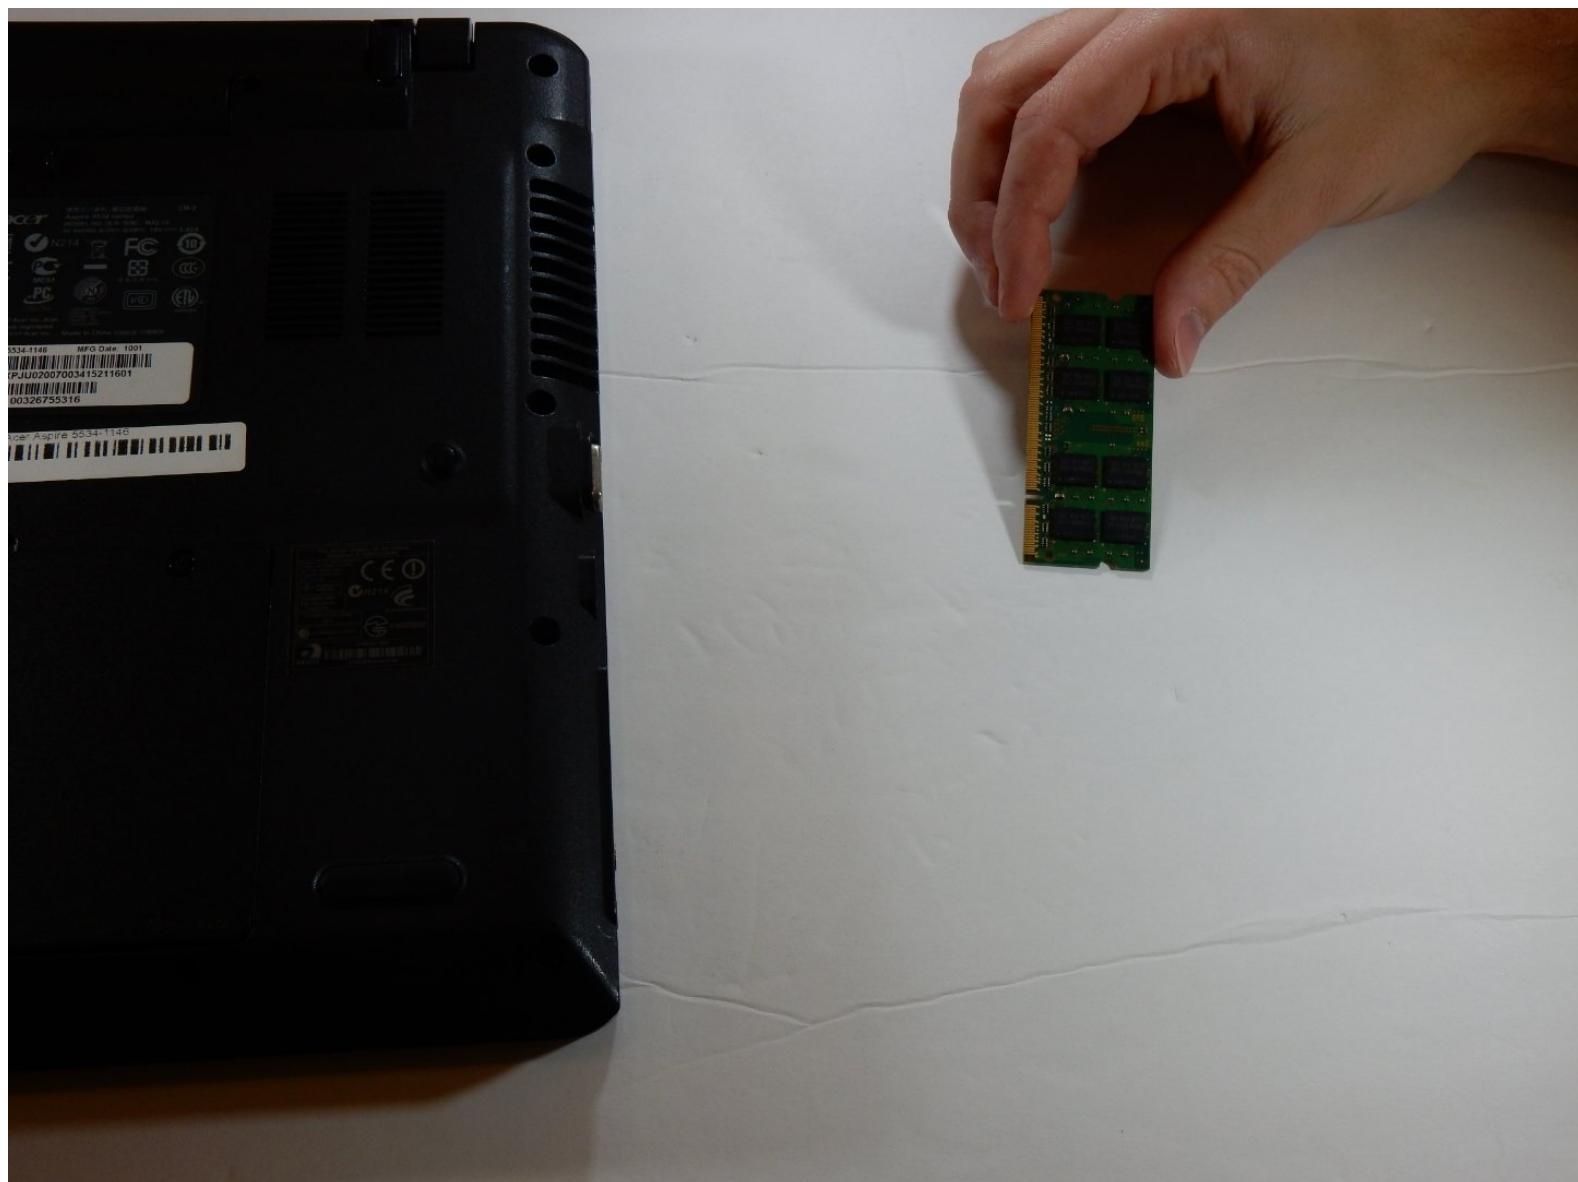

INTRODUCTION

Replacing the RAM is a simple repair that takes 5 minutes. Make sure laptop is off and unplugged.

TOOLS:


- [Spudger \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — RAM




- Flip laptop over to show the bottom and lay flat.
- Use the Phillips #0 screwdriver to remove the the two .8 centimeter screws from back plate.

Step 2

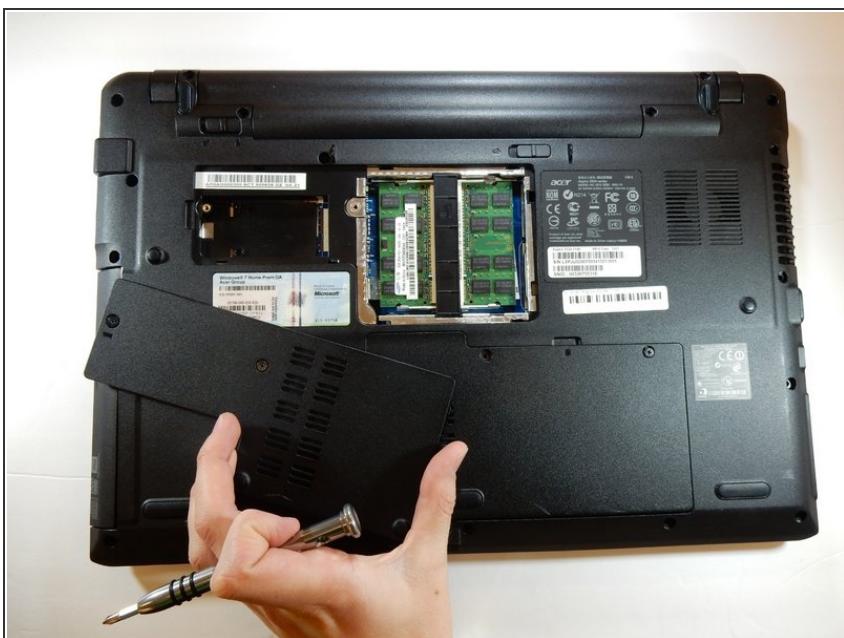

- Use the blue colored spudger to loosen plate.
- Lift plate out of place.

Step 3

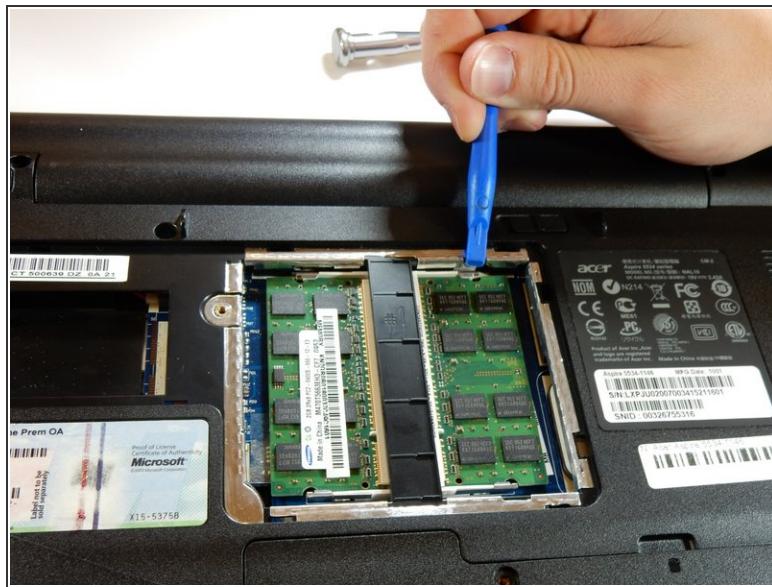

- Push down the marked bracket with an opening tool or plastic spudger.
- Move the Ram at a 45 degree angle and pull out of place.

⚠ Do not bend the RAM stick brackets when removing the RAM.

To reassemble your device, follow these instructions in reverse order.