



Acer Aspire 5552 RAM Replacement

Replacing memory in the Acer Aspire 5552.

Written By: August Williams



INTRODUCTION

This guide is on how to replace the random access memory in an Acer Aspire from the 5552 series.

TOOLS:

- [Jimmy](#) (1)
- Opening Device
- [Phillips #0 Screwdriver](#) (1)

Screwdriver

Give or take one size will still fit.

Step 1 — Back Plate Screws



- Remove the following Phillips 0 screws.

Step 2 — Removing back plate.



- Using an opening device; insert it into the notch, and slide the device along all sides to pop the plate out.

Step 3



- Gently pull apart on these metal tabs and the RAM will pop up. This can then be safely removed by hand.

To reassemble your device, follow these instructions in reverse order.