




Acer Aspire 5740-5780 RAM Replacement

This is a guide to remove the RAM of the Acer Aspire 5740-5780.

Written By: Gian Farrell

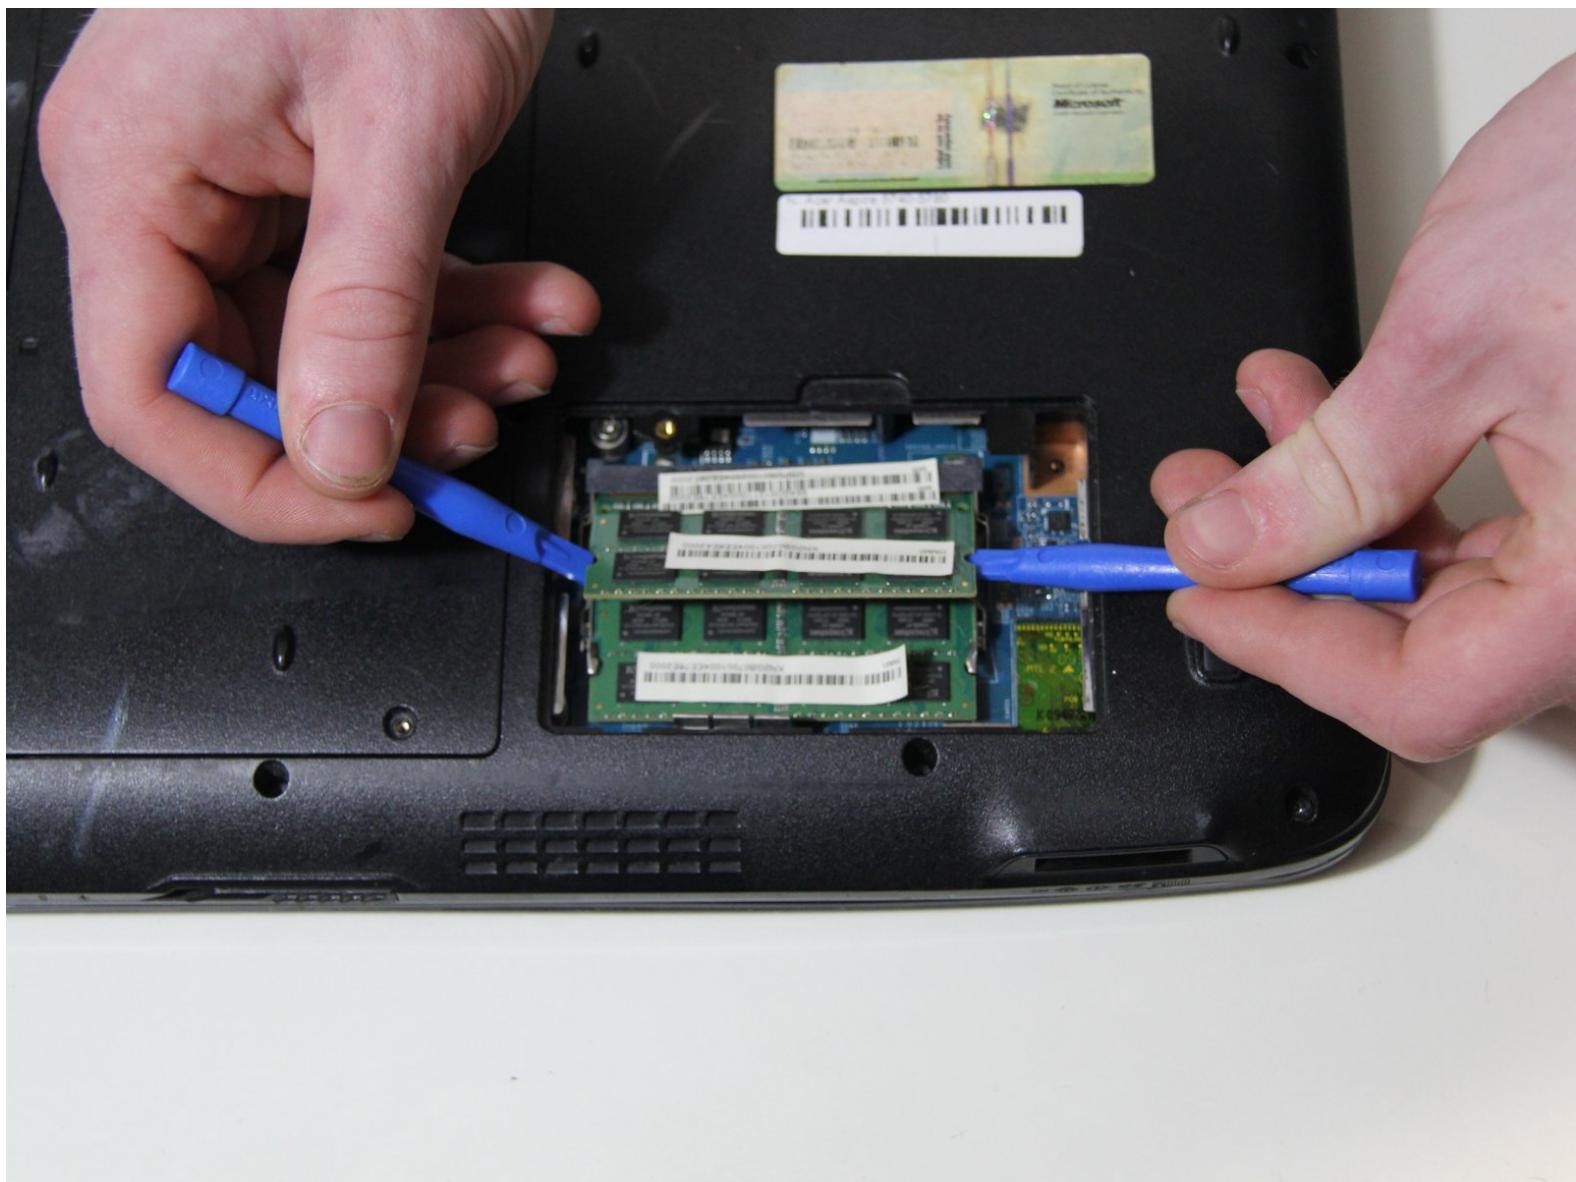

INTRODUCTION

Guide for the removal of the RAM in the Acer Aspire 5740-5780.

TOOLS:

- [grounding strap \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Prepare Acer Aspire 5740-5780 for Disassembly



- Turn the laptop off and remove the power cord.

Step 2



- Press in the SD Card or the SD Card Dummy if no SD Card is there. Remove card when it pops out.

Step 3



- Flip the laptop over on its face, so that the back is showing.

Step 4



- Put grounding strap on one of your wrists and attach the other end to a large metal object (recommended method).
- If you don't have a grounding strap an alternative approach is to touch a metal object that is either large or connected to the earth. Then avoid doing things that would accumulate static electricity on your body.

Touching the internals of your device while you aren't grounded could destroy your laptop.

Step 5 — Battery



- Unlock the battery by flipping a switch near the release latch.

Step 6



- Slide the release latch. This will release the battery from the PC.

Step 7



- Using your hands, pry the battery free of the computer.

Step 8 — RAM




- Remove the captive screw and 1 M2.5 x L8 screw from the back panel.

Step 9



- Pry the panel off with an opening tool.

Step 10

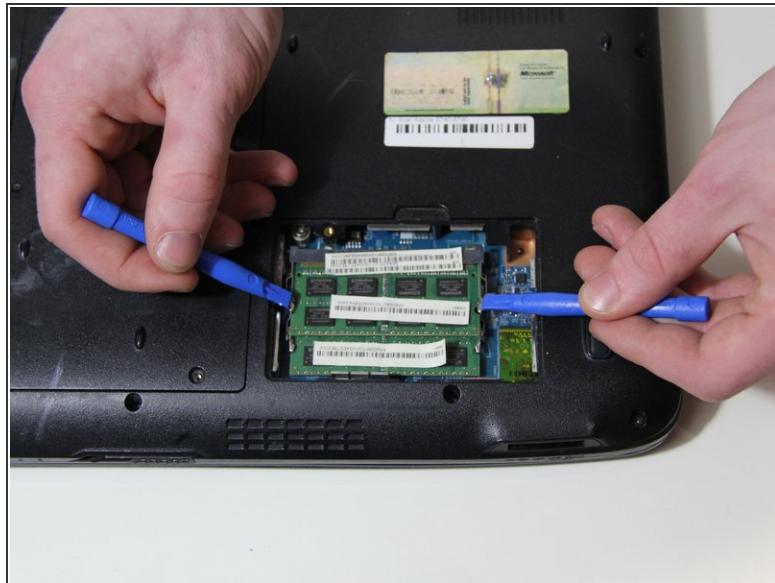

- Remove the RAM from the PC carefully.

To reassemble your device, follow these instructions in reverse order.