




Acer Aspire 5740-6378 Battery Replacement

How to remove and replace the battery of the Acer Aspire 5740-6378

Written By: Ian Rodriguez

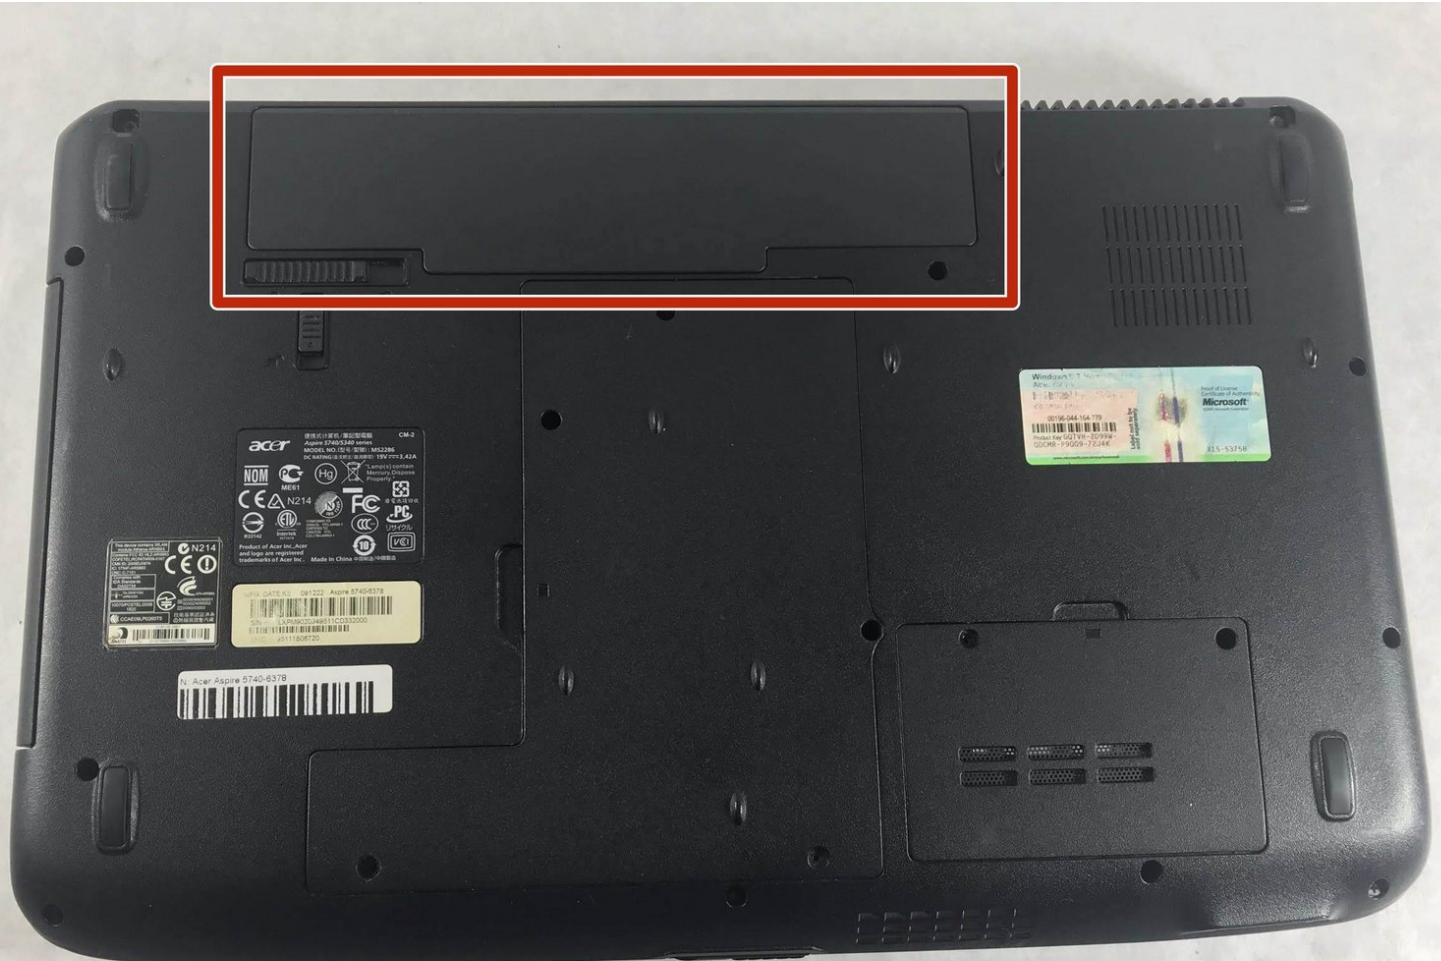

INTRODUCTION

This is a guide on how to remove and replace the battery. This guide requires no additional tools nor any pre-requisite guides to complete. The difficulty is easy and the estimated time to complete is roughly 5 minutes.

Step 1 — Battery



- Slide the locking switch into the unlocked position to ready the battery for removal.

Step 2



- Slide the release latch until the battery pops out.

Step 3



- Remove the battery now that it's been unsecured.

To reassemble your device, follow these instructions in reverse order.