



Acer Aspire 5740-6378 WiFi Card Replacement

This is a guide for removing and replacing the WiFi card of the Acer Aspire 5740-6378

Written By: Ian Rodriguez



INTRODUCTION

The WiFi card allows for the user to have internet access. If the WiFi card is broken, the Acer Aspire 5740-6378 will still work, but without the capabilities of using the internet. It is highly suggested that you remove the battery before performing this replacement.

TOOLS:

- **Phillips #0 Screwdriver** (1)
- **Spudger** (1)

Step 1 — Battery



- Slide the locking switch into the unlocked position to ready the battery for removal.

Step 2



- Slide the release latch until the battery pops out.

Step 3



- Remove the battery now that it's been unsecured.

Step 4 — WiFi Card




- Flip over the device so the back is facing upward.

Step 5




- Remove the five 8.7mm Phillips #0 screws securing the back panel.

Step 6

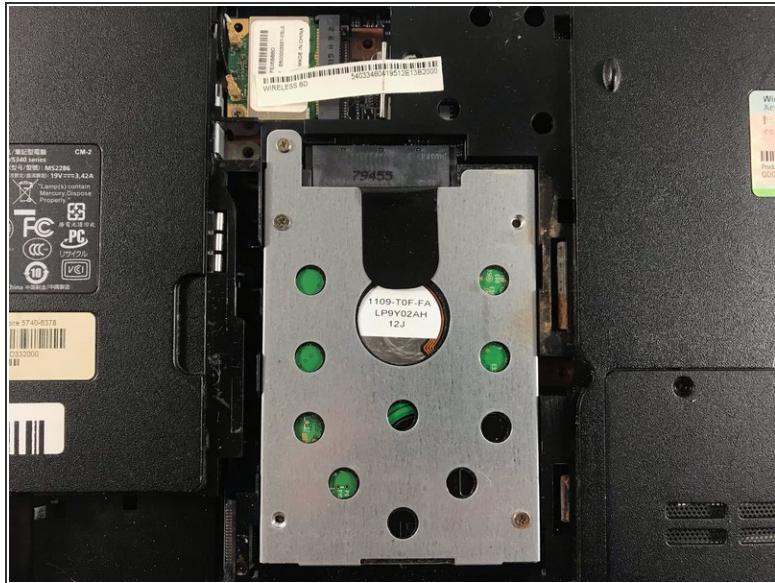


- Use the black spudger to pry open the back panel.

Step 7

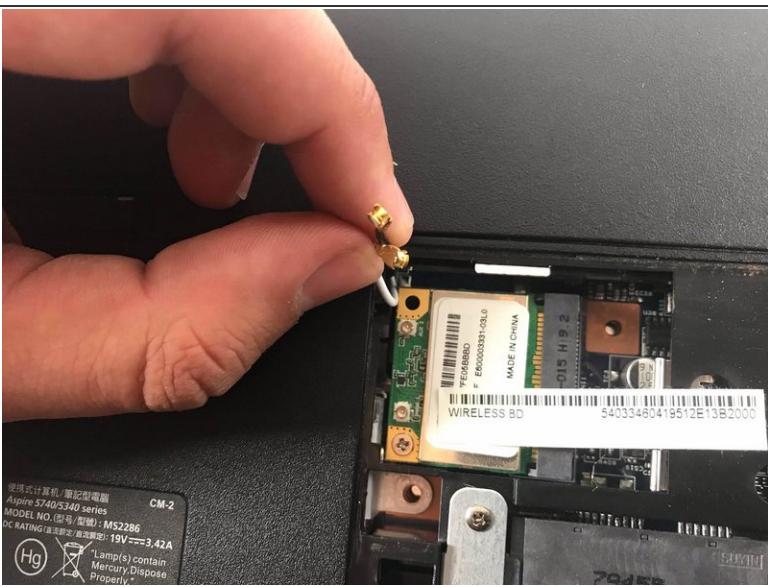

- The WiFi card should be directly above the hard drive. Detach the two coaxial connectors attached to the WiFi card by pulling on them.

Step 8

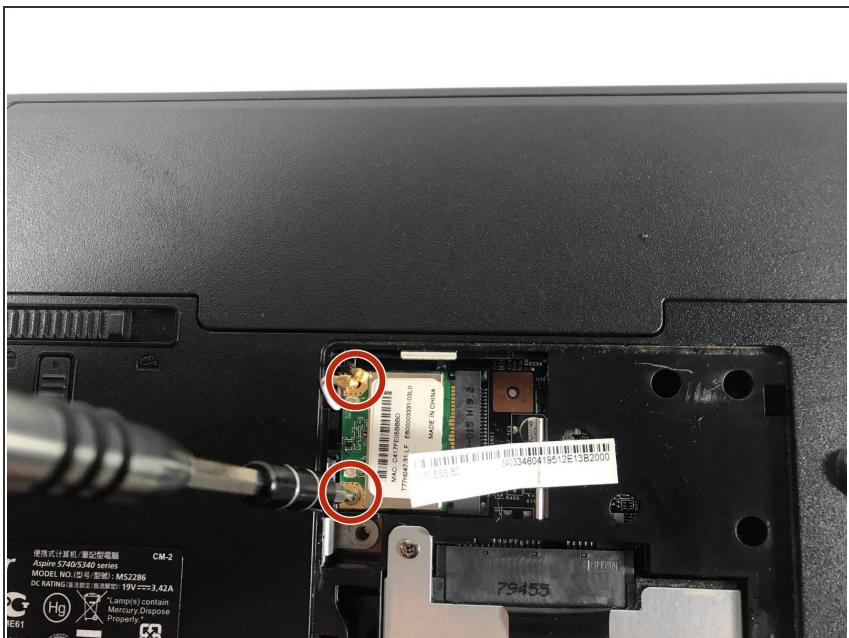

- Remove the two 3mm Phillips #0 screws securing the WiFi card.

Step 9



- Remove the WiFi card.

To reassemble your device, follow these instructions in reverse order.