




# Acer Aspire 5742 Hard Drive Removal

Replace the hard drive in your Acer Aspire 5742.

Written By: Skylar MacDonald

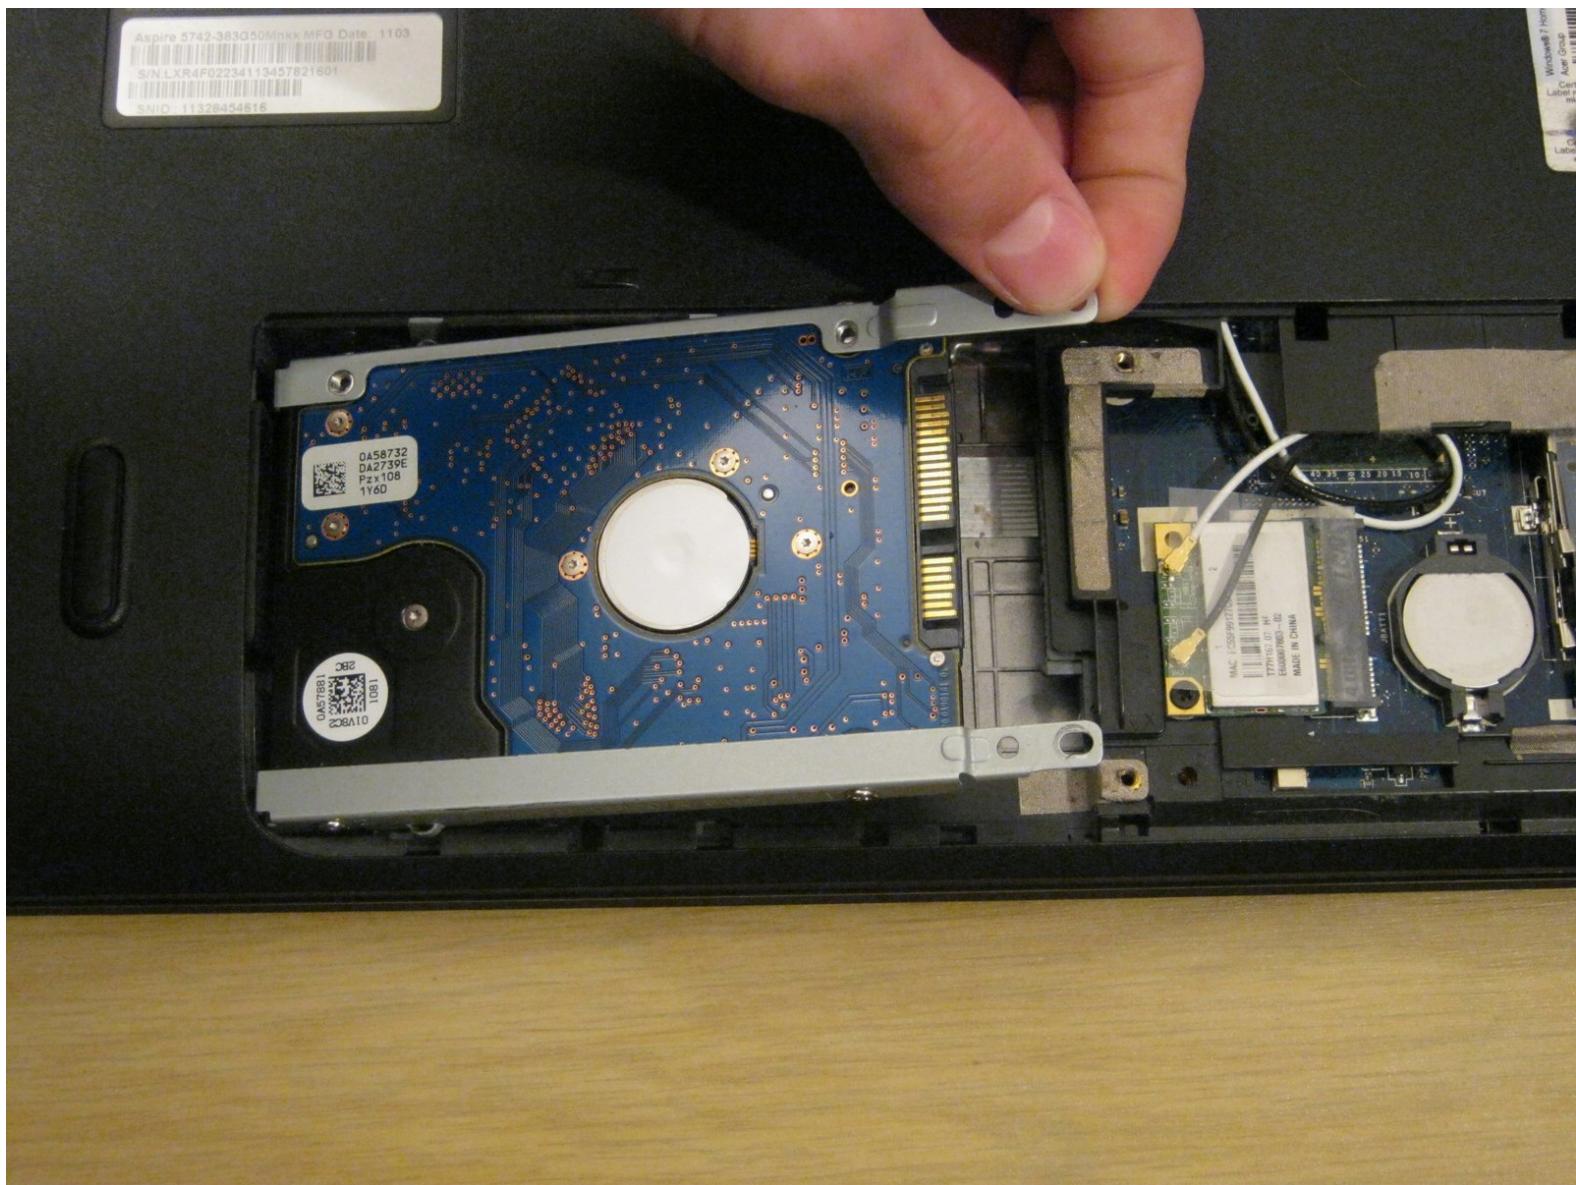

## INTRODUCTION

Removal of the hard drive is easy, but just be careful not to knock, jerk or drop it in the process as it's a delicate electromechanical device.

### TOOLS:

- Phillips #00 Screwdriver (1)
- Spudger (1)

### PARTS:

- 1 TB SSD / Upgrade Bundle (1)
- 250 GB SSD / Upgrade Bundle (1)
- 500 GB SSD / Upgrade Bundle (1)
- 2 TB SSD / Upgrade Bundle (1)

## Step 1 — Battery



- Move the battery catch to the "unlocked" position.
- Pull back the second spring-loaded battery catch until the battery pops up.
- Remove the battery.

## Step 2 — Cover Panel



- Turn the notebook around to face you.
- There are two Phillips #00 screws securing the cover panel to the rest of the notebook. Remove these screws.

## Step 3



- Use a spudger to release the panel from the plastic retaining clips keeping it in place.
- ⚠ Do not apply too much force, or you may break the clips.
- Remove the panel and set it aside.

## Step 4 — Hard drive



- Unscrew the Phillips #00 screw which retains the hard drive in place.
- Gently slide the hard drive to the left in order to disengage the SATA connectors.
- ⓘ It may be quite stiff, in which case you can ease the hard drive out of the SATA connectors by inserting a spudger between the hard drive and the connector block.
- Lift the drive out of the notebook.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-02-17 08:32:59 AM (MST).

