



# Acer Aspire 5742 Series Hard Drive Replacement

How to replace a Acer Aspire 5742-6674 hard drive.

Written By: Michael Deckard





## PARTS:




- [iFixit Opening Tools \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)

## Step 1 — Hard Drive



- Place laptop upside down and push battery lock slider to the left to unlock. Lift battery out.

## Step 2

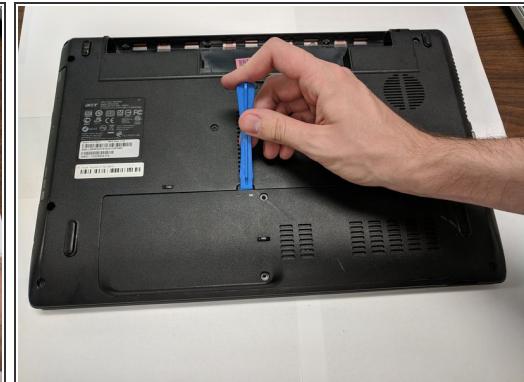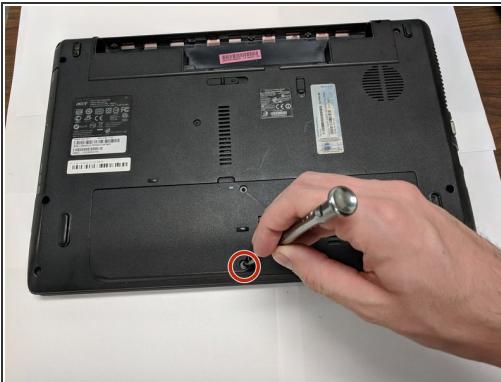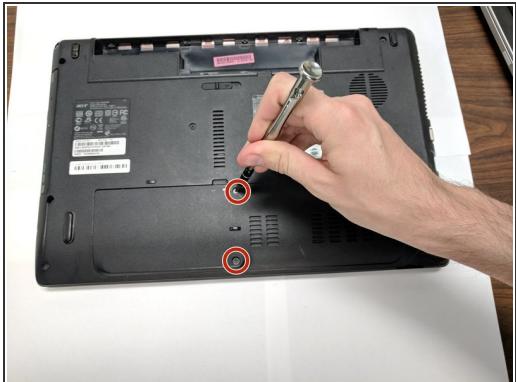

- Remove two screws to take the cover off of the bottom of the laptop.

## Step 3



- With a plastic opening tool slide the drive over and remove it.

To reassemble your device, follow these instructions in reverse order.