



Acer Aspire 5742 Series Keyboard Replacement

How to replace a Acer Aspire 5742-6674 keyboard.


Written By: Michael Deckard



 **TOOLS:**


- [iFixit Opening Tools \(1\)](#)

Step 1 — Keyboard

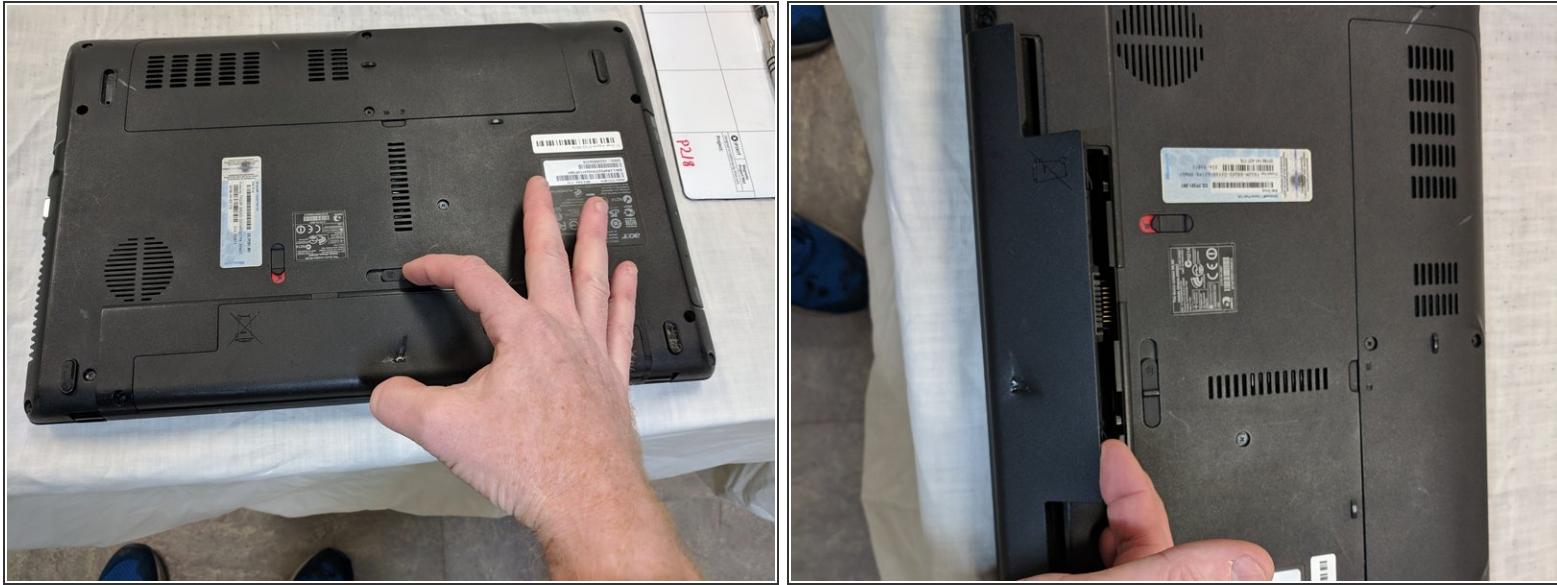

- Place laptop upside down and push battery lock slider to the left to unlock. Lift battery out of case.

Step 2

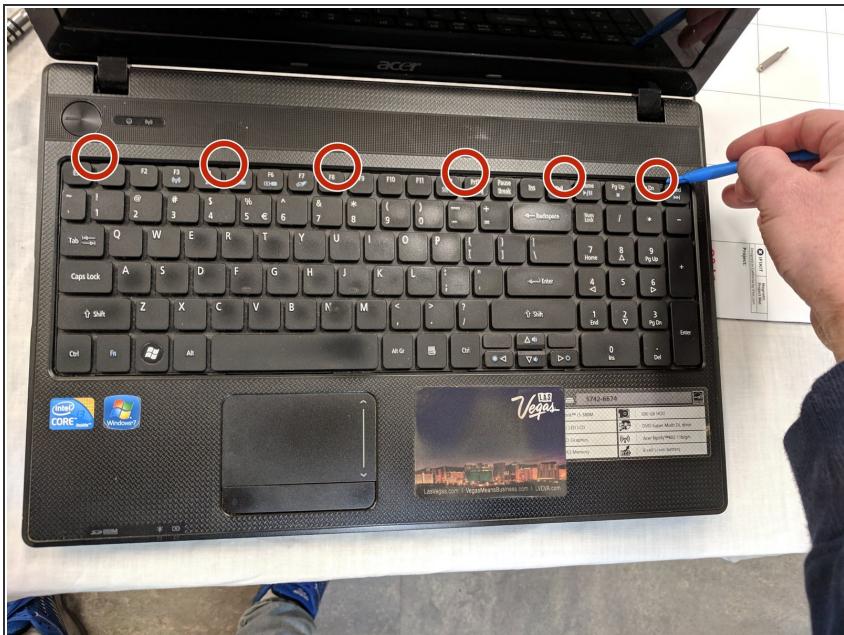


- Open laptop then use the plastic opening tool to push in the 6 tabs at top of keyboard.

Step 3



- Gently lift up keyboard to access the keyboard connection ribbon. Use plastic opening tool to pop the ribbon cable lock open.

Step 4

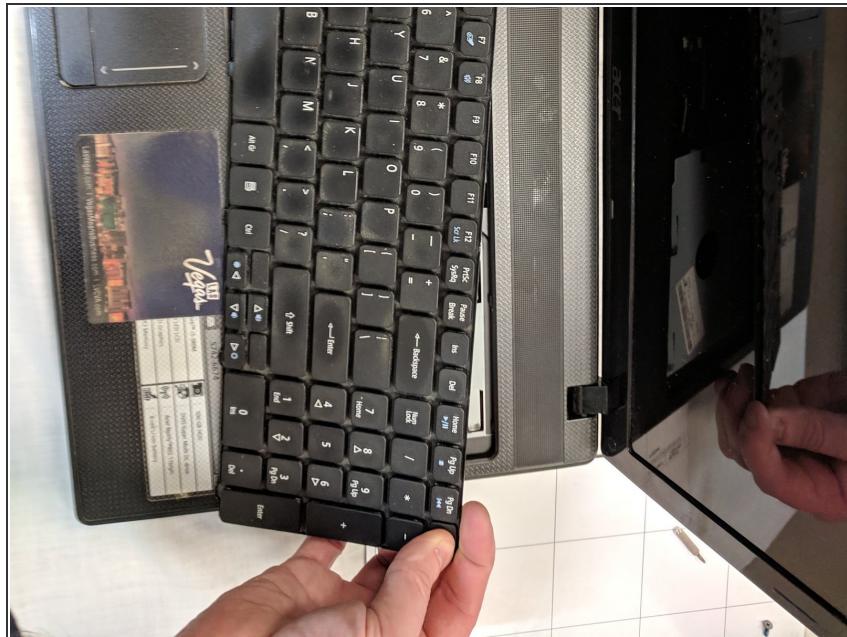

- Once keyboard ribbon cable is unlocked, pull cable free and remove keyboard.

To reassemble your device, follow these instructions in reverse order.