



Acer Aspire 5742 Series Optical Drive Replacement

How to replace a Acer Aspire 5742-6674 optical drive.

Written By: Michael Deckard



 **TOOLS:**


- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Optical Drive




- Place laptop upside down and push battery lock slider to the left to unlock. Lift battery out.

Step 2

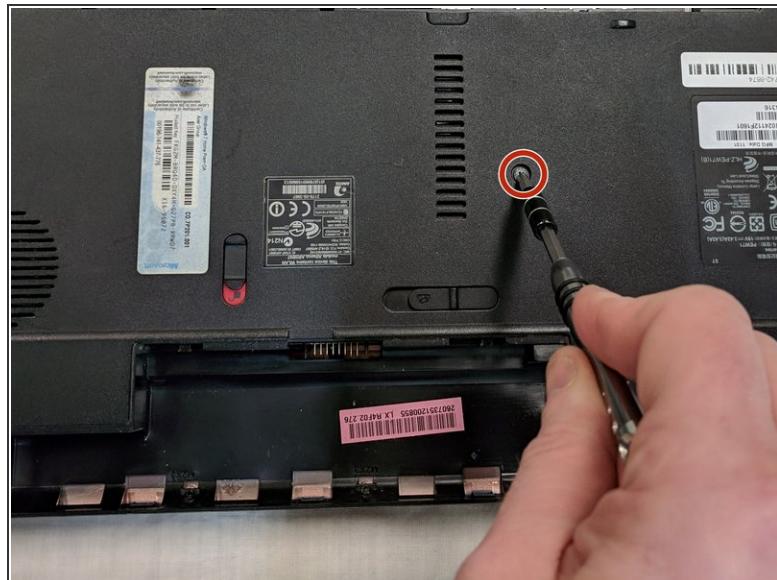

- Flip the laptop over so that the bottom is facing upwards. Unscrew one screw.

Step 3

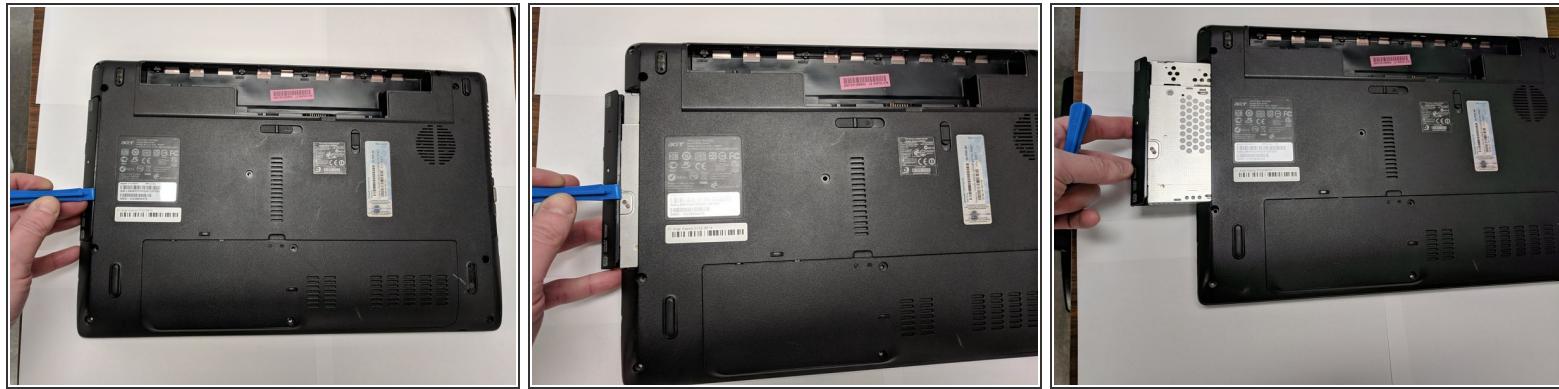

- Use a plastic opening tool to pry the CD tray out. Pull out CD tray.

To reassemble your device, follow these instructions in reverse order.