



Acer Aspire 5750-6667 Optical Drive Replacement

This guide will guide you through the process of removing your Acer Aspire 5750-6667 optical drive for replacement.

Written By: Chelsea Taylor



This document was generated on 2019-09-18 01:16:40 AM (MST).

INTRODUCTION

The optical drive is where CDs and DVDs are inserted and read in a laptop. Optical drives have various moving parts so they can malfunction or stop working properly. The optical drive can be removed easily in order to replace it.

TOOLS:

- Tweezers (1)
- Phillips #0 Screwdriver (1)

Step 1 — Battery



⚠ Unplug the charging cable from the laptop and the wall. Failure to disconnect the charging cable could result in electric shock.

- Turn the laptop over.
- Locate the orange switch next to the battery.

Step 2



- Using a small tool such as tweezers or a pen, slide the orange switch completely to the left to unlock the battery.
- While holding the orange switch in place, lift the battery by the lip and pull it away from the laptop.

Step 3 — Optical Drive



- Locate the black screw just above the battery.
- Remove the black screw holding the optical drive in place by using a Phillips #0 screwdriver.

Step 4



- Pull the optical drive free from the laptop.

To reassemble your device, follow these instructions in reverse order.