



Acer Aspire 5750-6677 Battery Replacement

Replacement

The goal of this guide will be to replace the battery of the Acer Aspire 5750-6677.

Written By: Zachary Ferreira



INTRODUCTION

The goal of this guide is to help replace your Acer Aspire 5750-6677 battery. An Acer Aspire 5750-6677 battery is 10.8V with a battery capacity of 6600mAh. The battery needs to be replaced if it holds less than 25% of its maximum charge. It can also be replaced if there is any damage to it, such as water damage. The main advantage of replacing your battery is an increase in charge capacity. This process is very easy and requires no special skills. A tool you will need is a Philips #0 screwdriver.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Battery Replacement

- Flip the laptop over.




Step 2

- Place a screw driver in the orange tab then slide to the right.



Step 3

- Lift and remove the battery.

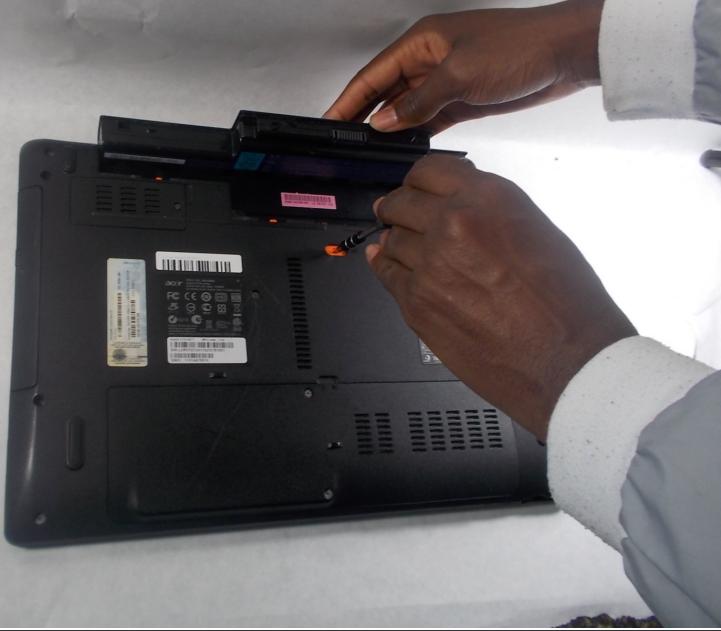

To reassemble your device, follow these instructions in reverse order.