



Acer Aspire 5750-6677 Hard Drive Replacement

The goal of this guide is to replace the hard drive inside your Acer Aspire 5750-6677.

Written By: Zachary Ferreira



INTRODUCTION

The goal of this guide is to replace the hard drive of your Acer Aspire 5750-6677. The hard drive is what allows the computer to store data.

TOOLS:


- [Phillips #0 Screwdriver \(1\)](#)

Step 1 — Battery Replacement



- Flip the laptop over.

Step 2

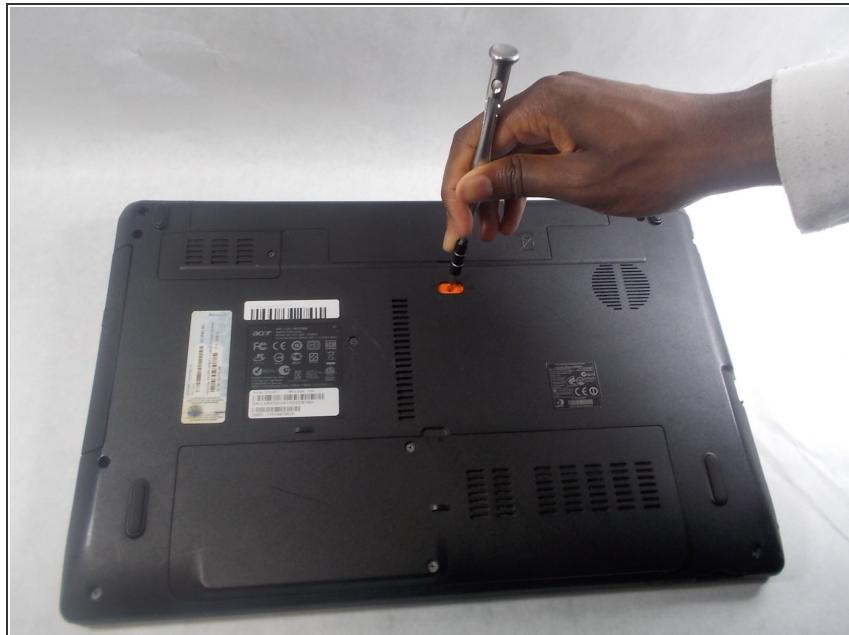

- Place a screw driver in the orange tab then slide to the right.

Step 3



- Lift and remove the battery.

Step 4 — Hard Drive



- Flip the device over to expose the screws.
- Remove the two highlighted screws with the Phillips #0 screwdriver.

Step 5



- Remove the highlighted cover.
- This will expose the hard drive.

Step 6



- Using the Phillips #0, remove the two screws holding the hard drive in.

Step 7



- Pull the tab and lift up to remove the hard drive.

To reassemble your device, follow these instructions in reverse order.