


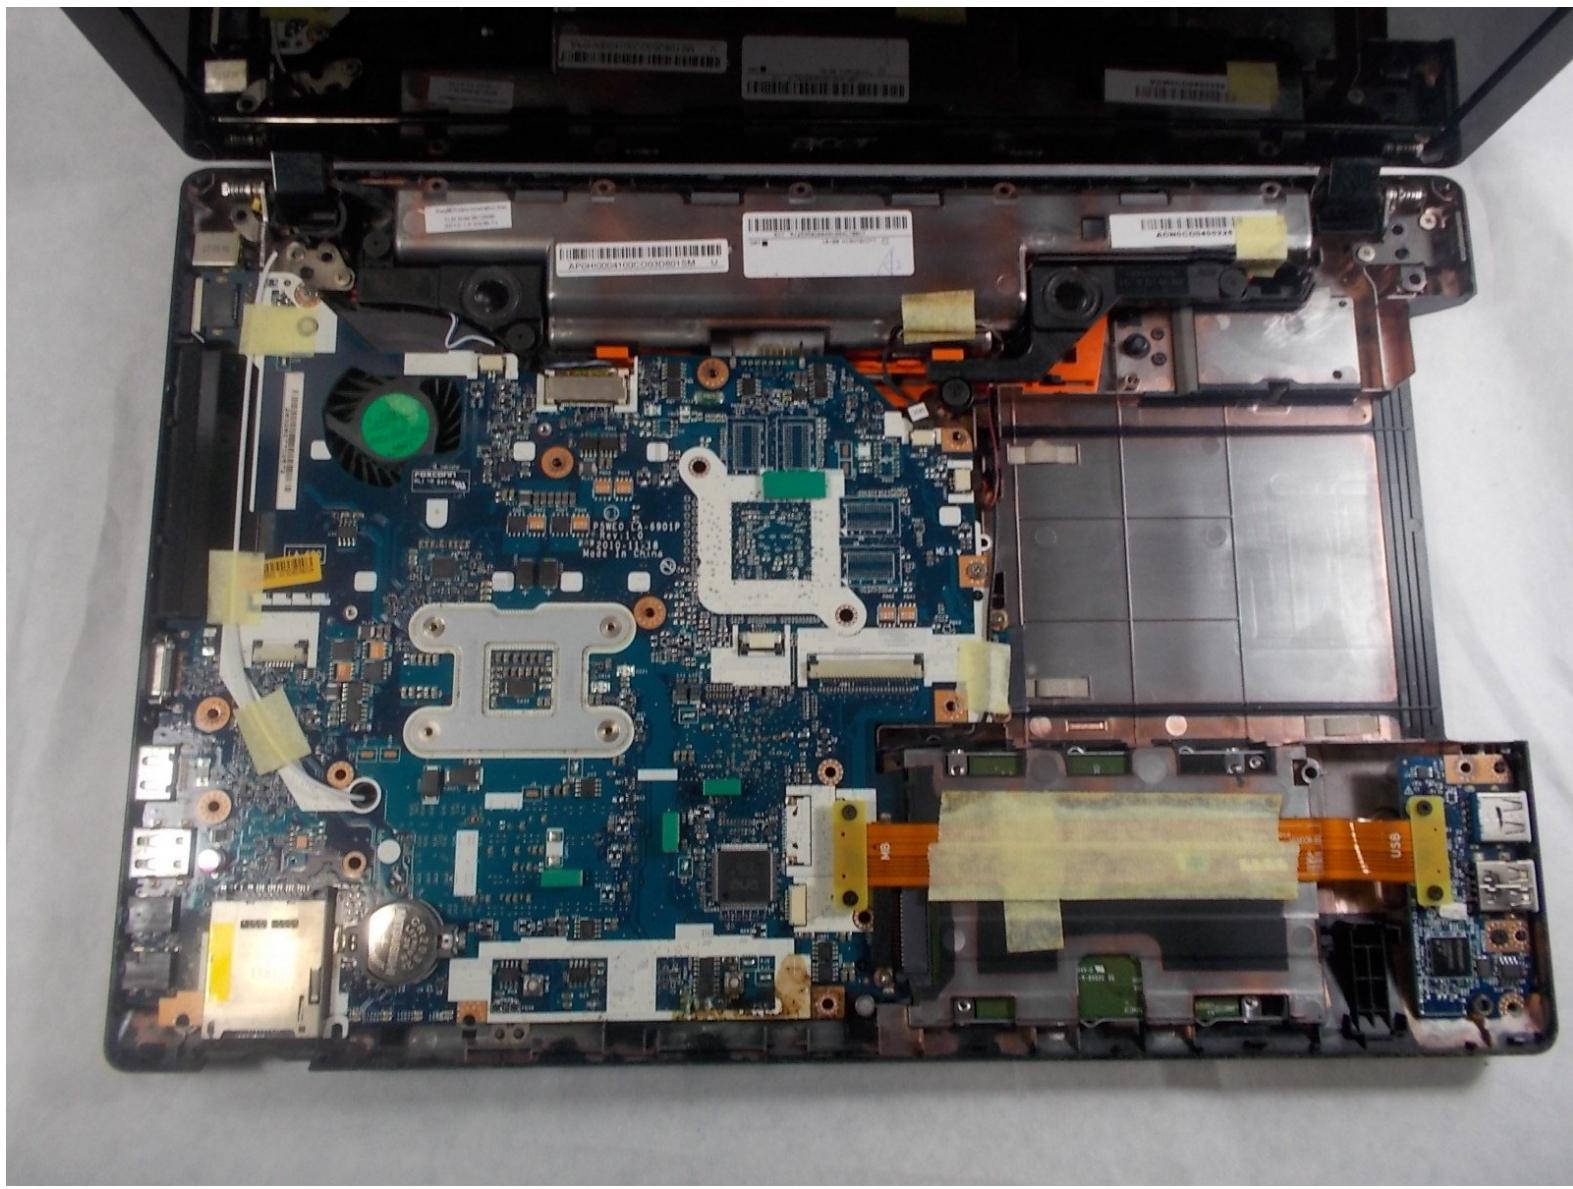

# Acer Aspire 5750-6677 Motherboard Replacement

This guide will describe how to remove and replace the motherboard in the Acer Aspire 5750-6677 laptop.

Written By: Dean Smith



This document was generated on 2020-04-06 06:46:04 AM (MST).

## INTRODUCTION

The purpose of this guide is to replace the motherboard of your Acer Aspire 5750-6677. The motherboard enables communication between the different parts of the computer such as the CPU and memory.

### TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

## Step 1 — Battery Replacement

- Flip the laptop over.



## Step 2

- Place a screw driver in the orange tab then slide to the right.



## Step 3



- Lift and remove the battery.

## Step 4 — Hard Drive



- Flip the device over to expose the screws.
- Remove the two highlighted screws with the Phillips #0 screwdriver.

## Step 5



- Remove the highlighted cover.
- This will expose the hard drive.

## Step 6



- Using the Phillips #0, remove the two screws holding the hard drive in.

## Step 7




- Pull the tab and lift up to remove the hard drive.

## Step 8 — Motherboard




- Start by flipping the device over to expose the screws.
- Remove all highlighted screws with the Phillips #0 screwdriver.

## Step 9

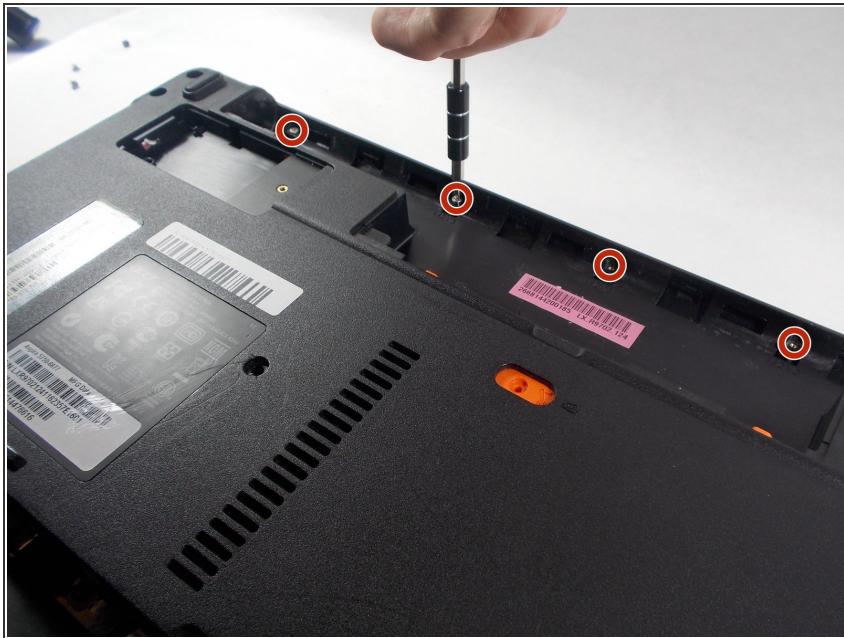


- Using a Phillips #0, remove the screws found under the battery.

## Step 10

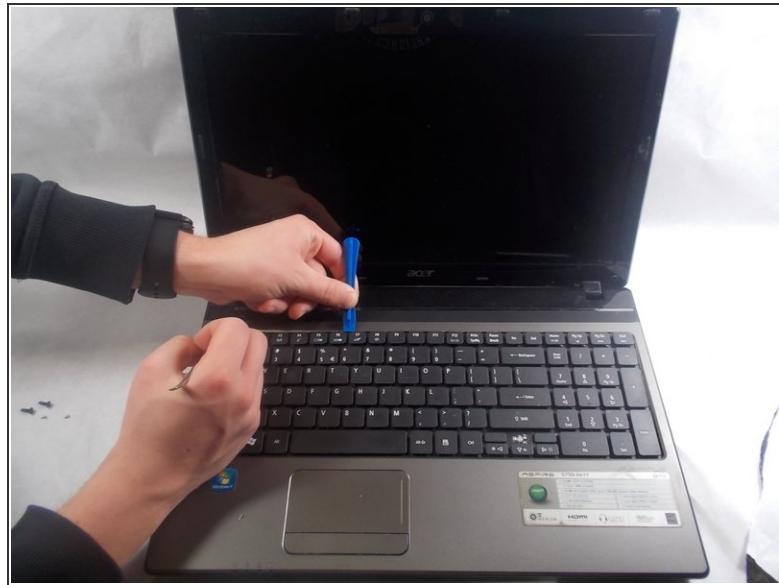

- Flip the laptop back around so the Acer logo is facing upwards.
- Open the laptop and using the iFixit opening tool, press the tabs in at the very top of the keyboard, in order to remove the keyboard.

## Step 11

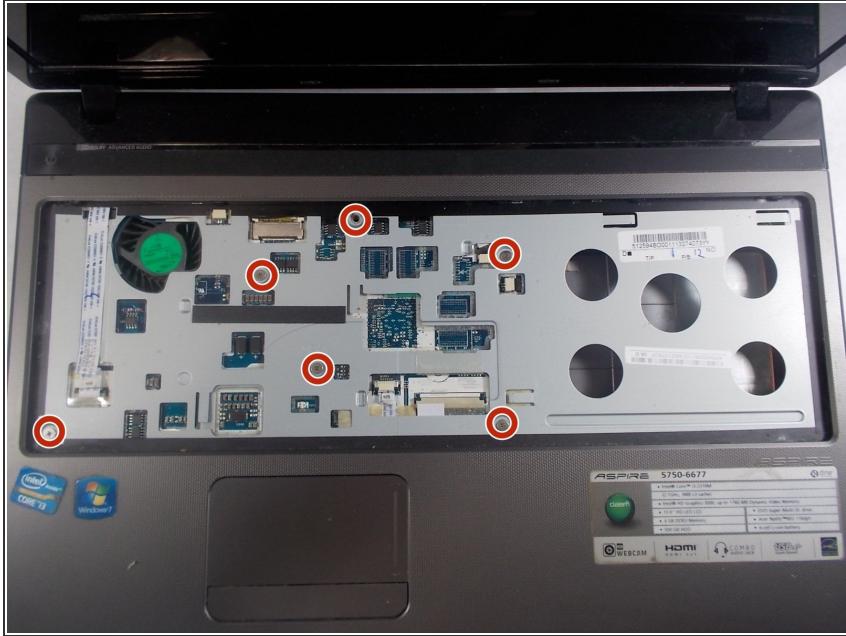

- Use the Phillips #0, to remove all six highlighted screws.
- Pull the top off of the keyboard to expose the motherboard.

## Step 12



- Remove the seven highlighted screws using the Phillips #0 screwdriver.
- Detach any wires or cables that are attached to the motherboard.
- Remove the motherboard.

To reassemble your device, follow these instructions in reverse order.