


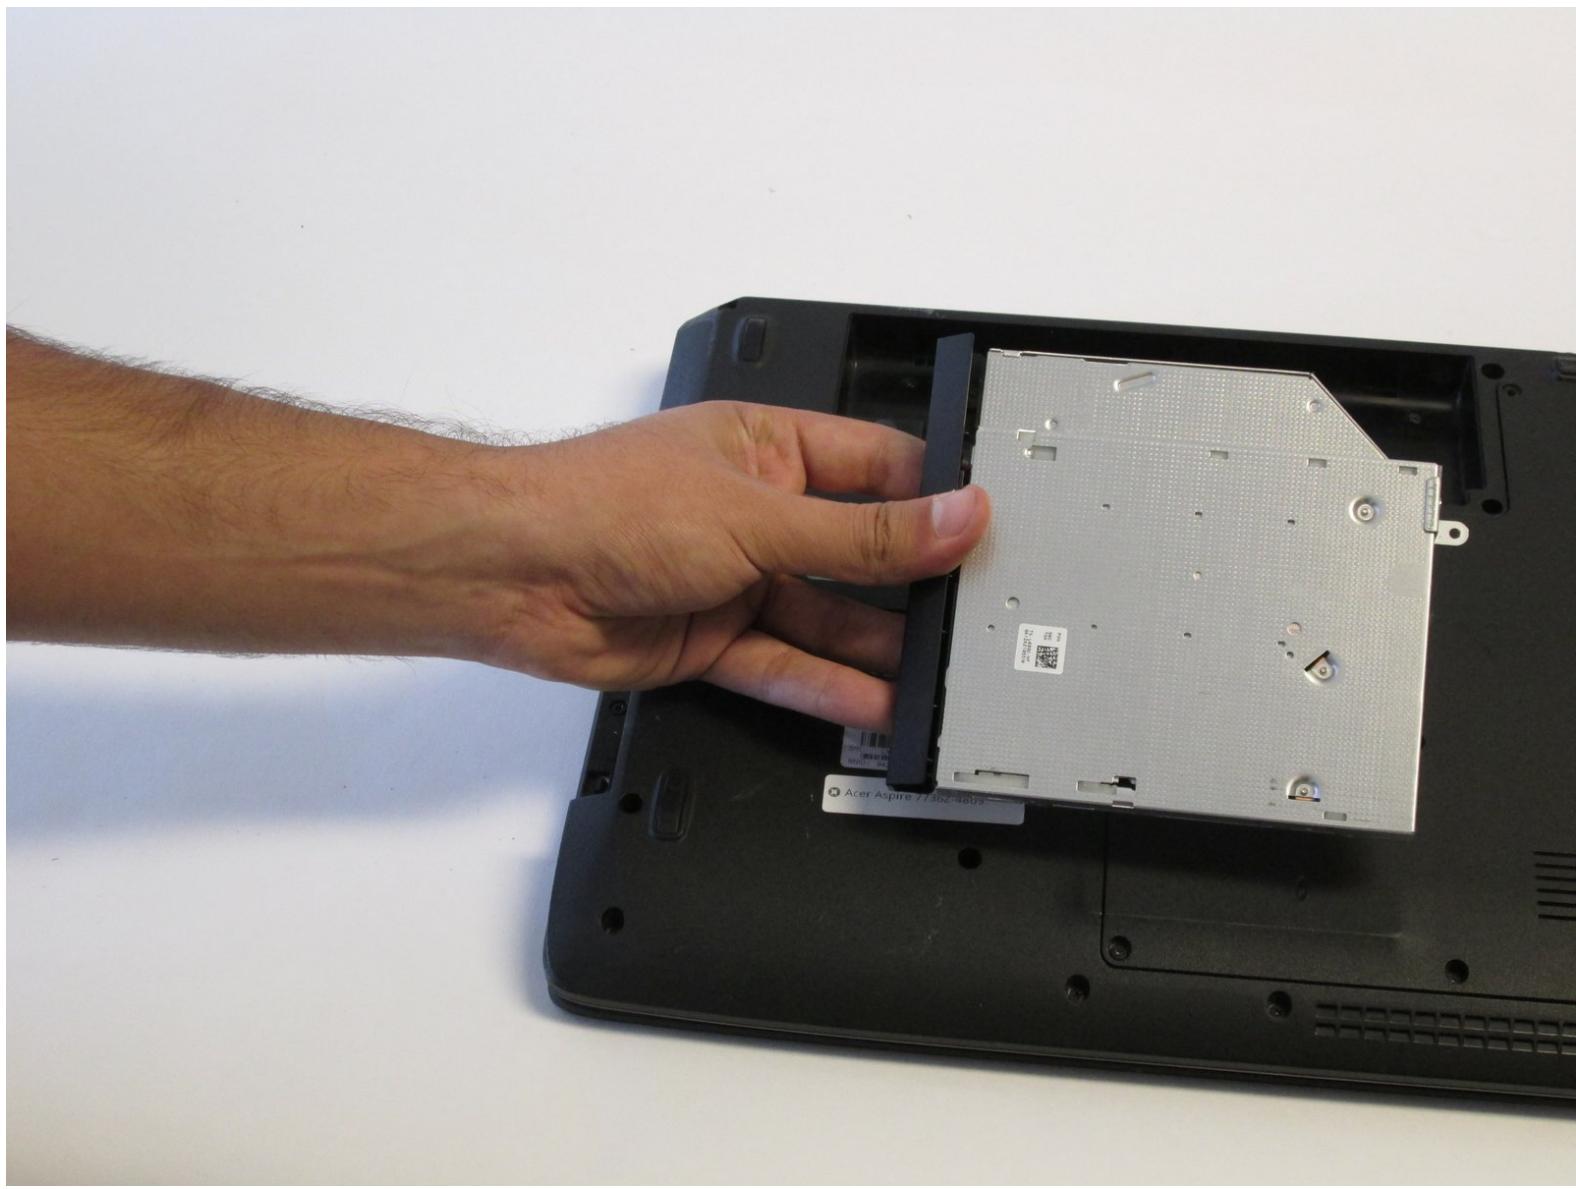

Acer Aspire 7736Z-4809 CD/DVD Disk Drive Replacement

CD/DVD disk drive does not read the disk properly. Replacing the CD/DVD disk drive may solve this problem.

Written By: Pnithan Jantararakolica



This document was generated on 2019-09-22 04:42:14 PM (MST).

INTRODUCTION

Before replacing the CD/DVD disk drive, make sure the replacement drive is compatible with the laptop.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Acer Aspire 7736Z-4809 Repair Preparation



- Unplug and power off the laptop.
- *i* If the battery is still connected to the laptop, remove the battery.

Step 2




- Flip over the laptop so that the back panel of the laptop is facing up.

Step 3 — CD/DVD Disk Drive



- Use the Phillips #1 screwdriver to remove the 6.5mm Phillips #1 screw.

Step 4

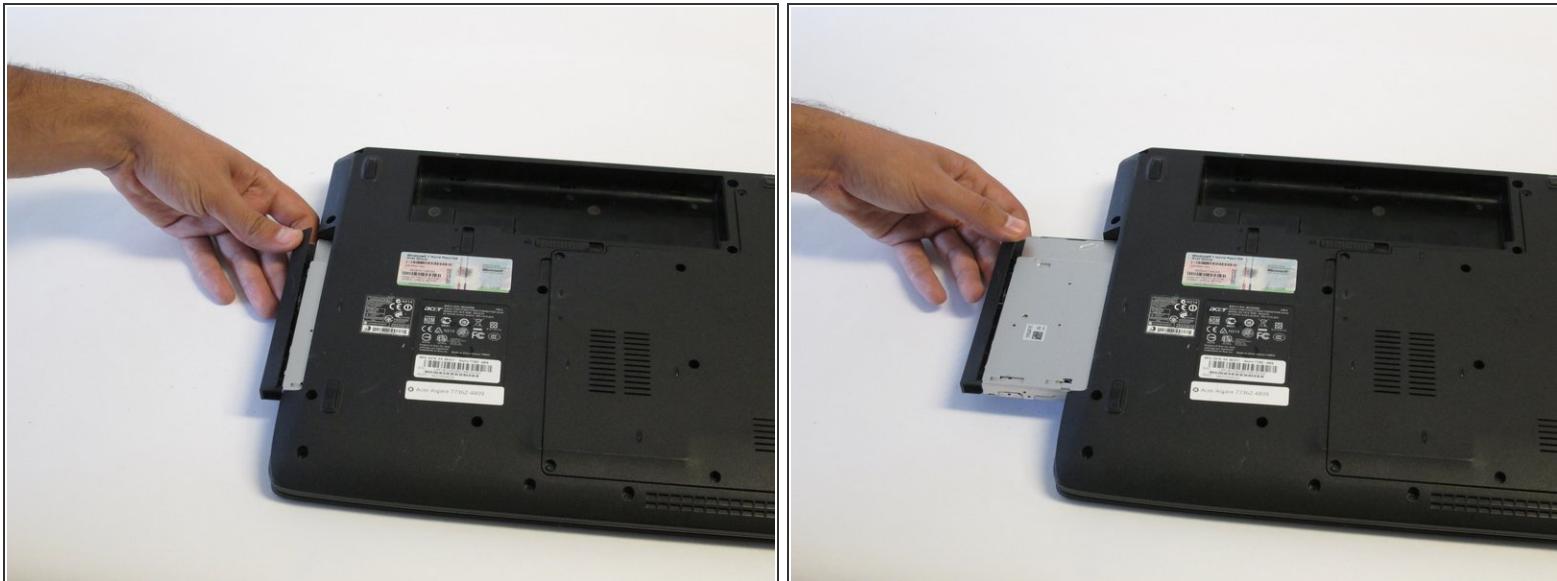

- Remove the CD/DVD disk drive from the slot.

To reassemble your device, follow these instructions in reverse order.