



Acer Aspire E 11 Battery Replacement

This guide will show you how to replace the battery on your Acer Aspire E 11.

Written By: Carlos Rodriguez



This document was generated on 2019-09-23 01:53:04 AM (MST).


INTRODUCTION

This guide walks you through the proper steps to disconnect and remove the battery from the Laptop.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (2)

Step 1 — Lower Case

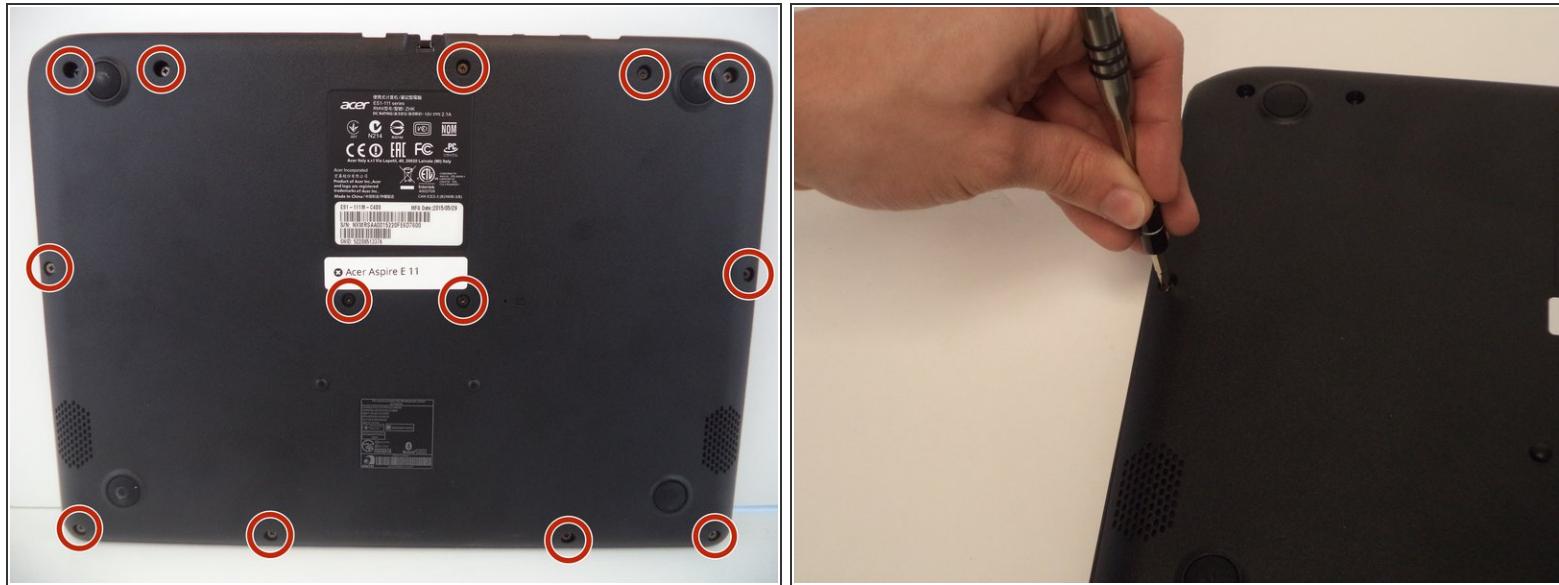


- Unscrew the thirteen 6.2mm Phillips #1 screws located on the bottom of the device.

Step 2




- Lift the back panel using a plastic opening tool. Slowly make your way around the device until the back panel comes off.

Step 3 — Battery

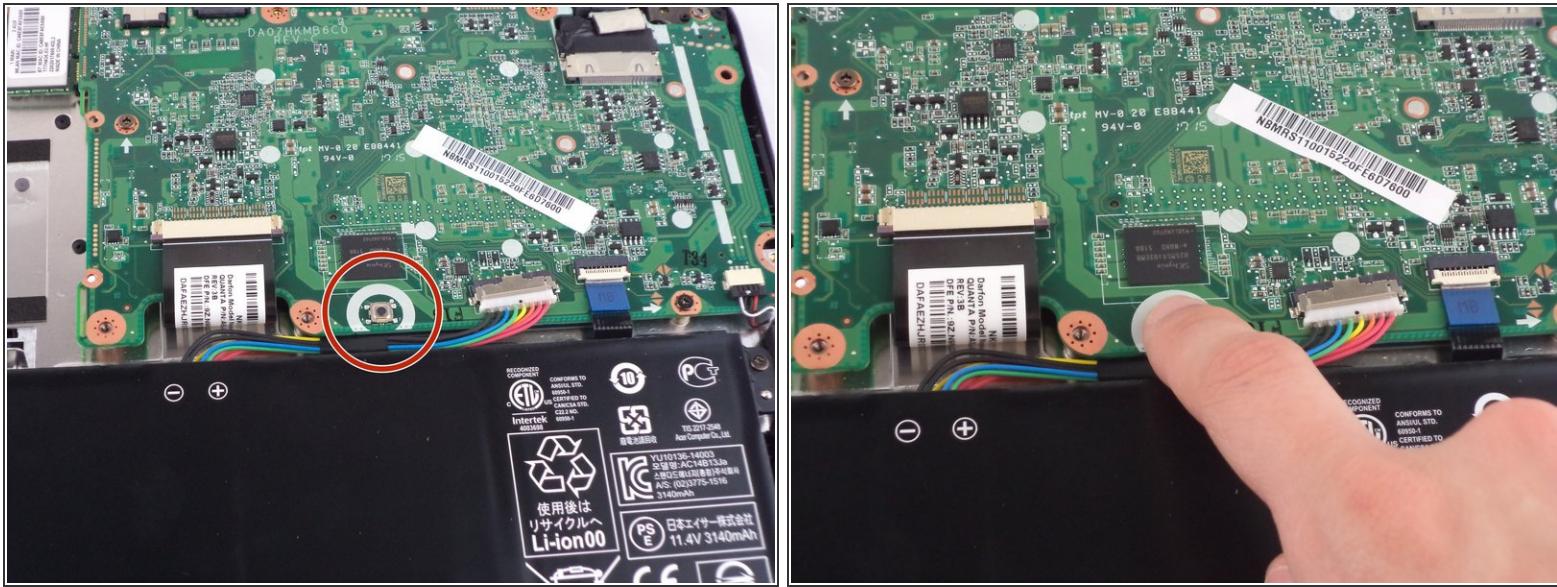

- Press and hold the small black button located on the motherboard just above the battery for five seconds.

Step 4

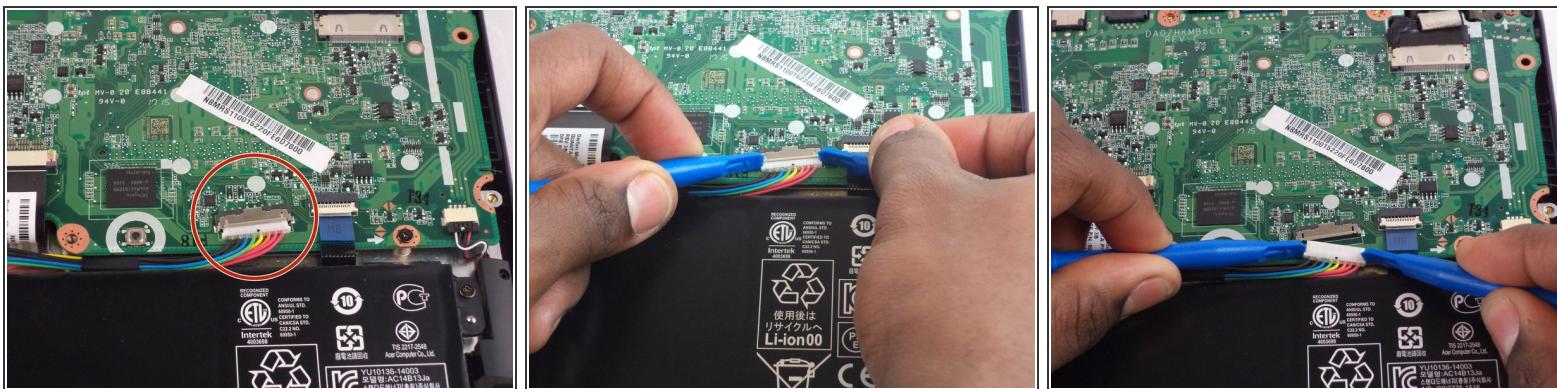

- Using two plastic opening tools tightly grab the connector going from the battery to the motherboard and pull to unplug.

Step 5



- Unscrew two 6.2 mm Phillips #1 screws on the right and left sides of the battery.

Step 6



- Carefully remove the battery by lifting it out of the casing.

To reassemble your device, follow these instructions in reverse order.