



Acer Aspire E1-470P-6659 LCD Panel & Faceplate Replacement

Acer Aspire E1-470P-6659 LCD and faceplate replacement guide.

Written By: Joel Humes



INTRODUCTION

Use this guide to replace the LCD and faceplate of your Acer Aspire E1-470P-6659.

TOOLS:

- [Spudger](#) (1)
- [Tweezers](#) (1)
- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Fingers](#) (1)

Step 1 — Battery




- Turn off the laptop and disconnect all device cords.

Step 2




- Flip the laptop over so the bottom is facing you.

Step 3

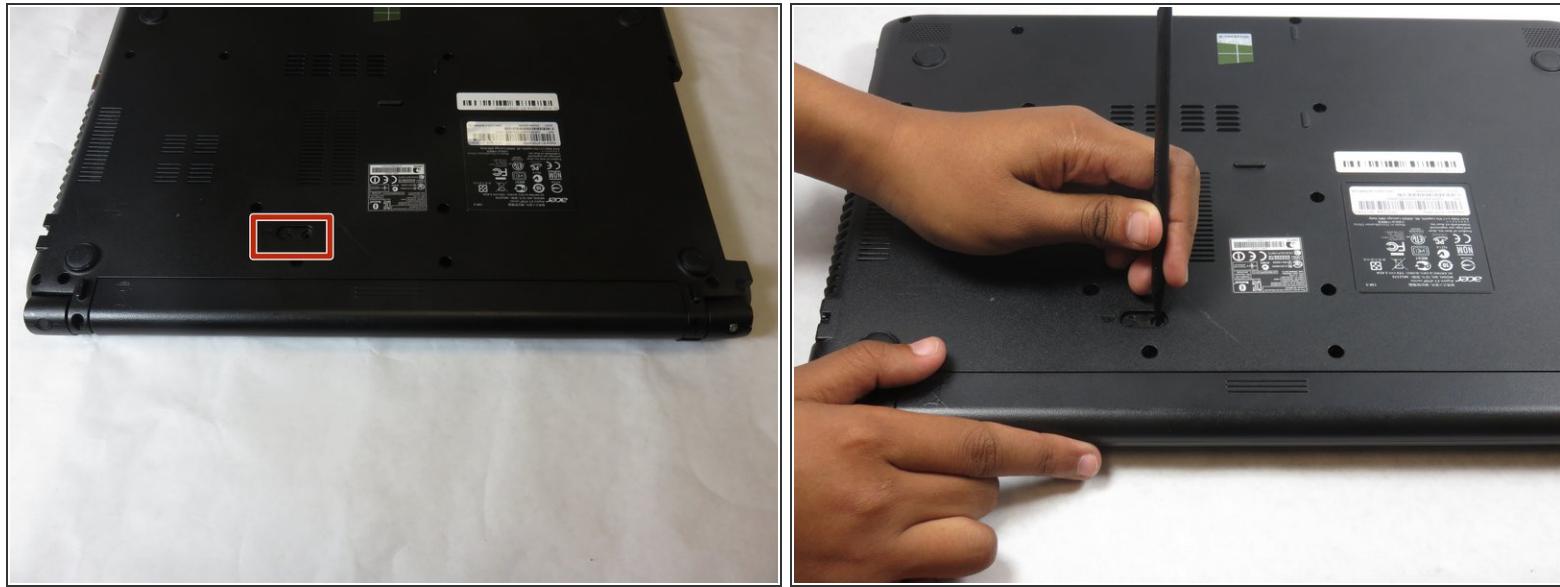


- Insert the tip of the Plastic #3 Spudger into the battery release switch.

Step 4

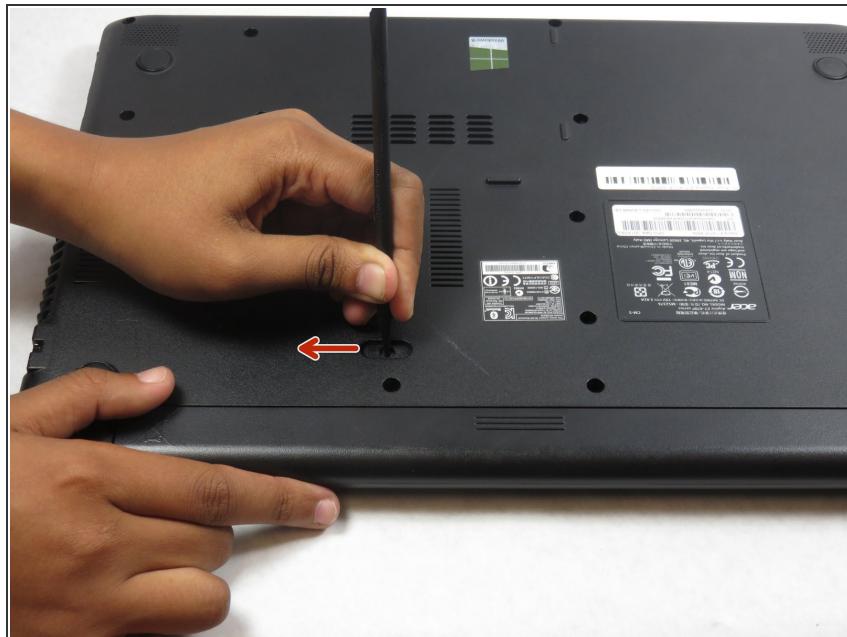

- Press down and slide to the right and hold in that position.

Step 5

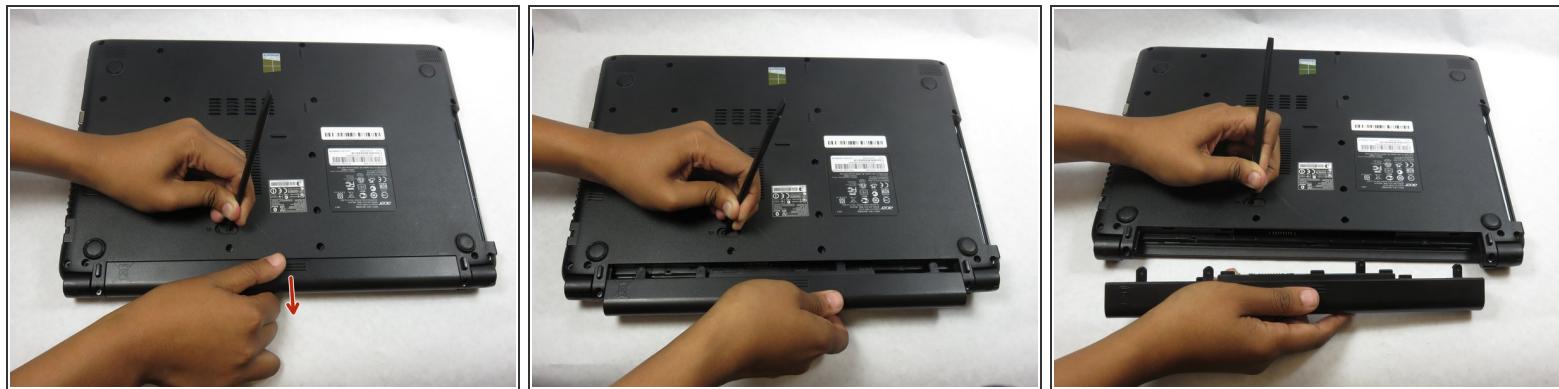

- Take your other hand to slide the battery away from the laptop to remove.

Step 6 — LCD Panel & Faceplate



- Locate the screws connected to the hinge of the laptop. Small, black stickers hide them from immediate view.

Step 7



- On both corners, use tweezers to remove small plastic sticker hiding the screws.
- Remove screws using Phillips #0 screwdriver.

Step 8



- Turn the laptop over and open it up.
- Using a prying tool, run along all edges of the display to pry the front face plate from the cover.
- Use your fingers to pull the LCD panel and faceplate from the backing.

Step 9



- LCD with faceplate should separate, be careful not to pull completely away because there is a cable still attached to the display.
- Carefully peel tape away from cable lead and separate cable from LCD panel.

Step 10



- Remove the LCD Panel and faceplate from the device.

To reassemble your device, follow these instructions in reverse order.