



# Acer Aspire E1-470P-6659 Battery Replacement

How to replace the battery in an Acer Aspire E1-470P-6659

Written By: Faith Lobaton



---

## INTRODUCTION

If you have battery problems or need to remove your battery before replacing other parts of the laptop, use this guide to remove and replace your battery.

---

### **TOOLS:**

- [Spudger](#) (1)
-

## Step 1 — Battery




- Turn off the laptop and disconnect all device cords.

## Step 2




- Flip the laptop over so the bottom is facing you.

### Step 3

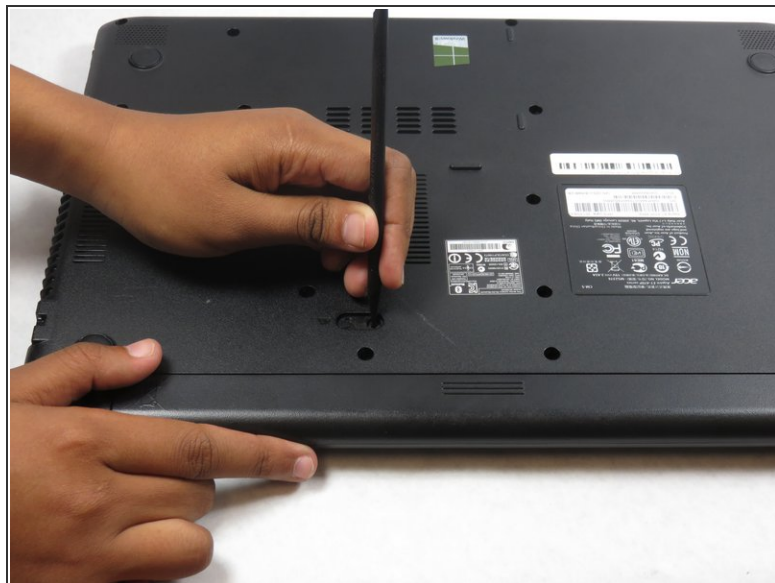

- Insert the tip of the Plastic #3 Spudger into the battery release switch.



### Step 4

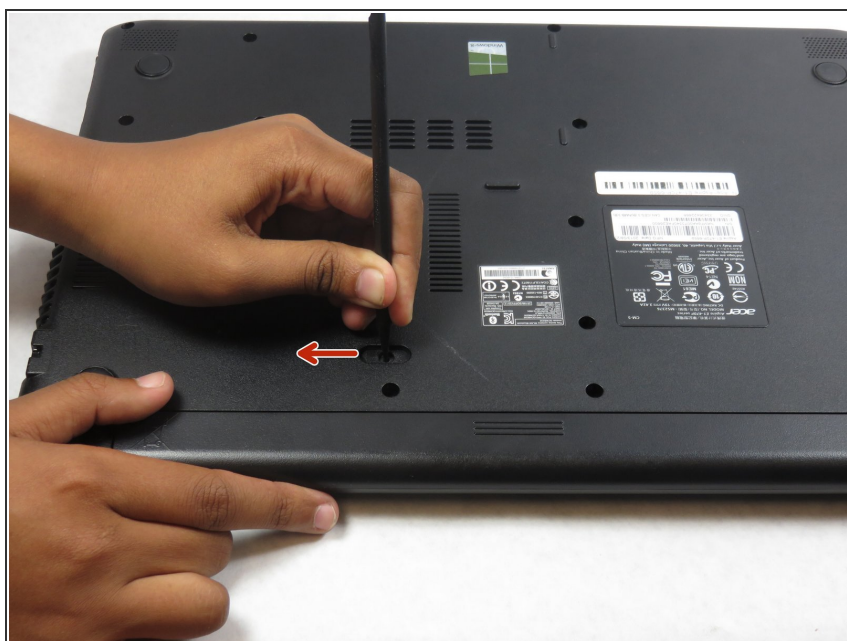

- Press down and slide to the right and hold in that position.



## Step 5

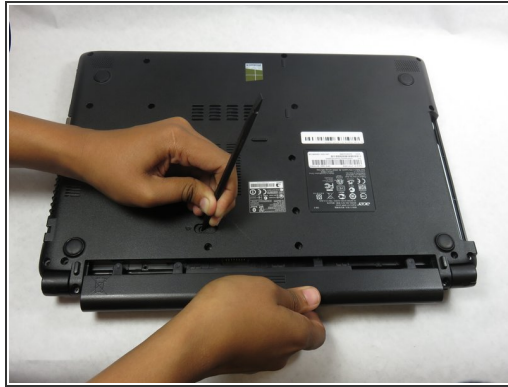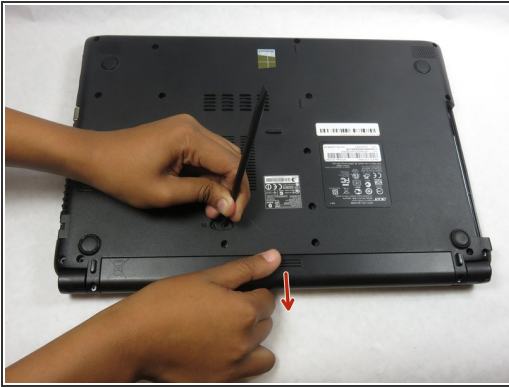

- Take your other hand to slide the battery away from the laptop to remove.

To reassemble your device, follow these instructions in reverse order.