



Acer Aspire E1-510P-4637 Battery Replacement

This guide will outline the procedure to remove the laptop's battery.

Written By: Caleb Lindsay



 **TOOLS:**


- [Spudger \(1\)](#)

Step 1 — Battery



- To release the battery, depress the battery release with a nylon spudger. Hold the latch down and slide it over.

Step 2

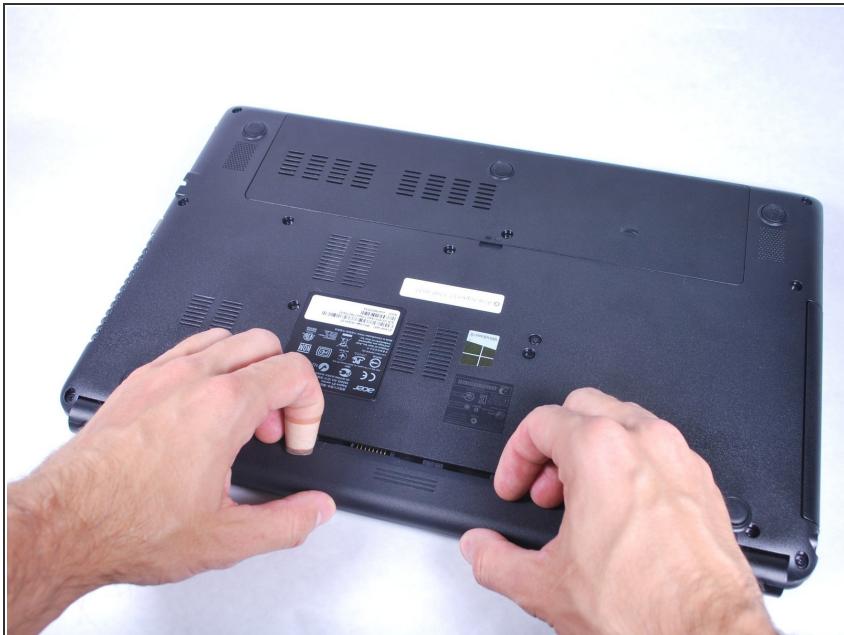

- Firmly grab hold of the battery and slide it out of the laptop.

To reassemble your device, follow these instructions in reverse order.