



Acer Aspire E1-510P-4637 RAM Replacement

This guide will go through the steps involved to replace the laptops RAM.

Written By: Caleb Lindsay



This document was generated on 2019-09-27 11:33:21 PM (MST).

 **TOOLS:**

- **Spudger** (1)
- **Phillips #1 Screwdriver** (1)

Step 1 — Battery



- To release the battery, depress the battery release with a nylon spudger. Hold the latch down and slide it over.

Step 2



- Firmly grab hold of the battery and slide it out of the laptop.

Step 3 — RAM



- Remove the M2.5x8 screw with a PH1 screwdriver.

Step 4



- Use the plastic opening tool to pop up off the back cover.

Step 5



- Use your fingers to pinch the retaining latch. This will free the RAM.

Step 6



- Rotate the RAM sticks up and slide the RAM out.

To reassemble your device, follow these instructions in reverse order.