



Acer Aspire E1-532-2616 Battery Replacement

This guide will help users remove and replace the battery of the Acer Aspire E1-532-2616.

Written By: John Alberts



INTRODUCTION

This guide will help users remove and replace the battery of the Acer Aspire E1-532-2616.

TOOLS:

- [Spudger \(1\)](#)

Step 1 — Battery



- Insert a small, skinny tool, such as a spudger, into the displayed hole.

Step 2



- While pressing a spudger or another tool into the hole, grip the battery pack (the rectangular part on the side) and pull it off.

To reassemble your device, follow these instructions in reverse order.