



Acer Aspire E1-571 - DVD Drive Replacement

Acer Aspire E1-571 - DVD Drive Replacement

Written By: ZFix



INTRODUCTION

How to replace DVD optical drive.

[Please SUBSCRIBE to my channel ツ](#)

[video: <http://youtu.be/SZKOM87Ho78>]



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — DVD Drive



- Unscrew one screw M 2.5x8.0 to free the DVD drive

Step 2

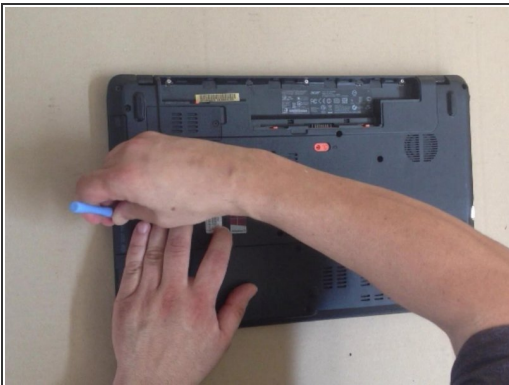

- Use plastic tool to eject the DVD drive.
- **Did you do it successfully?**
- .

★ [Please SUBSCRIBE to my channel ツ](#)

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-18 10:09:31 AM (MST).

