



Acer Aspire E1-572G Keyboard Replacement

This guide will show you how to replace a broken keyboard.

Written By: Sander Degryse



INTRODUCTION

This guide will show you how to replace a broken keyboard.



TOOLS:


- [Essential Electronics Toolkit](#) (1)
-

Step 1 — Keyboard




- Press and slide battery-lock button to remove the battery.

Step 2

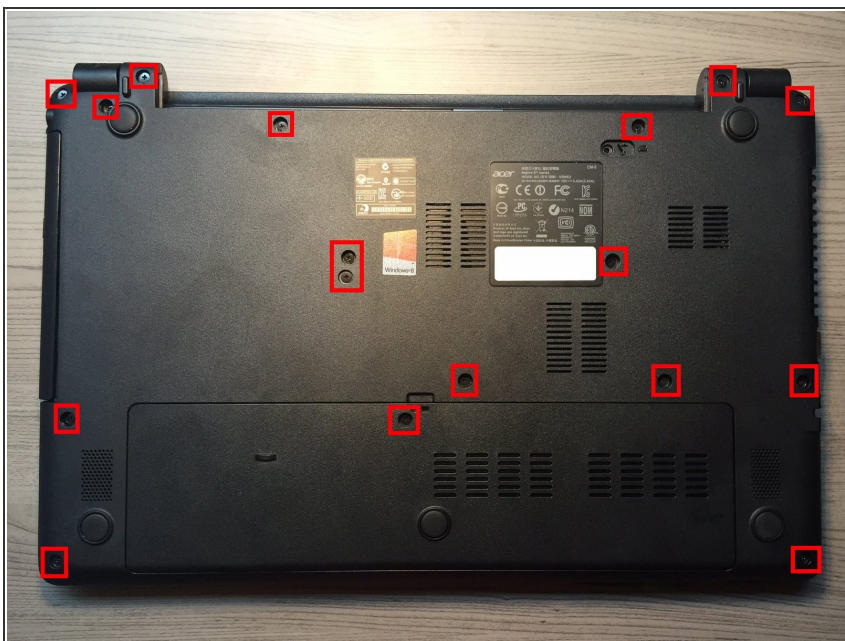


- Remove 17x Philips screws

Step 3

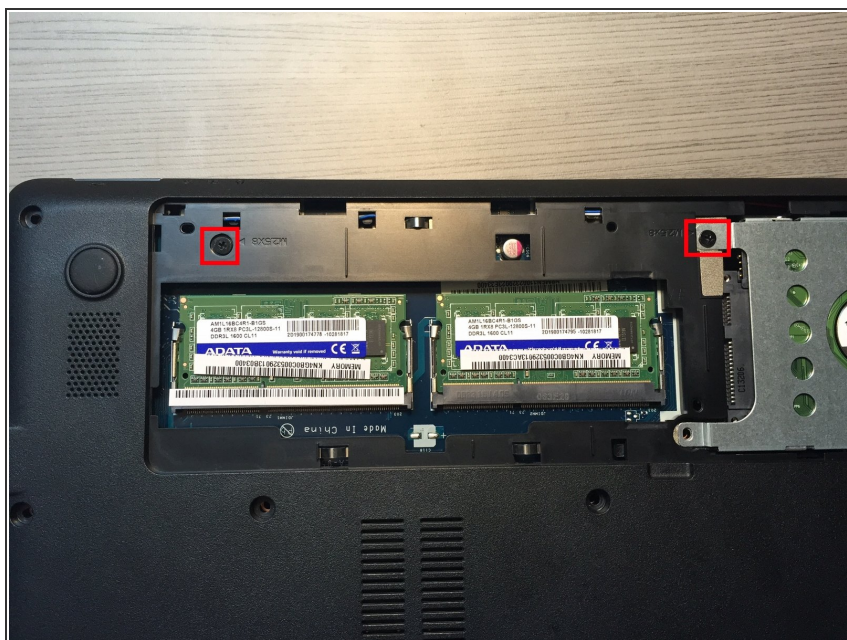

- Remove the plastic cover
- Remove 2x Philips screws


Step 4

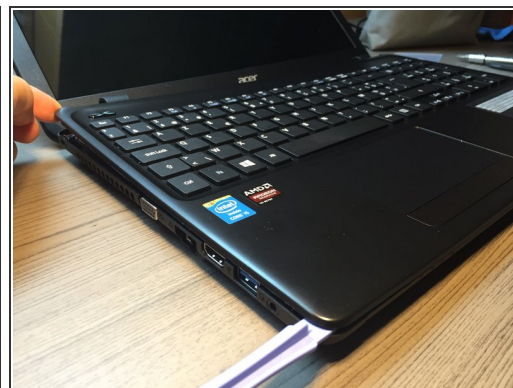

- Start opening the top starting at the side of the screen


⚠ Use plastic tools to avoid damaging the cover.

Step 5

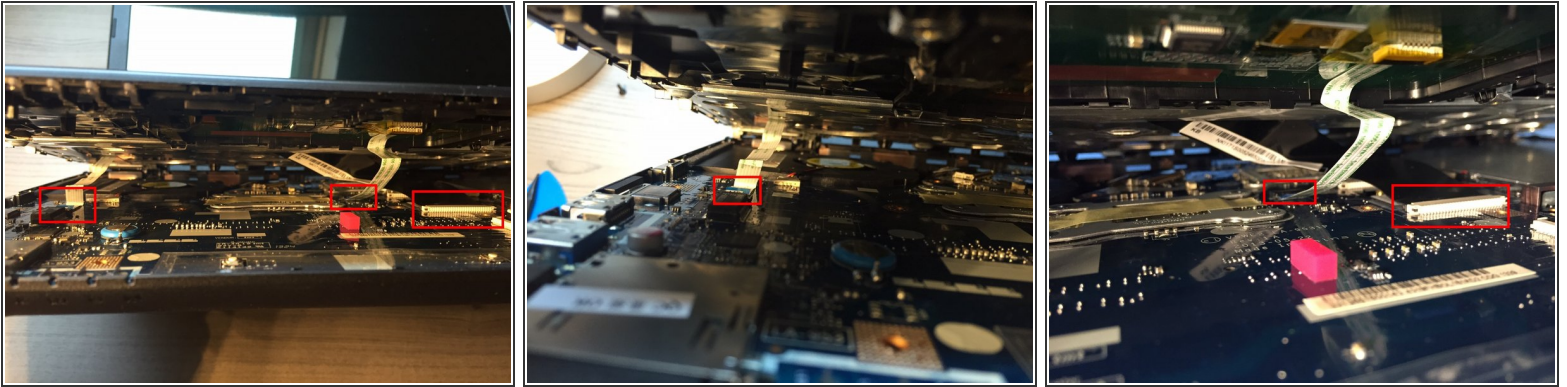


- Disconnect 3x flex cables

Step 6

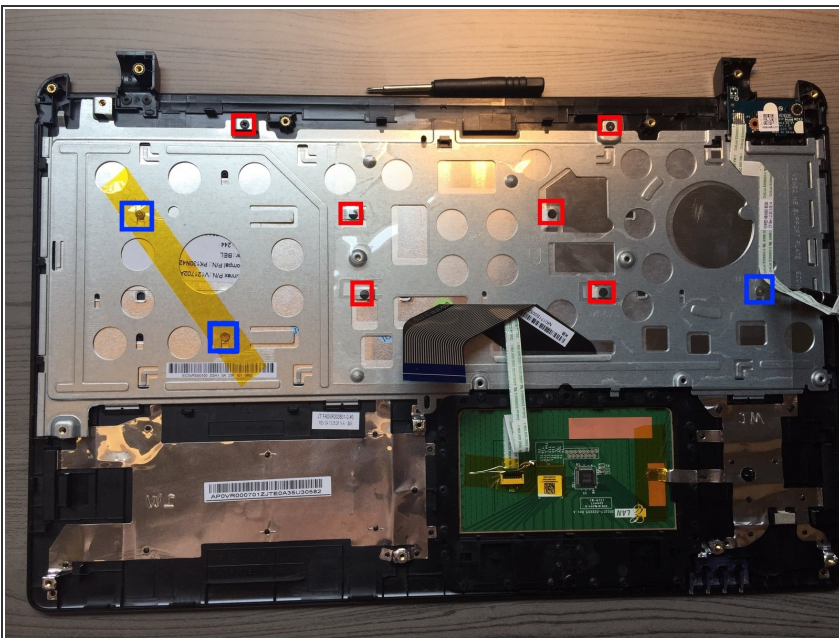


- Remove 6x Philips screws
- ⓘ The 2 Philips screws at the top are different from the other 4 (thicker)
- Remove 3x small (silver) Philips screws

Step 7

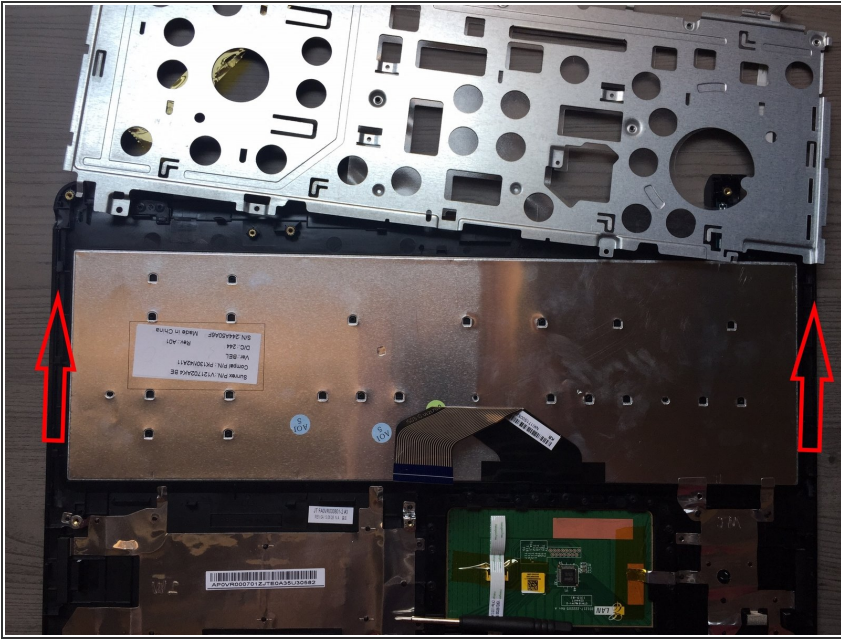

- Remove the metal plate by sliding it up and then flipping it over
- ⚠ Be careful to not damage the flex cable attached to the metal plate.

Step 8

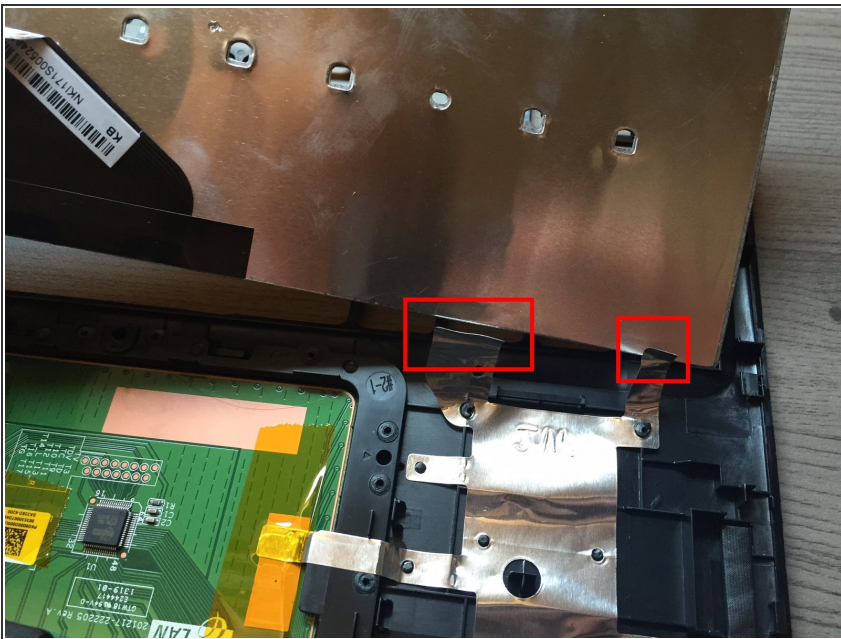

- Disconnect 2x aluminium grounding
- Lift the keyboard out

To reassemble your device, follow these instructions in reverse order.