



# Acer Aspire E3-111-C0WA Battery Replacement

## How to replace the battery in your Acer Aspire E3-111-C0WA laptop.

Written By: Jackson Li




## INTRODUCTION

After determining that your laptop's battery needs to be replaced, follow this replacement guide to remove your old battery and put in a new one.

### **TOOLS:**

- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [Anti-Static Wrist Strap](#) (1)

## Step 1 — Battery

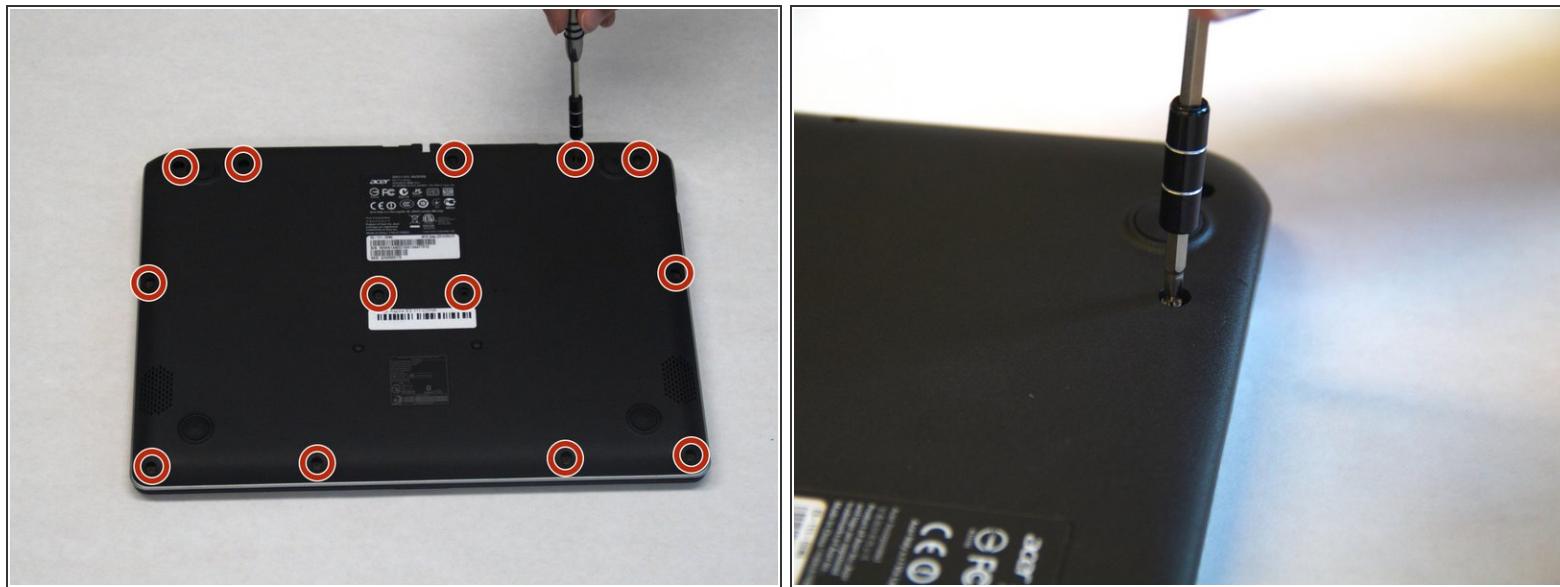

- Remove the 13 indicated screws (6.2 mm) using a Phillips #1 screwdriver.

## Step 2




- Insert your plastic opening tool between the bottom case and the rest of the laptop.
- Using the plastic opening tool as a lever, apply downward pressure on the tool to lift the bottom up.
- Make your way around the case with the tool, every so often applying downward pressure to lift the bottom up.
- Lift the bottom off the laptop.

## Step 3




- Make sure you have properly grounded yourself to avoid potentially damaging any internal components by wearing the anti-static wrist strap and attaching the clip end to metal.
- Press and hold the battery discharge button on the motherboard for 5 seconds to drain the battery.

## Step 4

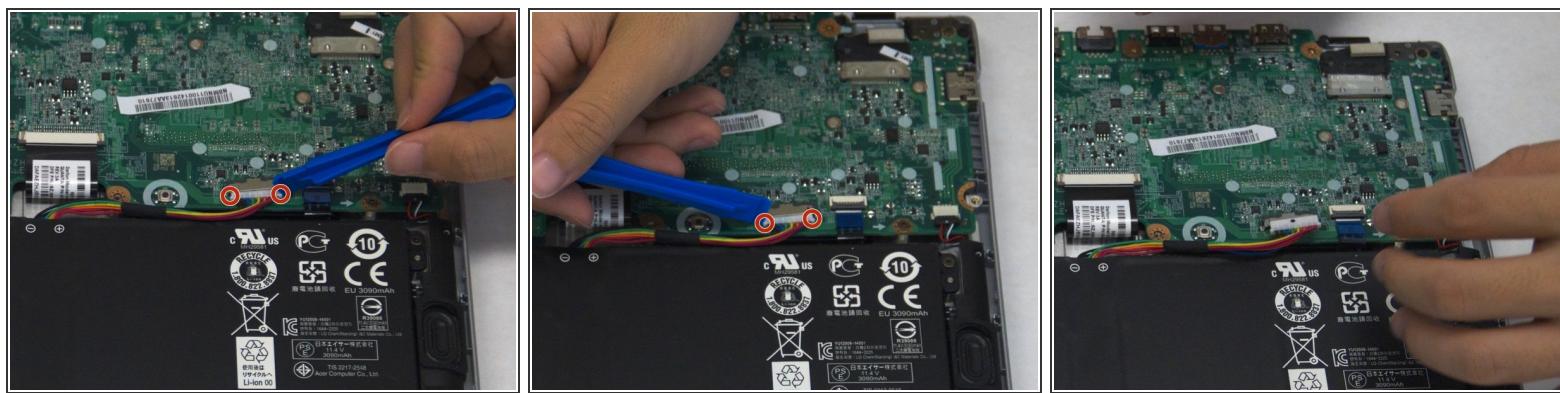

- Dislodge the battery's connector to the motherboard by using the plastic opening tool as a lever on the two small plastic tabs that stick out on either side of the connector.

## Step 5

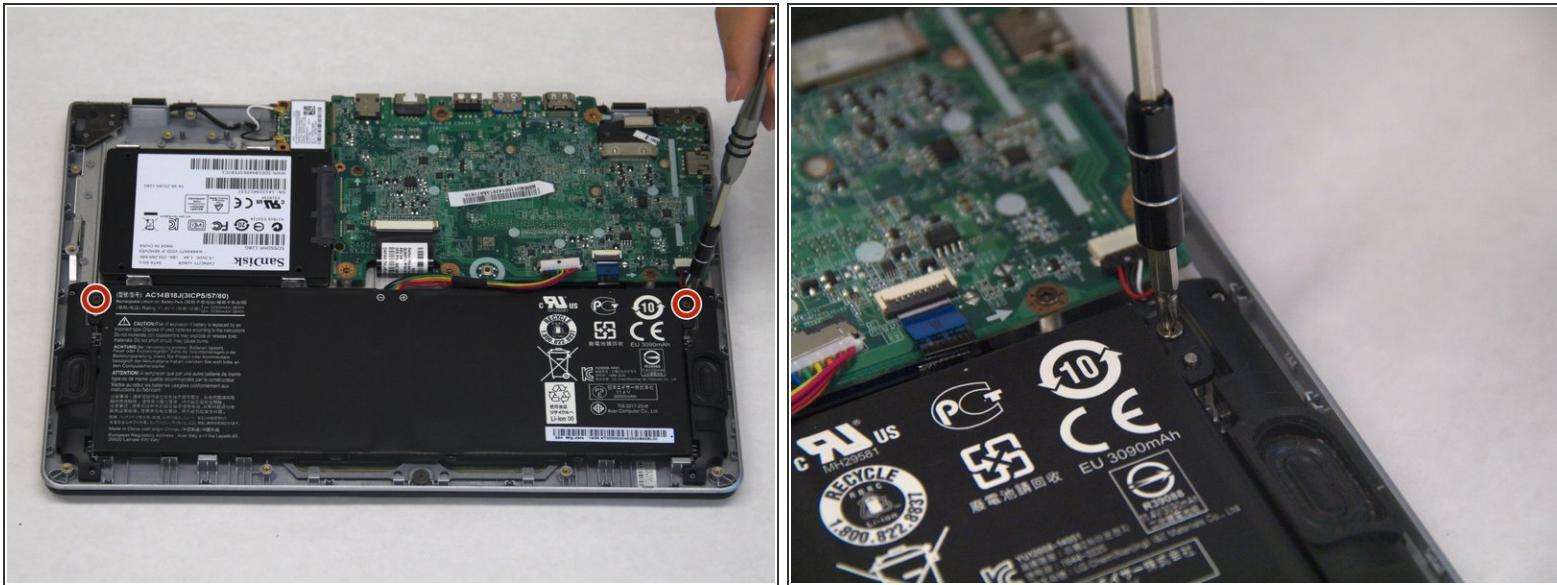

- Unscrew the two 6.2 mm Phillips #1 head screws on either side of the battery as indicated.

## Step 6



- Lift the battery up and off the rest of the laptop.

To reassemble your device, follow these instructions in reverse order.