



Acer Aspire E5-511p-C6US Battery Replacement

Over time the battery may lose its ability to hold a charge so replacing will help with time between charges

Written By: Aaron



This document was generated on 2019-12-28 03:29:36 PM (MST).

INTRODUCTION

Use this guide to replace the battery on your Acer Aspire laptop.

TOOLS:

- [iFixit Opening Tools](#) (1)

Step 1 — Battery



- On the back of the laptop, there is a sliding lock. Push the slider and the battery will unlock

Step 2



- Pull battery to remove.

To reassemble your device, follow these instructions in reverse order.