



Acer Aspire E5-511p-C6US Fan Replacement

Over time the fan can break

Written By: Aaron







TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Fan

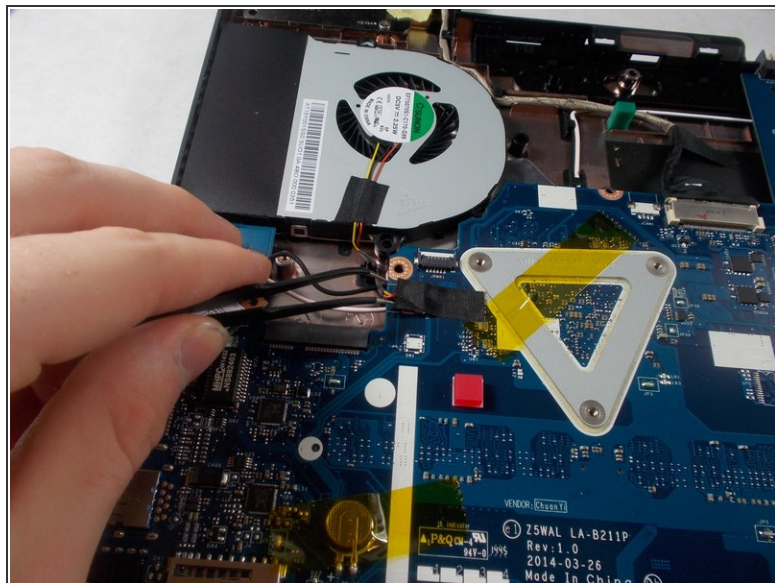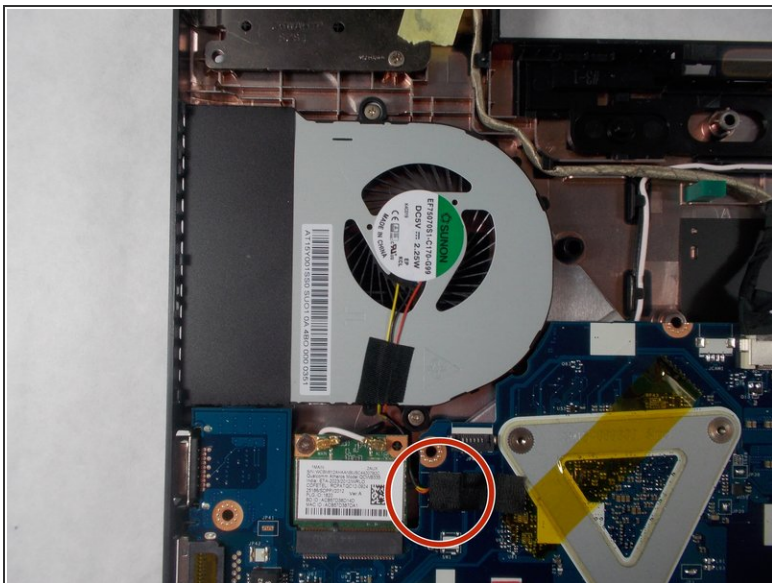


- Disconnect the cord from the fan

Step 2

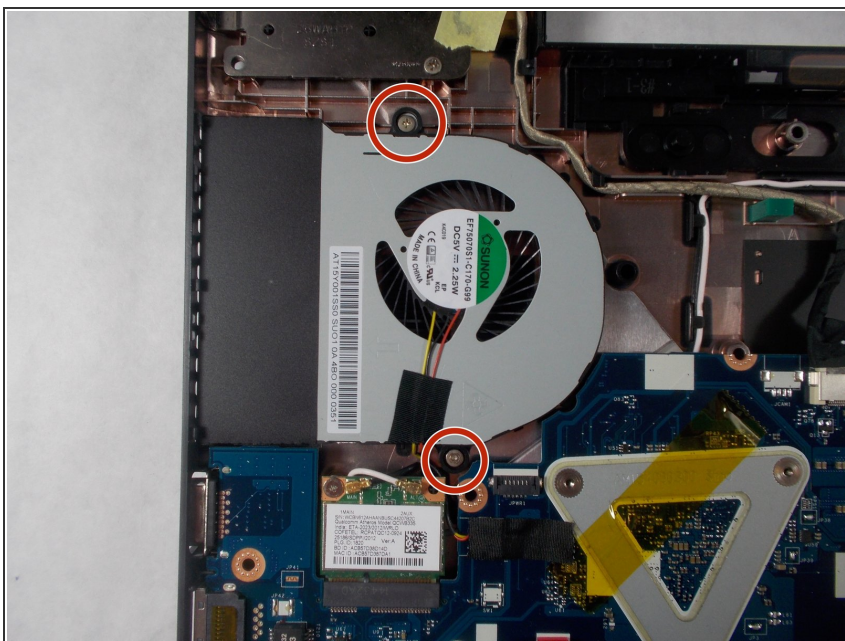

- Remove the 2 #1 Phillips screws

Step 3

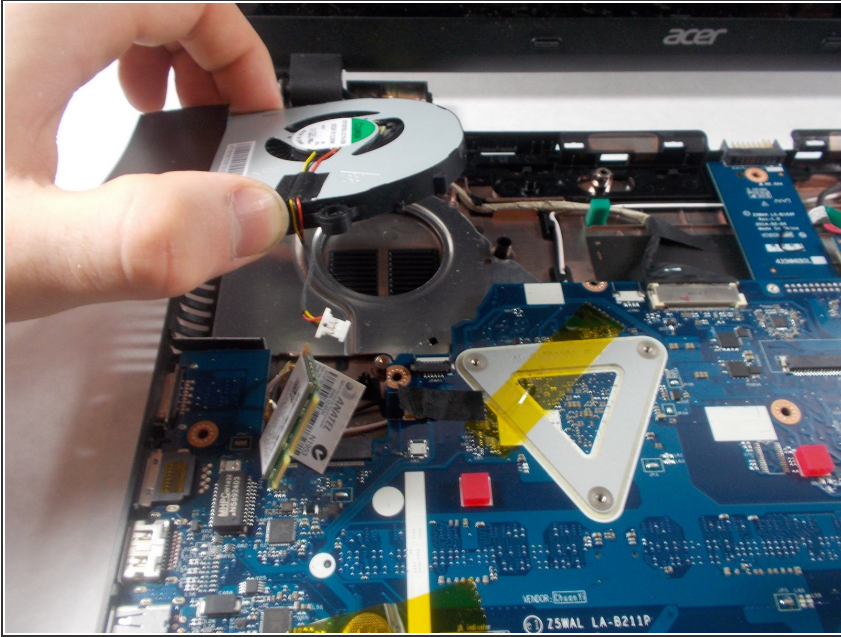

- now the fan can be pulled from the laptop

To reassemble your device, follow these instructions in reverse order.